



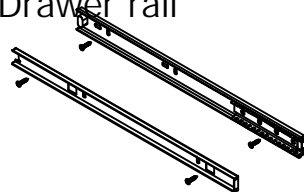
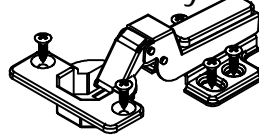

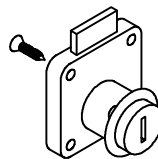
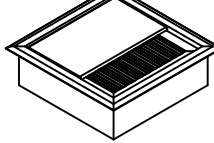
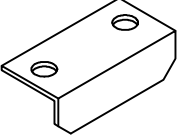



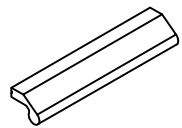
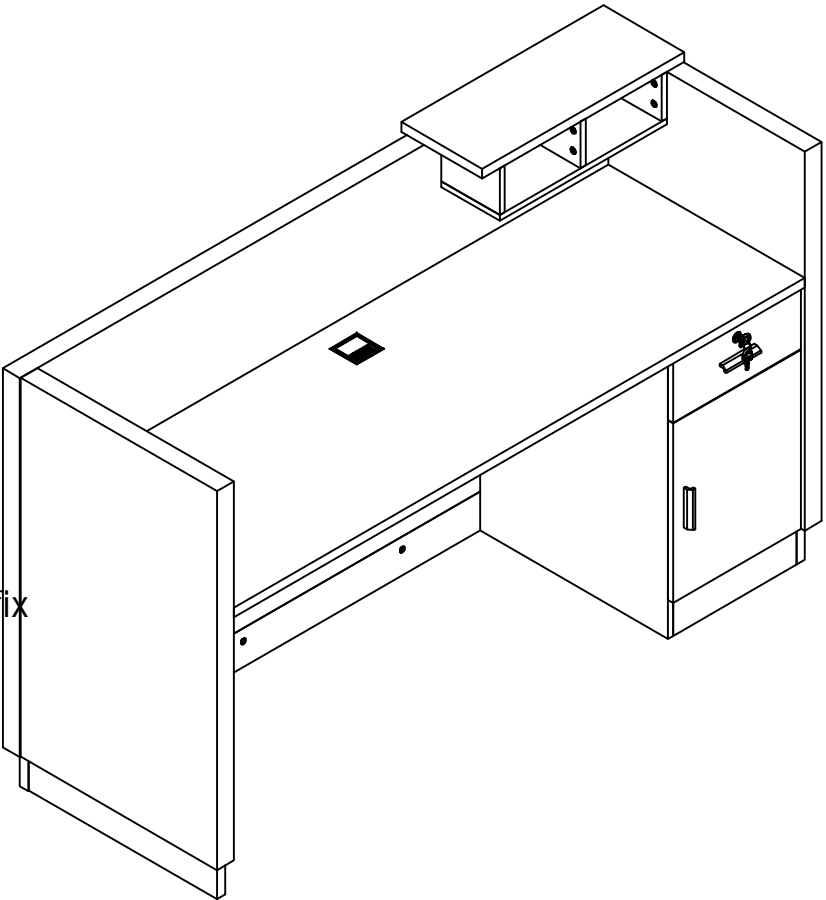
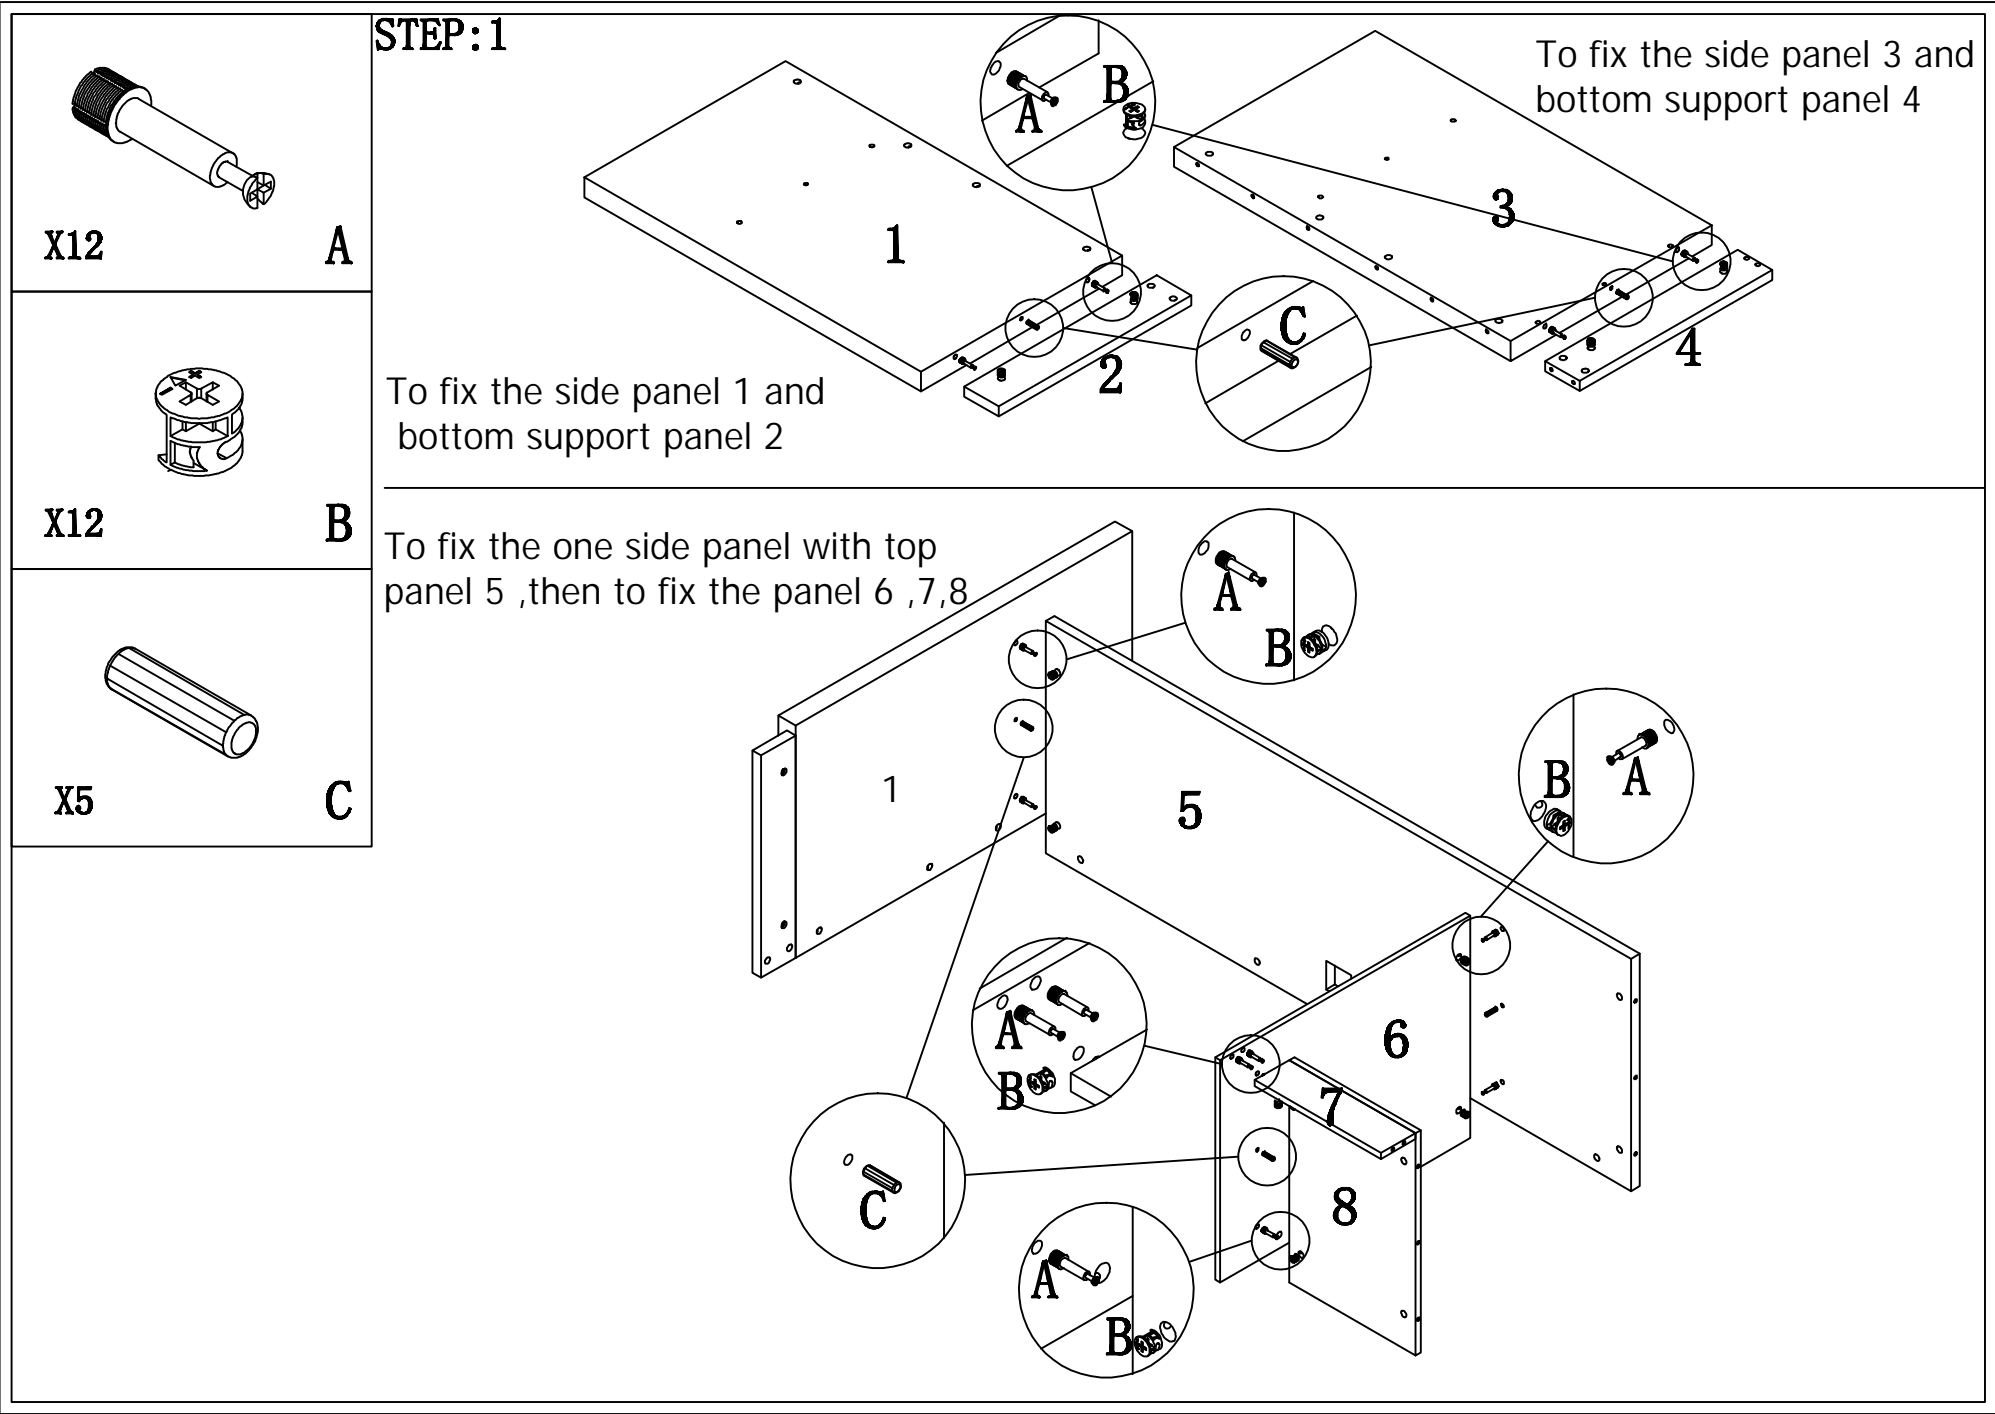


<div>Minifix Screw</div> <div></div> <div>X59A</div>	<div>Screw 4*30</div> <div></div> <div>X4F</div>	<div>Handle screw M4*18</div> <div></div> <div>X4Q</div>
<div>Minifix</div> <div></div> <div>X59B</div>	<div>Drawer rail</div> <div></div> <div>X1G</div>	<div>Whole overlay hinge</div> <div></div> <div>X2L</div>
<div>Wood Minifix</div> <div></div> <div>X16C</div>	<div>Lock</div> <div></div> <div>X1H</div>	<div>Wire box</div> <div></div> <div>X1M</div>
<div>Lock metal fix</div> <div></div> <div>X1D</div>	<div>Screw 4*20</div> <div></div> <div>X4I</div>	<div>Corner bracket metal fix</div> <div></div> <div>X10N</div>
<div>Screw 3.5*14</div> <div></div> <div>X64E</div>	<div>Handle</div> <div></div> <div>X2J</div>	

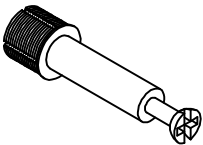


(1800X650X1100)




STEP:2

To fix with another side panel

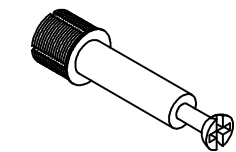


X6

A




X6


B

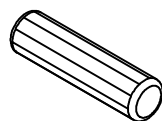

X2


C

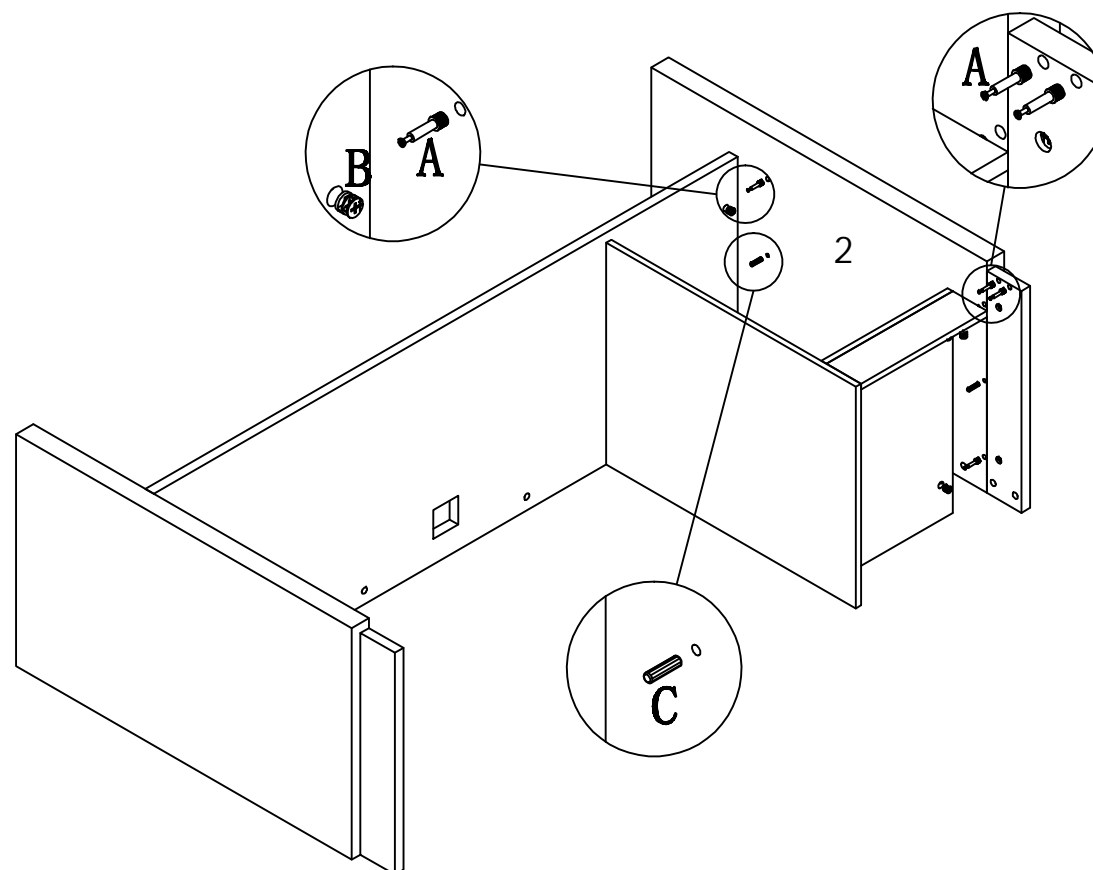

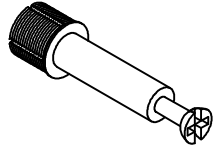


X4

A



X4

B

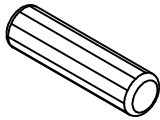



X2












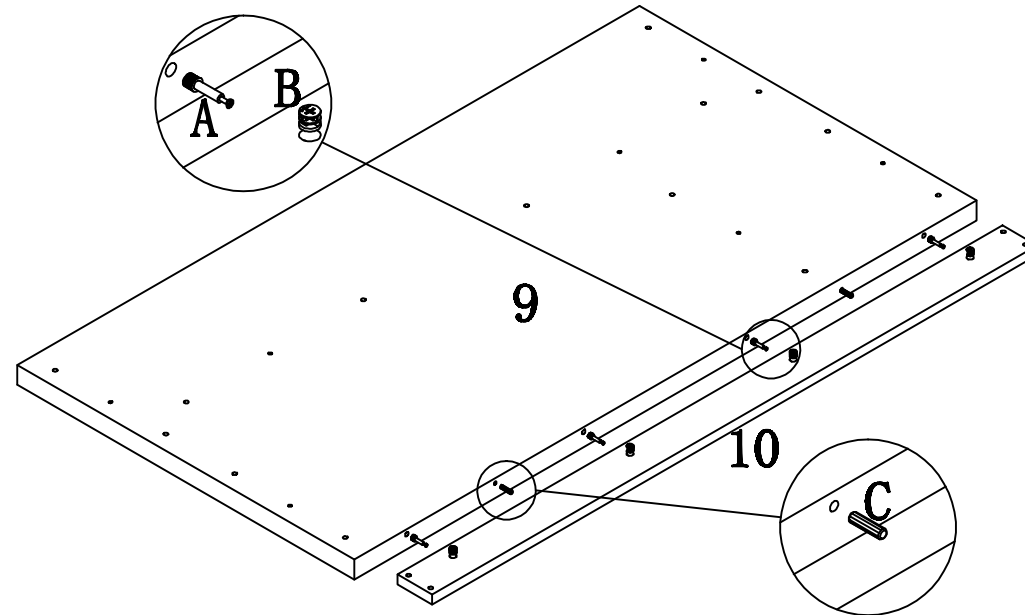



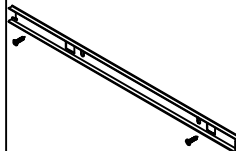
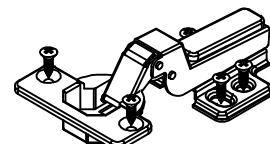
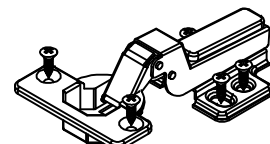
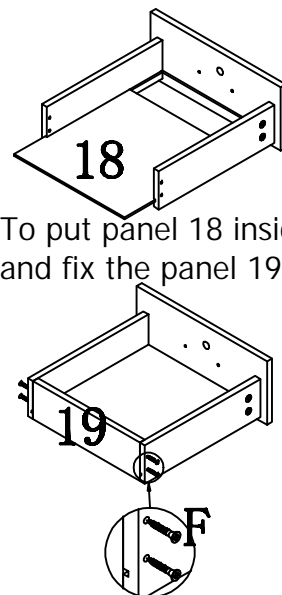
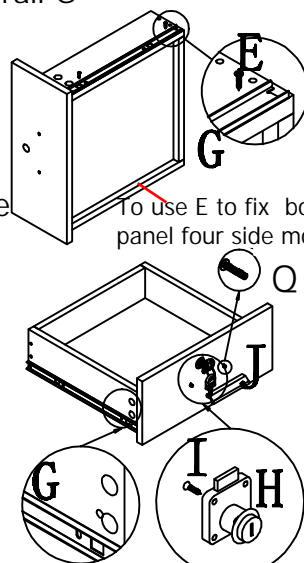
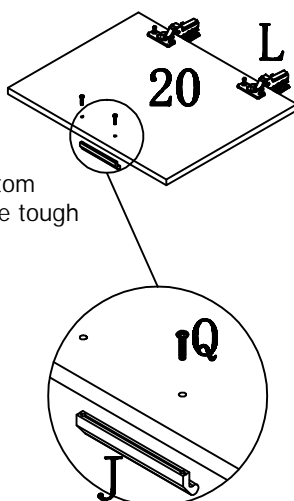
C




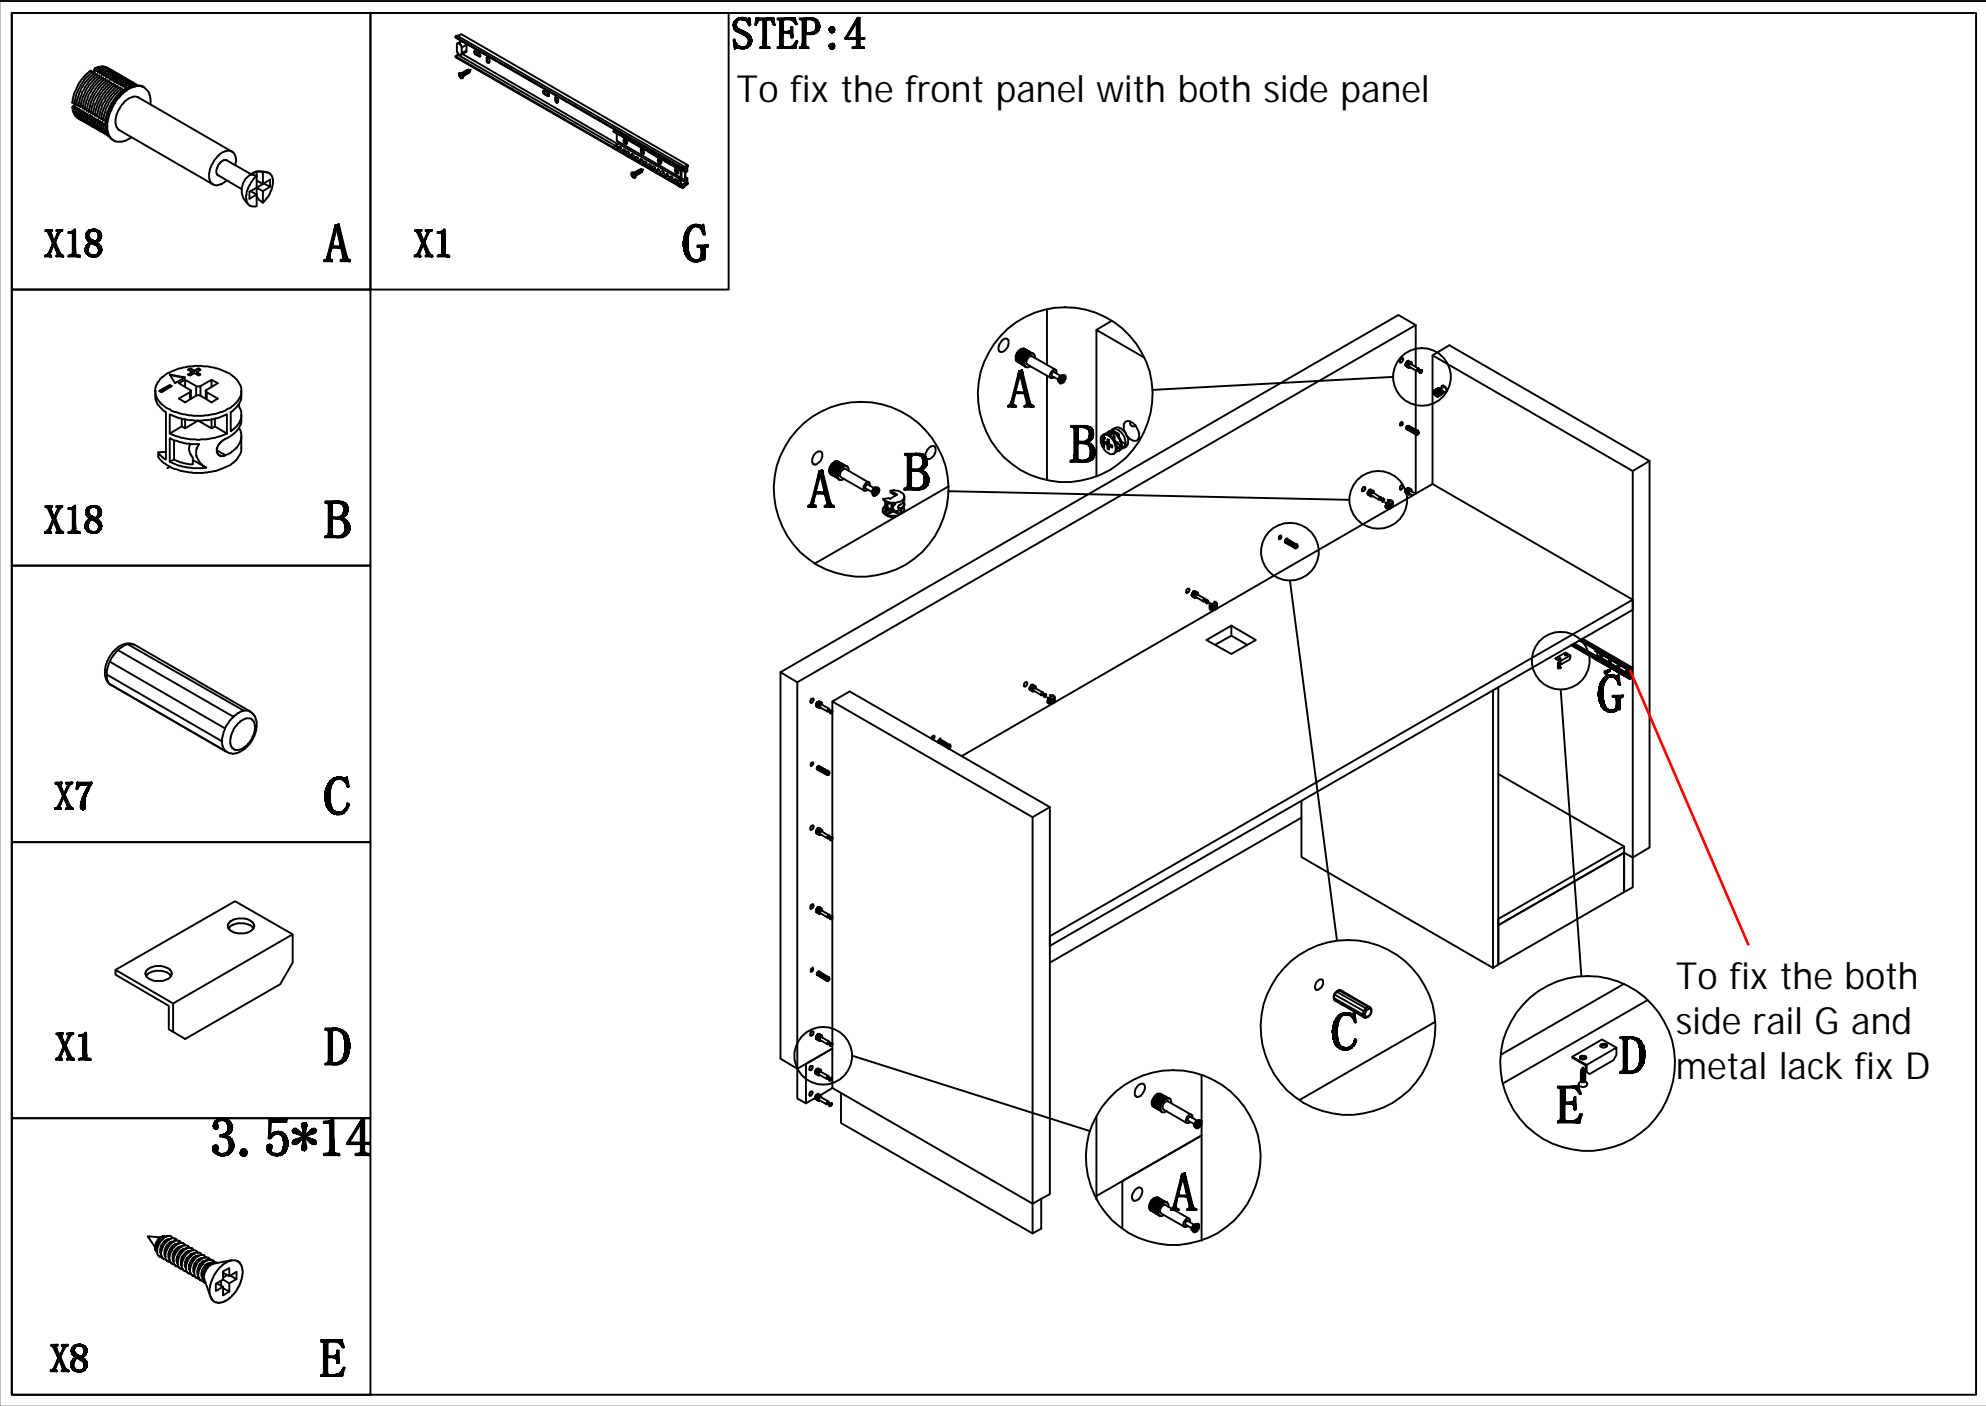
STEP:3

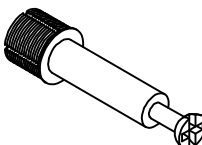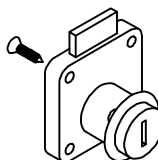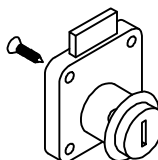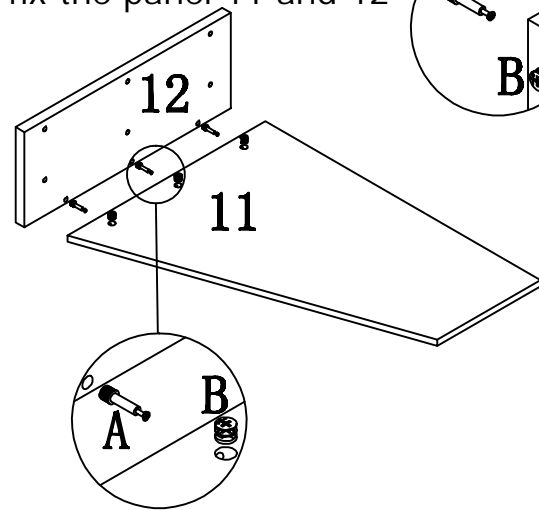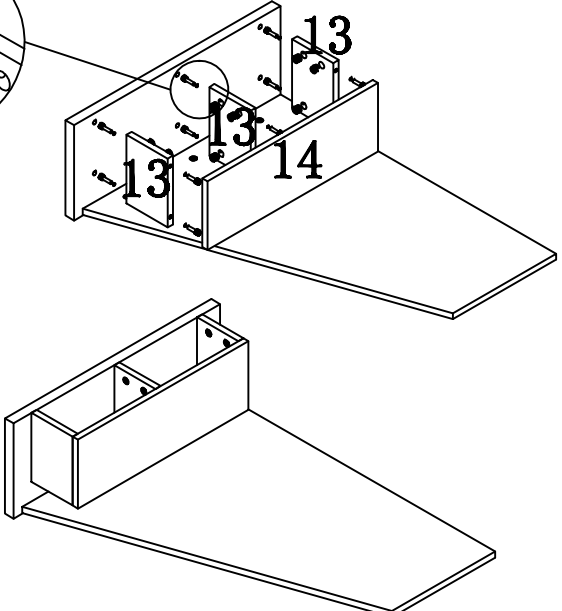To fix the front panel 9 with bottom support panel 10



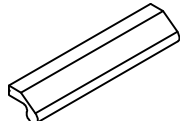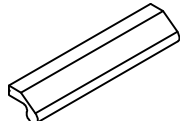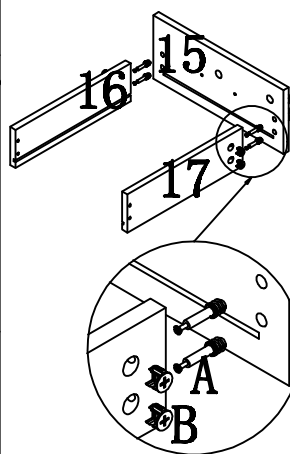

 X19	 A	 H	STEP:5 To fix the panel 11 and 12  Then to fix the panel 13 and 14 		
 X19	 X4	 I			
 X16	 X2	 J	 To fix the panel 15,16,17		
 X4	 X4	 Q			
 X1	 X2	 L	 To put panel 18 inside and fix the panel 19	 To fix the both side rail G To use E to fix bottom panel four side more tough	 To fix the hinge L and handle J on door, then fix in cabinet

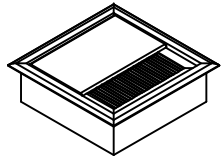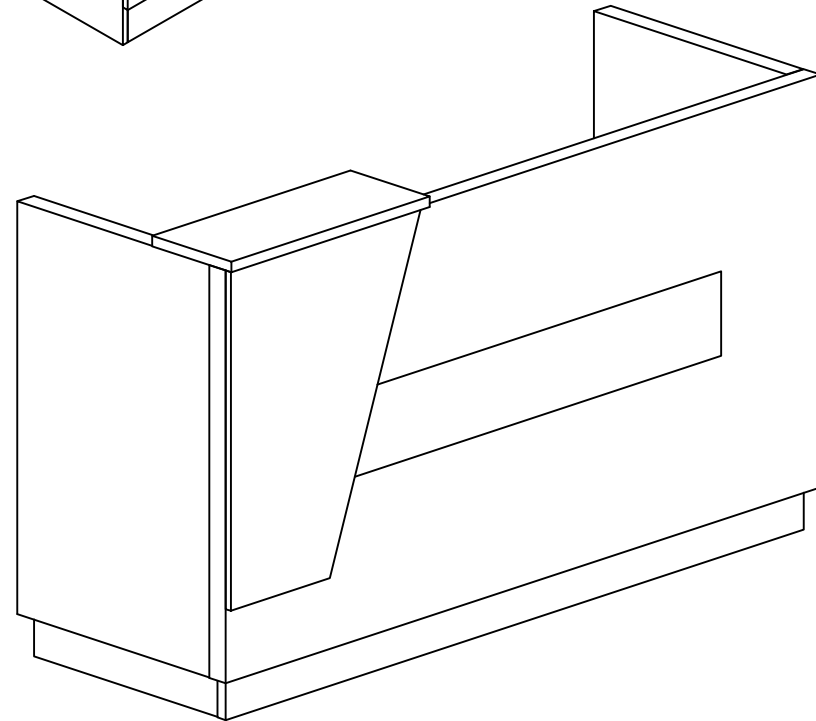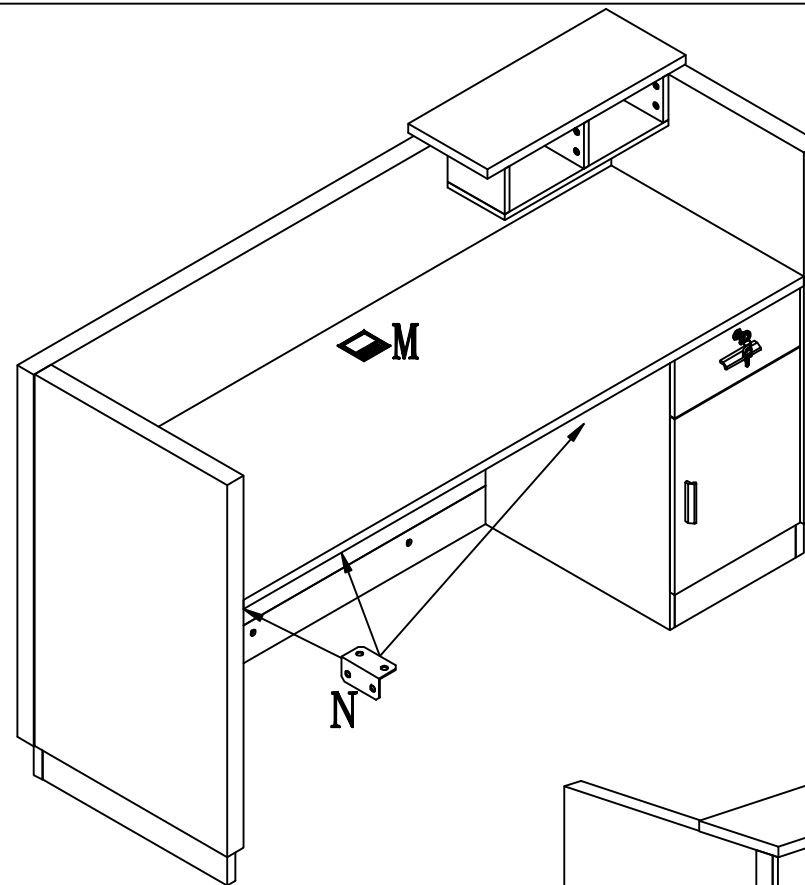STEP:6**FINISH****X1****M****3.5*14****X40****E****X10****N**

To use the corner bracket metal fix N to fix under table top panel three side more stable