

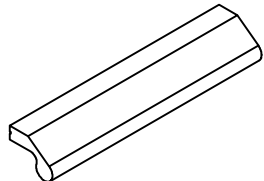
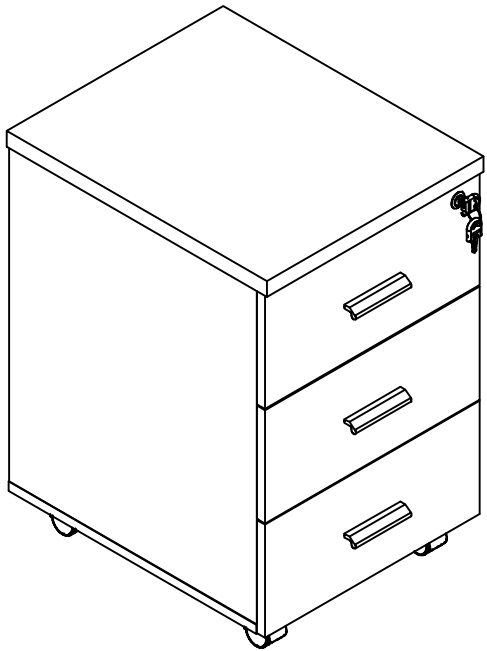

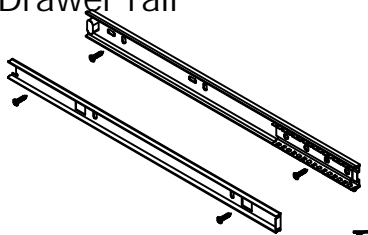



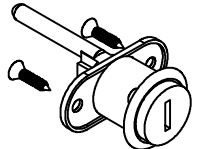
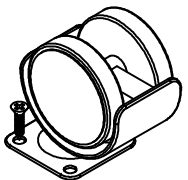
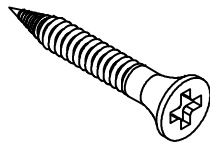
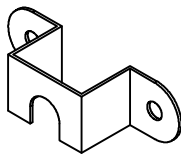
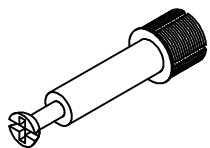



246-000011

Minifix Screw  X24 A	Screw 3.5*14  X62 E	Handle  X3 I	 (400X480X630)
Minifix  X24 B	Drawer rail  X3 F	Handle screw M*18  X6 J	
Wood Minifix  X6 C	Lock bar  X1 G	Lock  X1 K	
Wheel  X4 D	Screw 4*30  X12 H	Lock metal fix  X3 L	

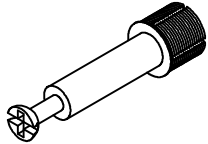


X4

A



X4

B




X2

C


STEP:1

To fix the panel 1 ,2,3

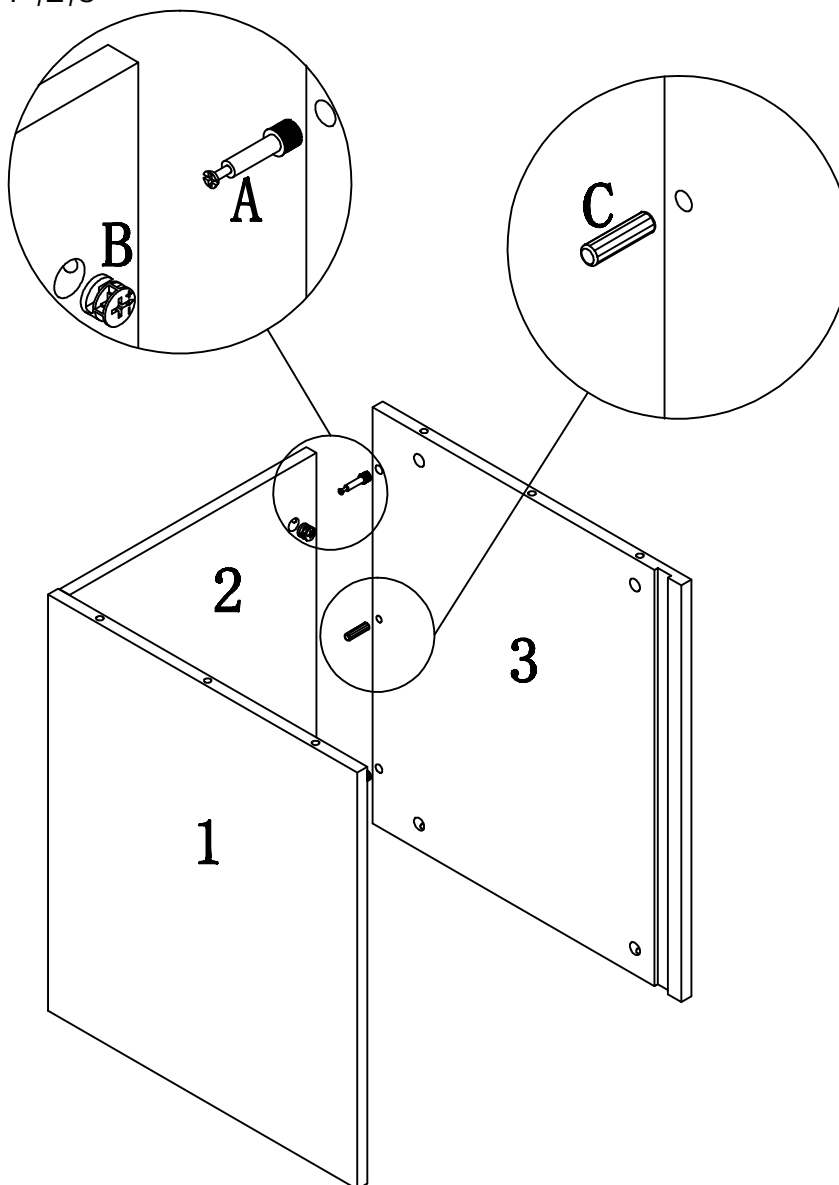


STEP:2

To fix the panel 4 and panel 5

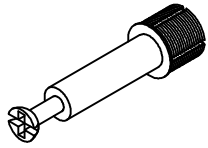


X8

A




X8

B




X4

C

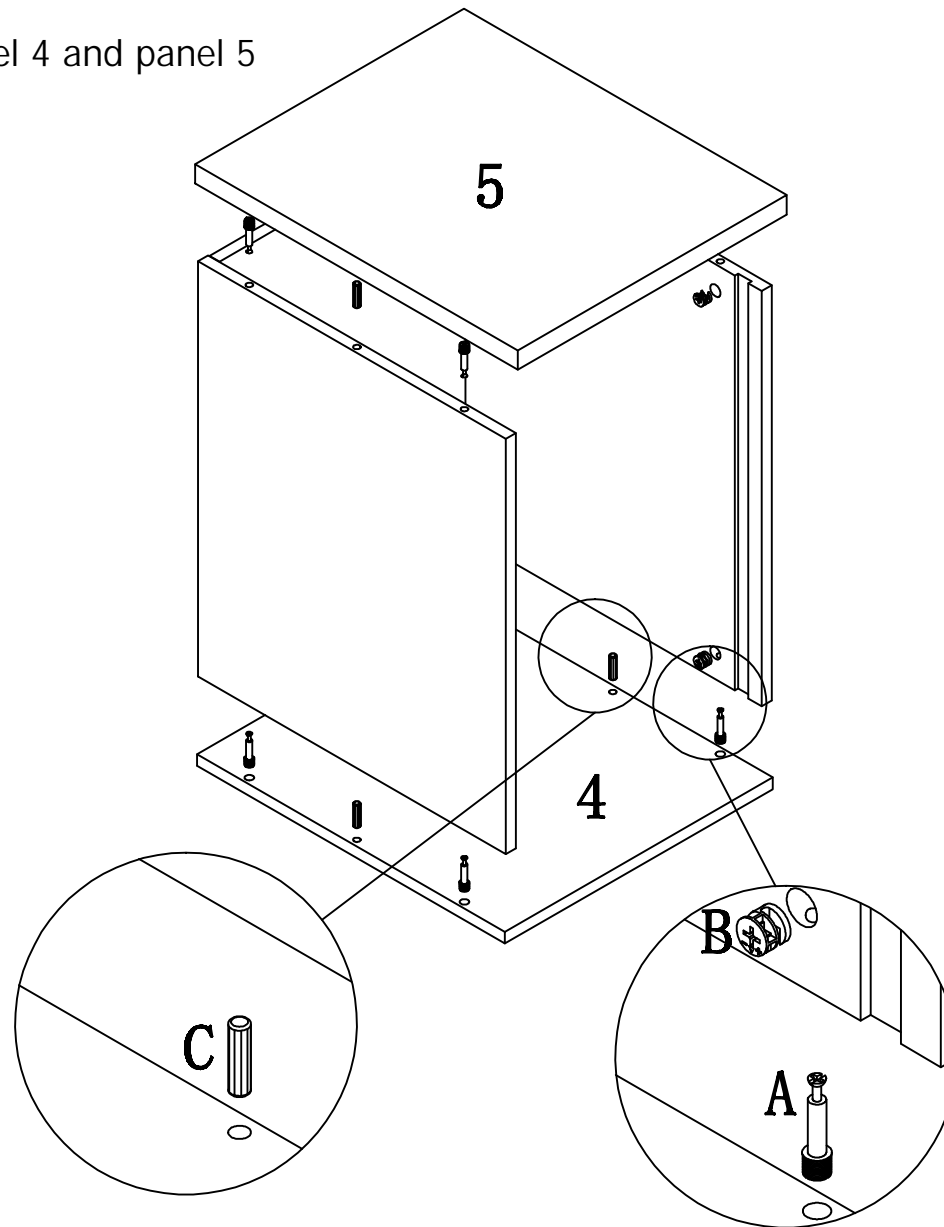

STEP:3


To fix the wheels D on bottom panel 4

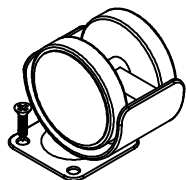

X4


D

3.5*14




X16

E

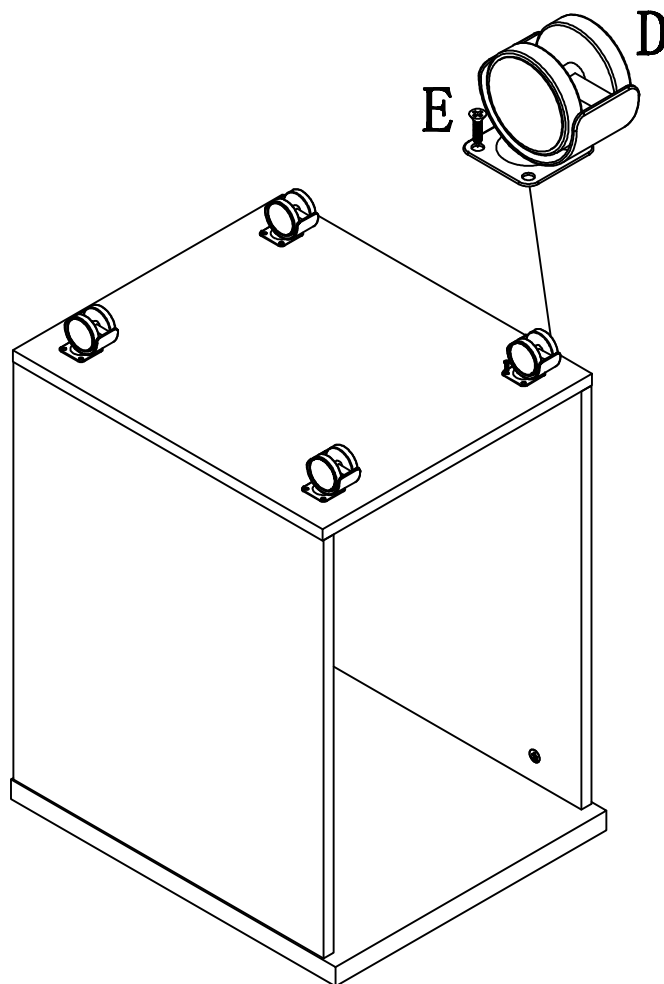


3. 5*14 STEP:4

To fix the lock bar G and fix the drawer rail F on both side panel




X26

E

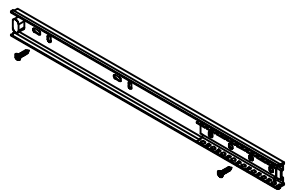



X3


F



X1


G

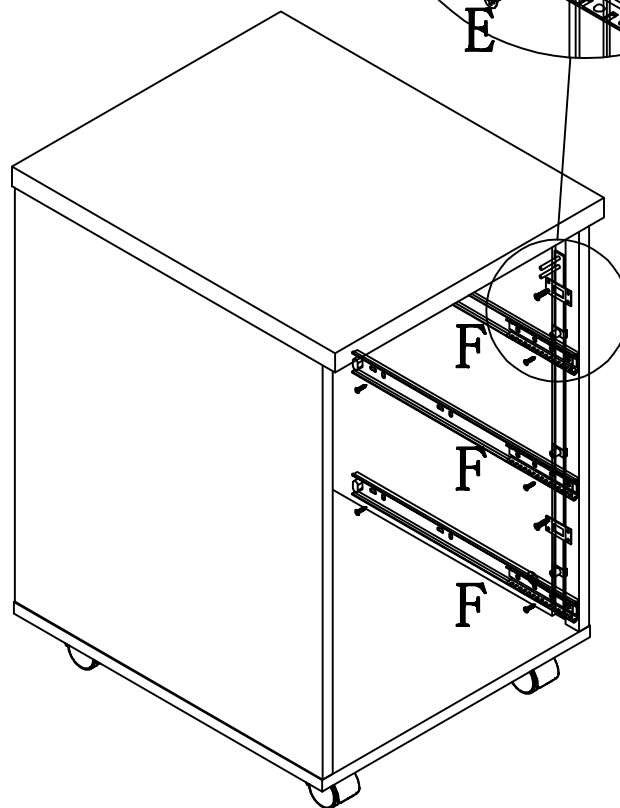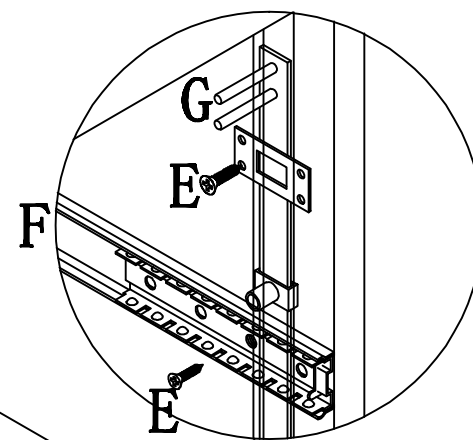

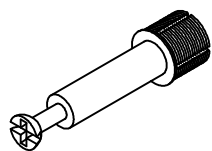


X12

A



X12

B

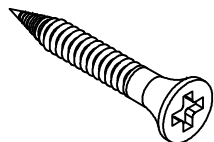


X12

H


4*30

STEP:5

To fix the panel 6,7,8

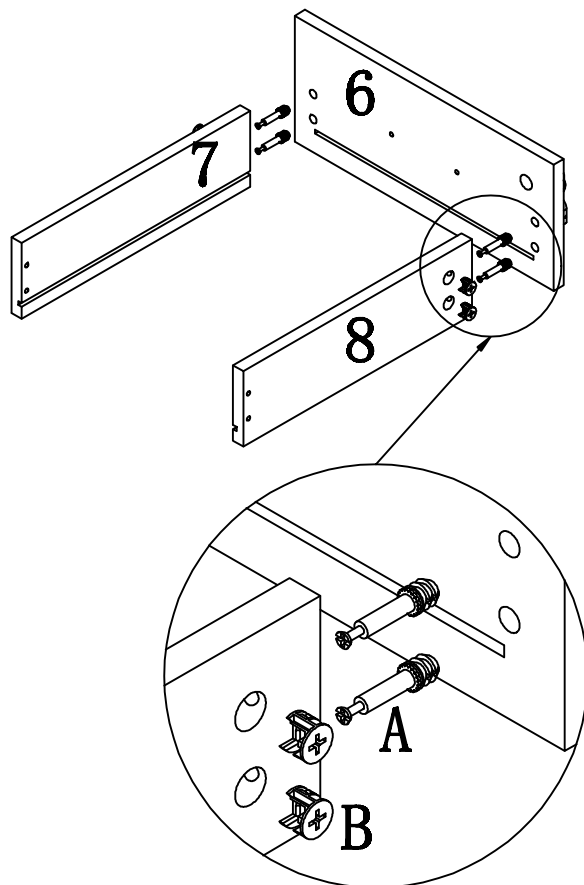

To put the bottom panel 9 inside

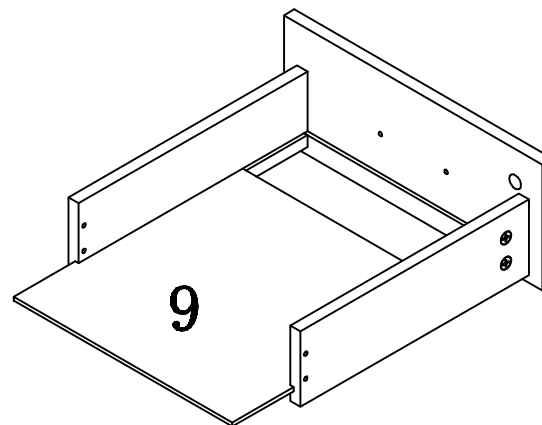

To fix the panel 10

