


246-000008


Minifix Screw

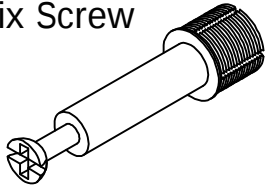

X12

A


Minifix

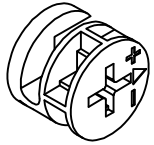

X12

B


Wood Minifix

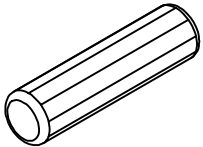

X4


C

Wire box

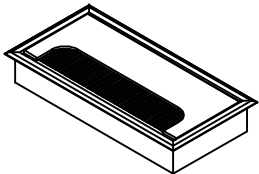


X2

D

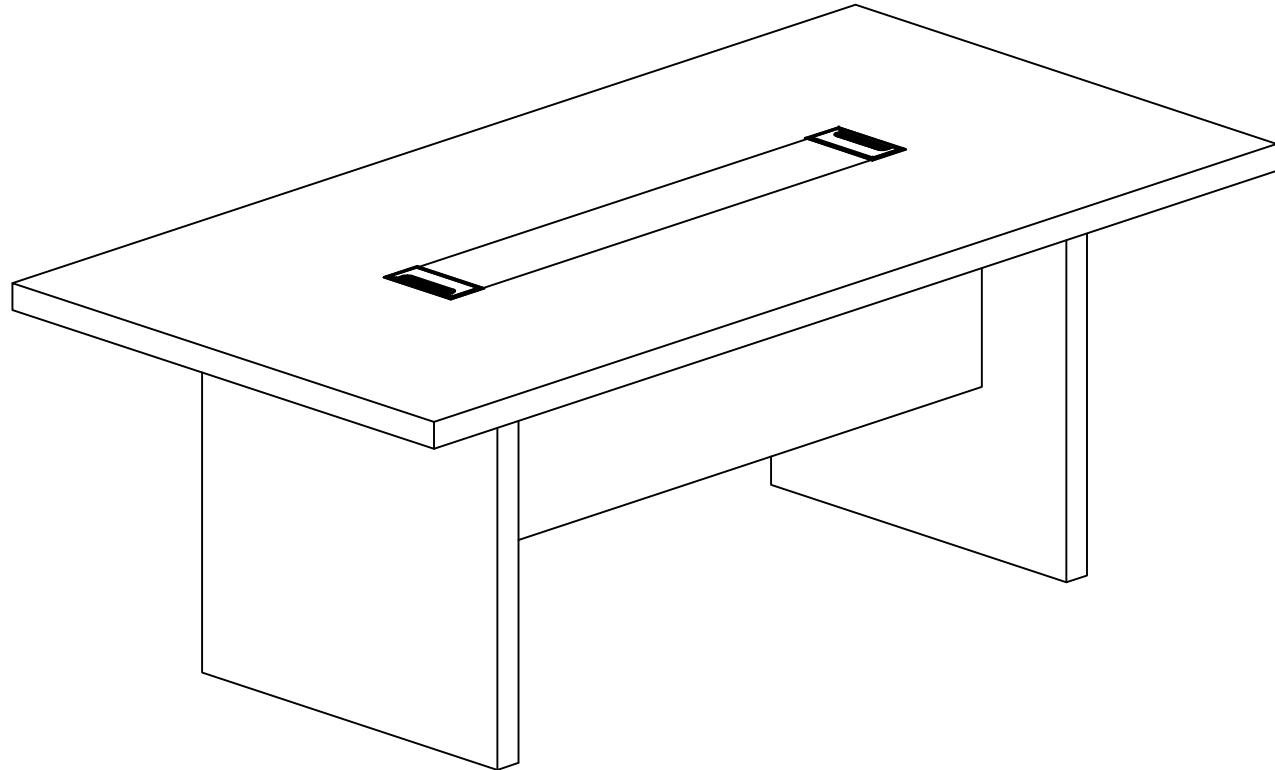


(2400X1200X760)

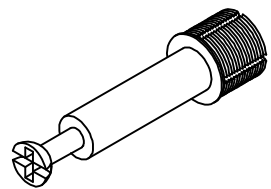


X8

A

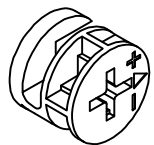

X8

B

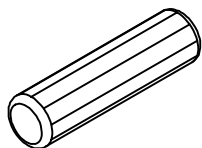


X4

C


STEP:1

To fix the table leg panels (1) and middle panels (2)

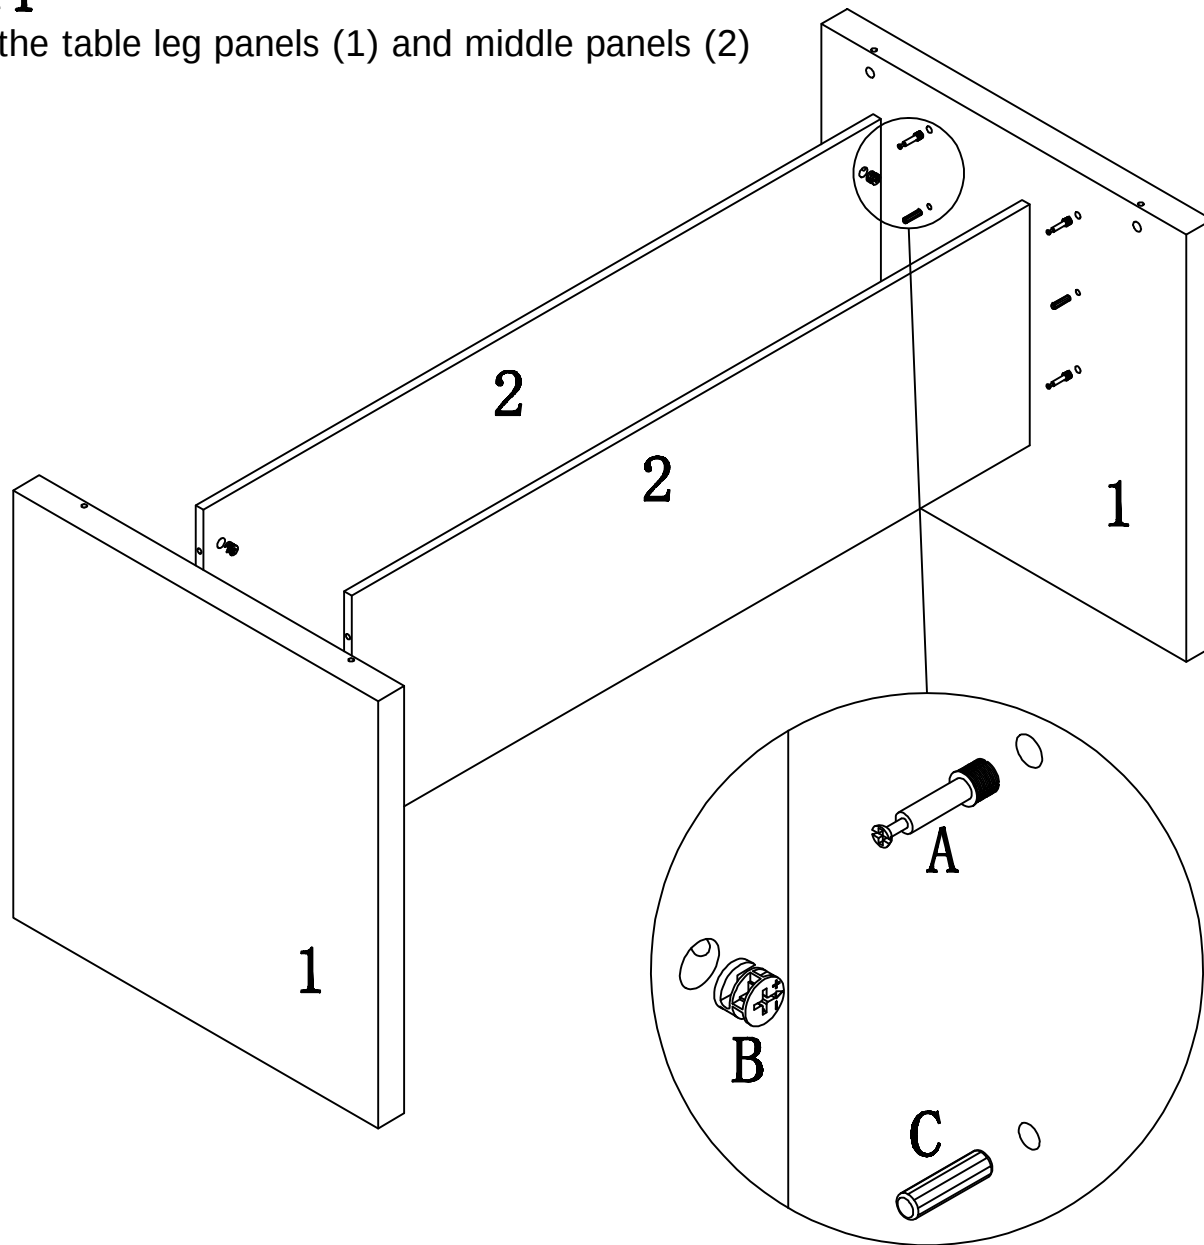


STEP:2

To fix the minifix screw A on table top panel (3)

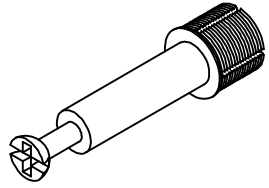



X4

A

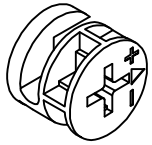

X4


B

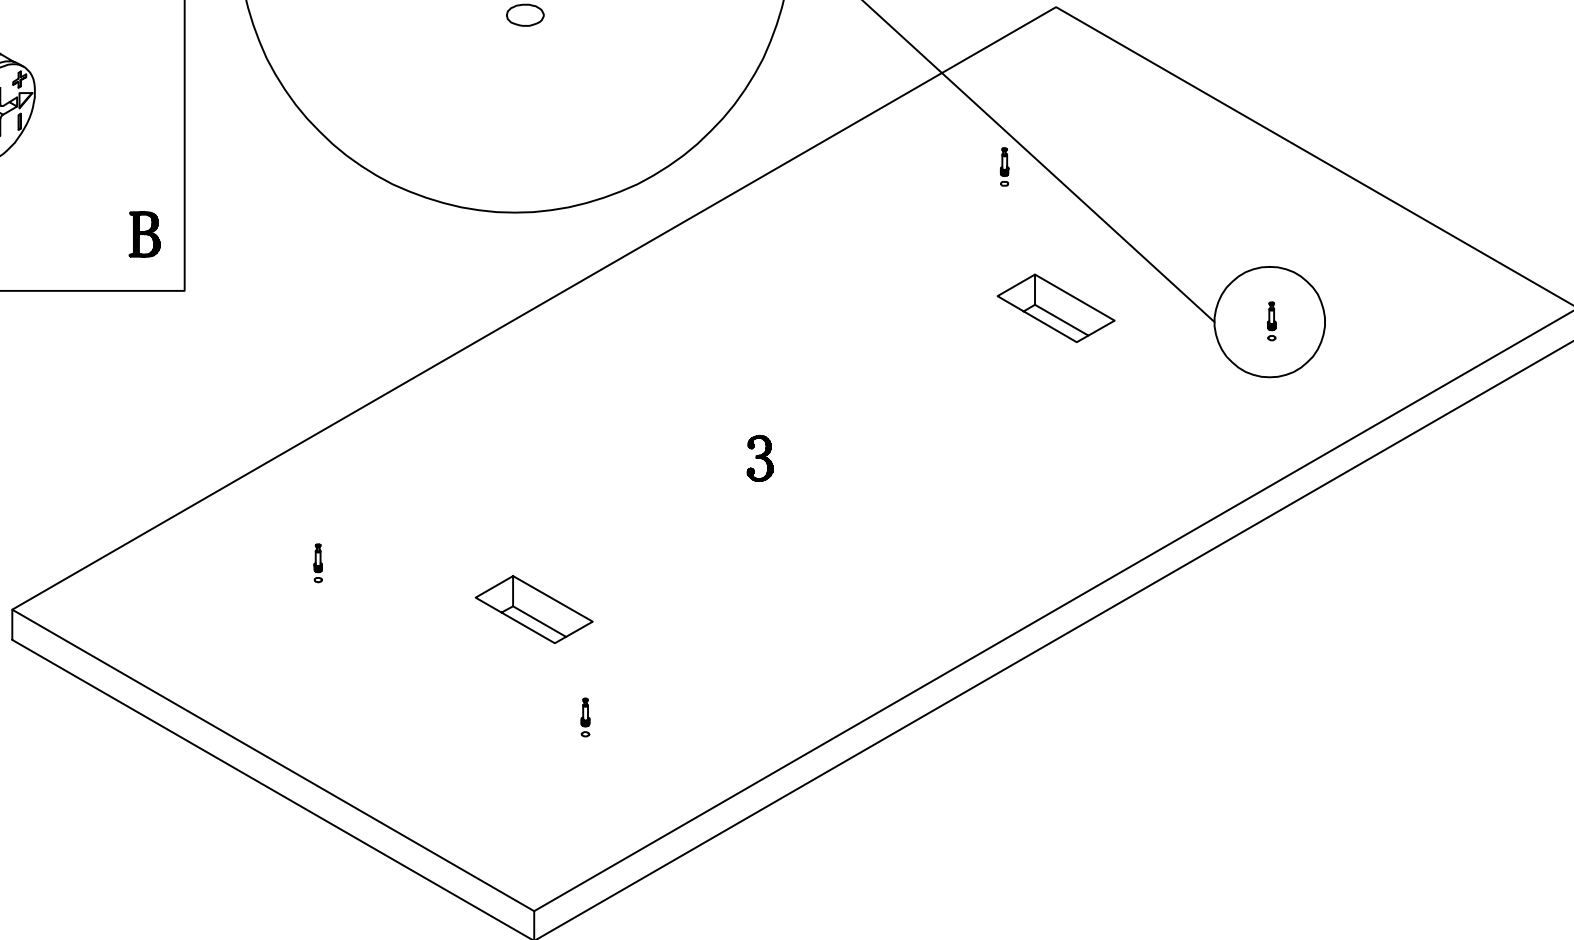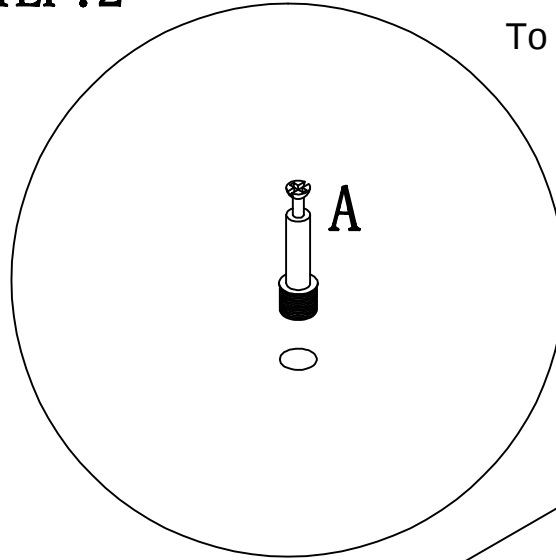

STEP:3


To fix table top panel (3) and table leg panels (1)

FINISH

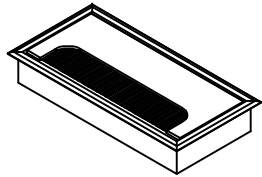

X2

D

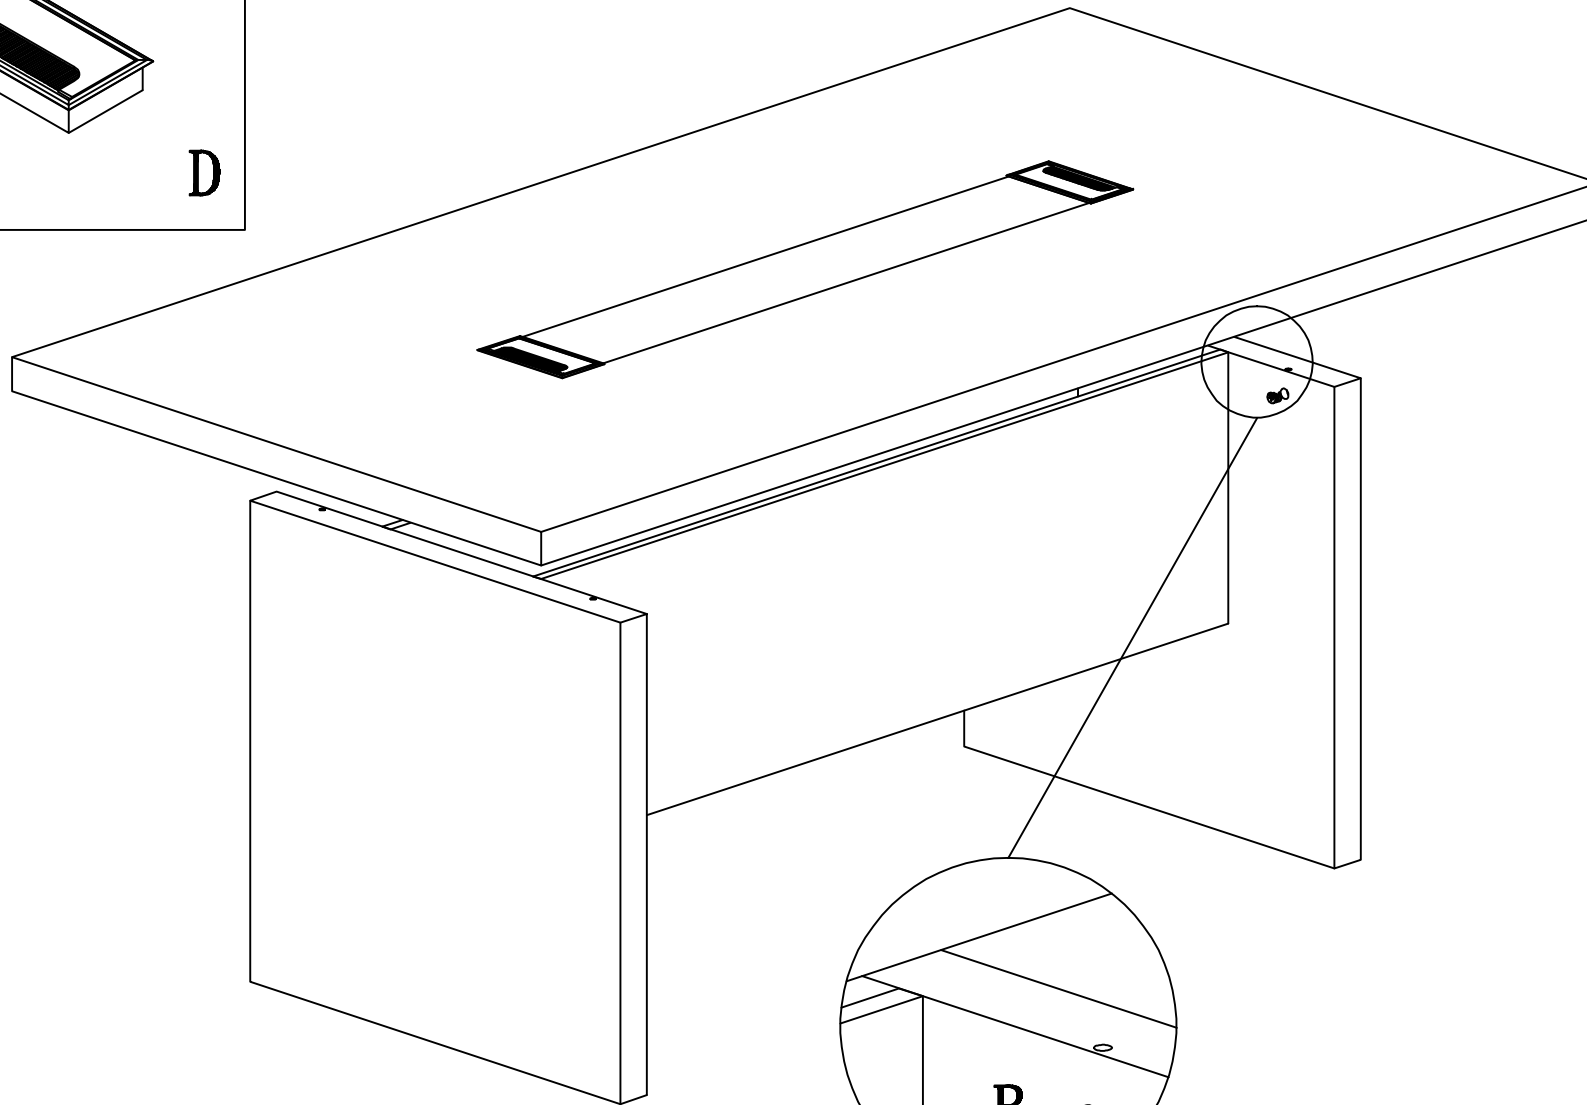

B