
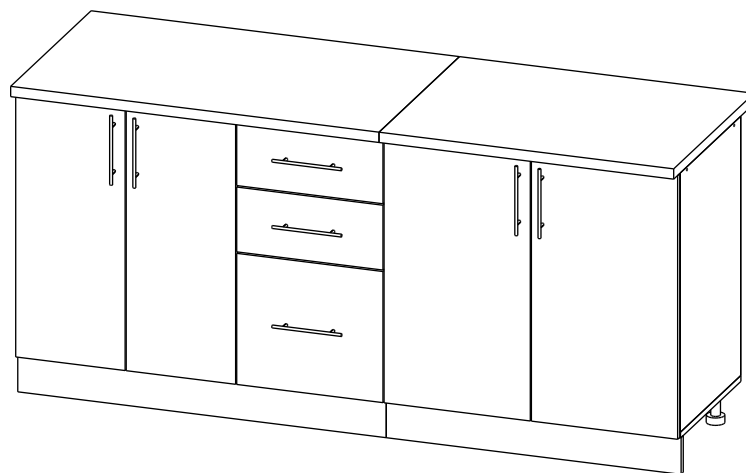


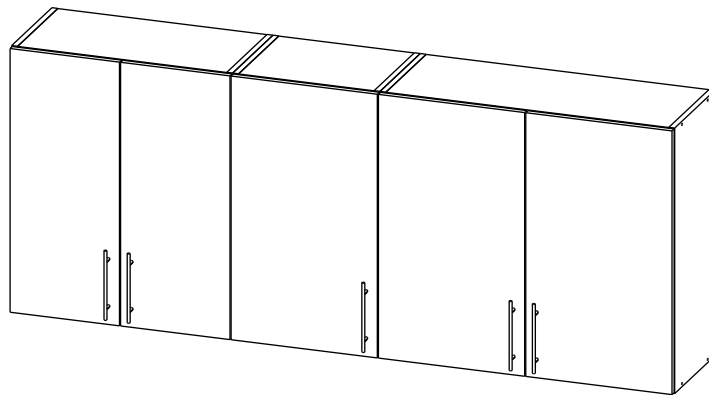

361-000015

K7-12(600)
PACK №1

K7-7(400)
PACK №2

K7-12(800)
PACK №3

PACK №9

PACK №10





KH-19 (400)
PACK №5






KH-14 (600)
PACK №4

KH-13(800)
PACK №6

PACK №8

PACK №8

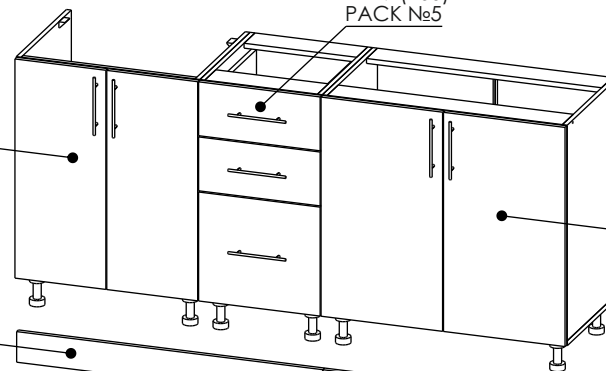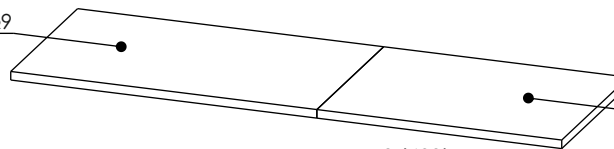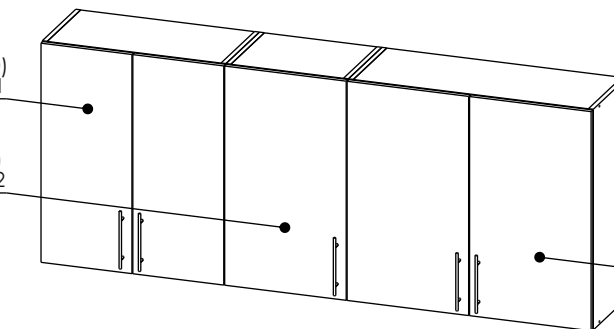

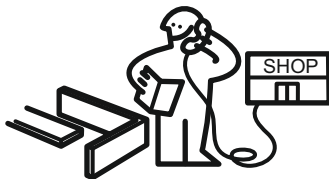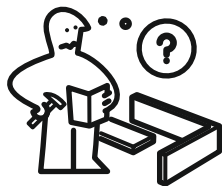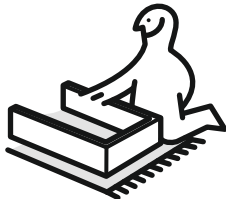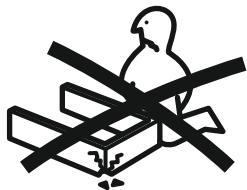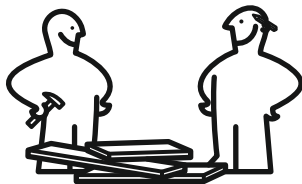



GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.













CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

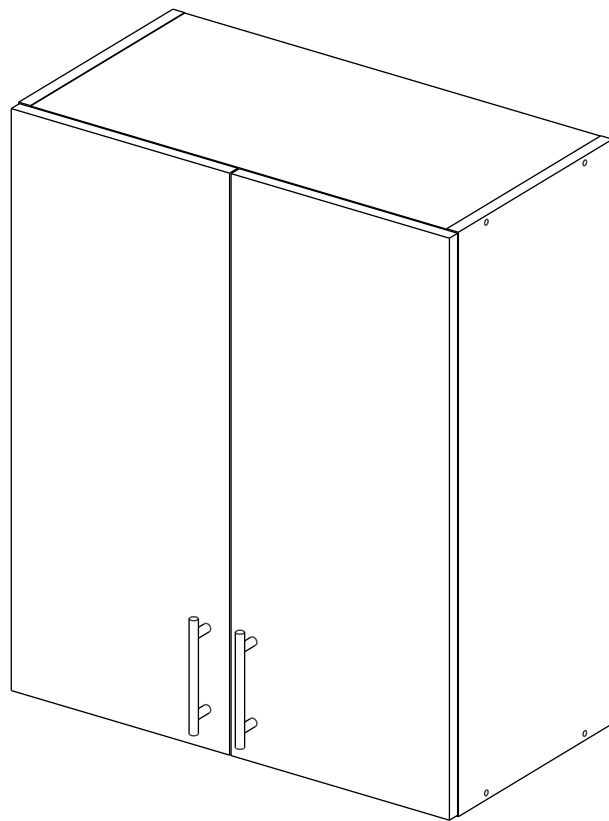


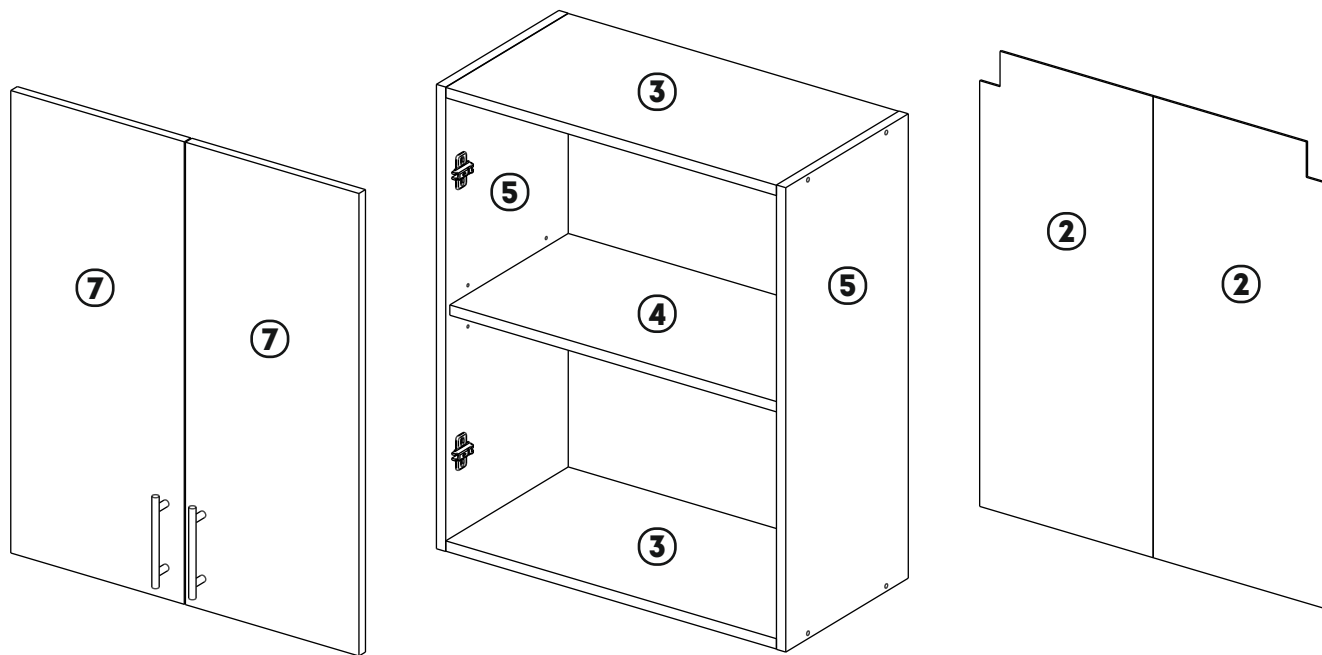


K7-12 (600)			
No	a*b	X	Pack
2	716x298	2	1/10
3	568x300	2	1/10
4	568x290	1	1/10
5	721x300	2	1/10
7	716x297	2	5/10

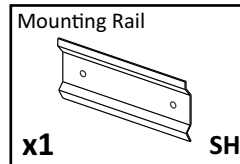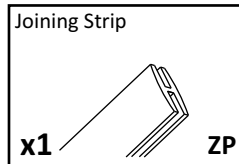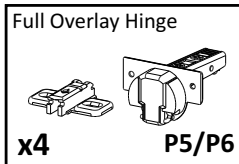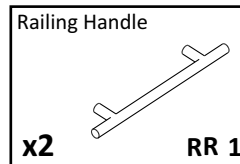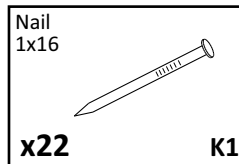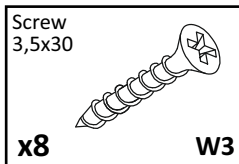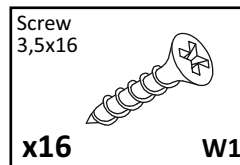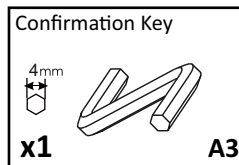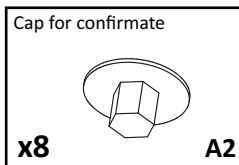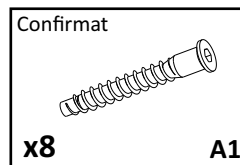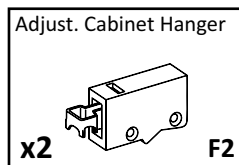
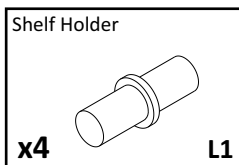


1


Mounting Plate

**x4****P6**Screw
3,5x16**x8****W1**


Shelf Holder

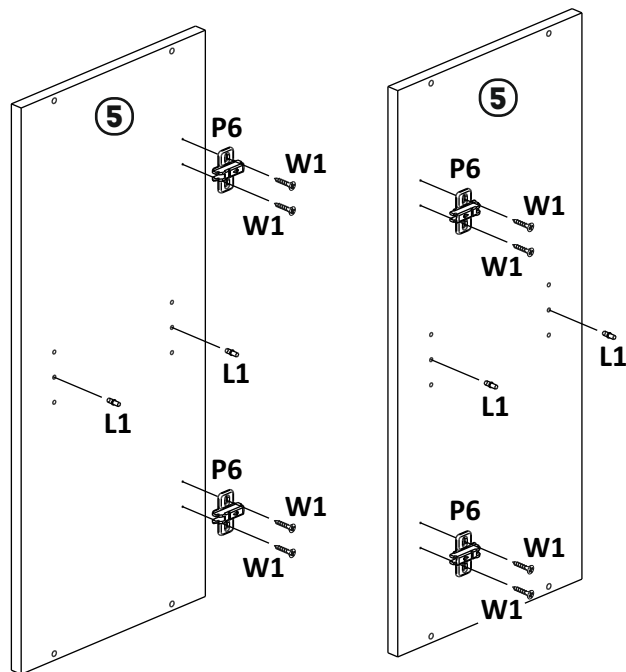**x4****L1****2**

Confirmat


**x8****A1**

Cap for confirmate

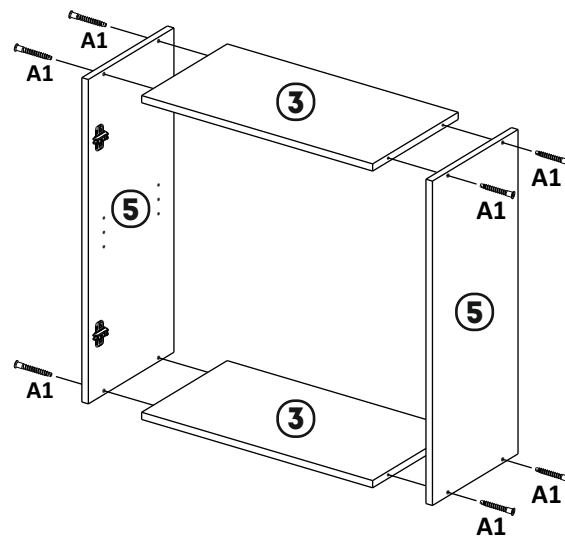**x8****A2**

3


Screw
3,5x30



x4


W3

Adjust. Cabinet Hanger




x2

F2

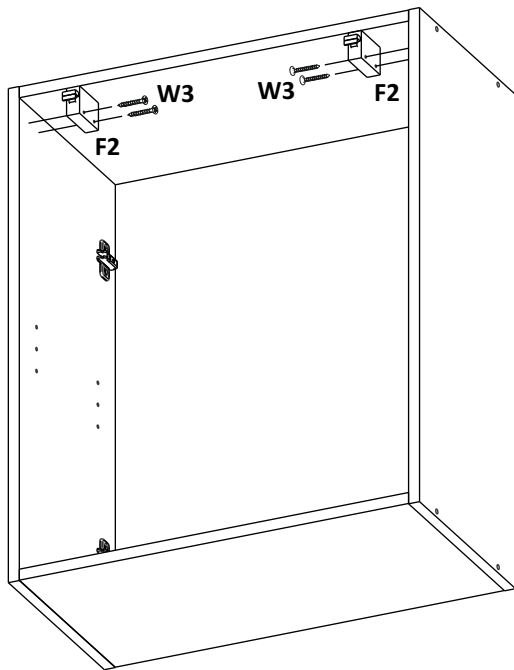

4

Nail
1x16



x35



K1

Joining Strip



x1


ZP

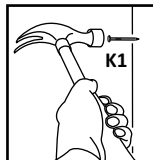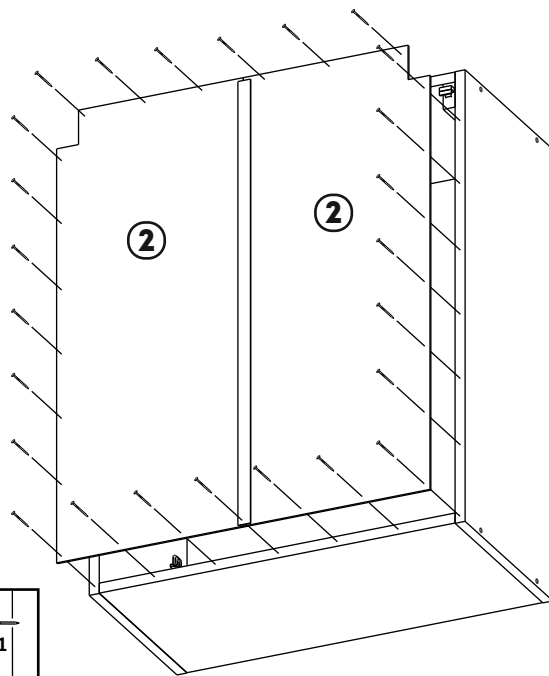

5

Railing Handle


x2



RR 1

Screw
3,5x16


x8




W1

Full Overlay Hinge





x4





P5

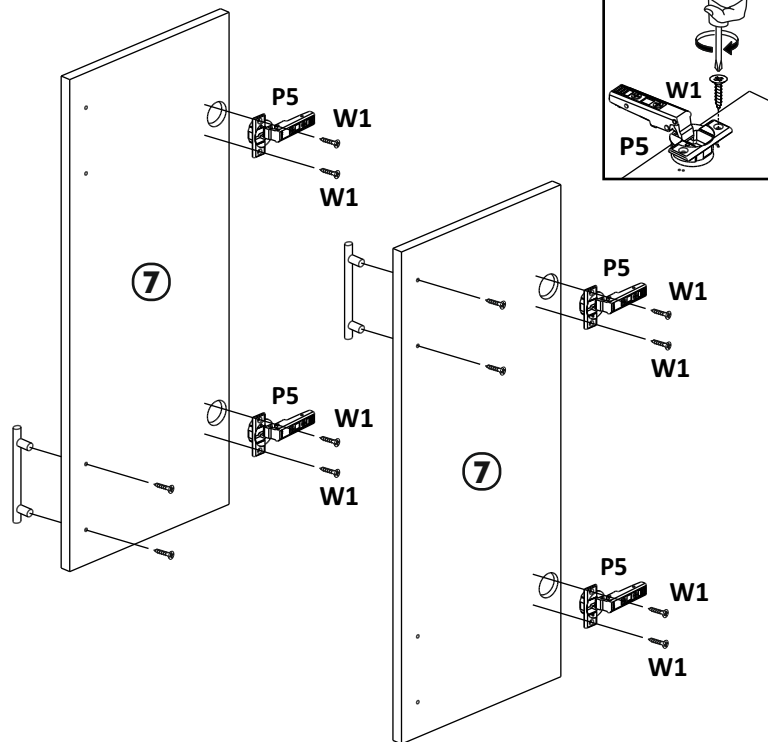

6

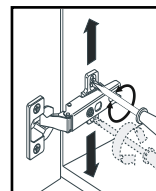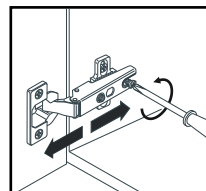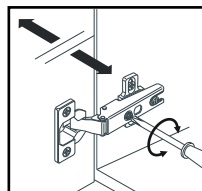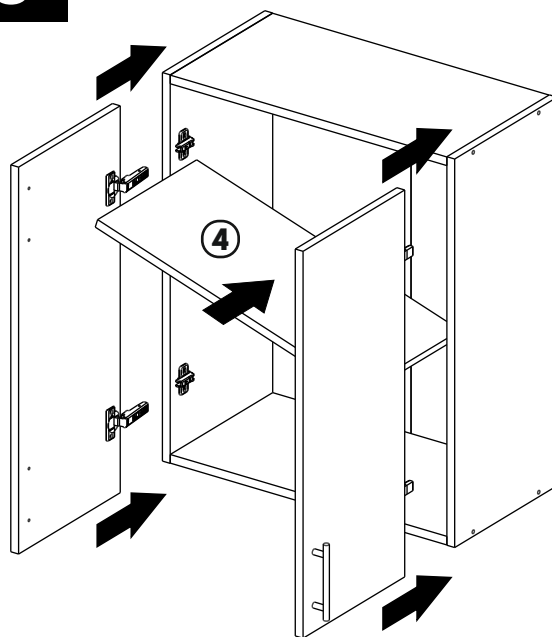

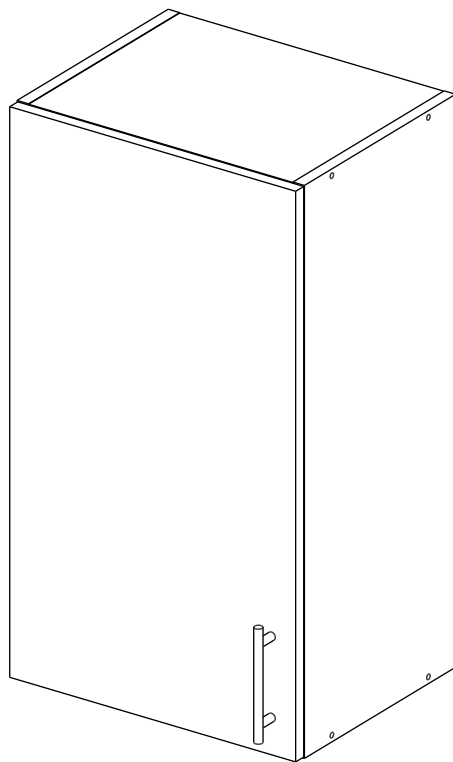


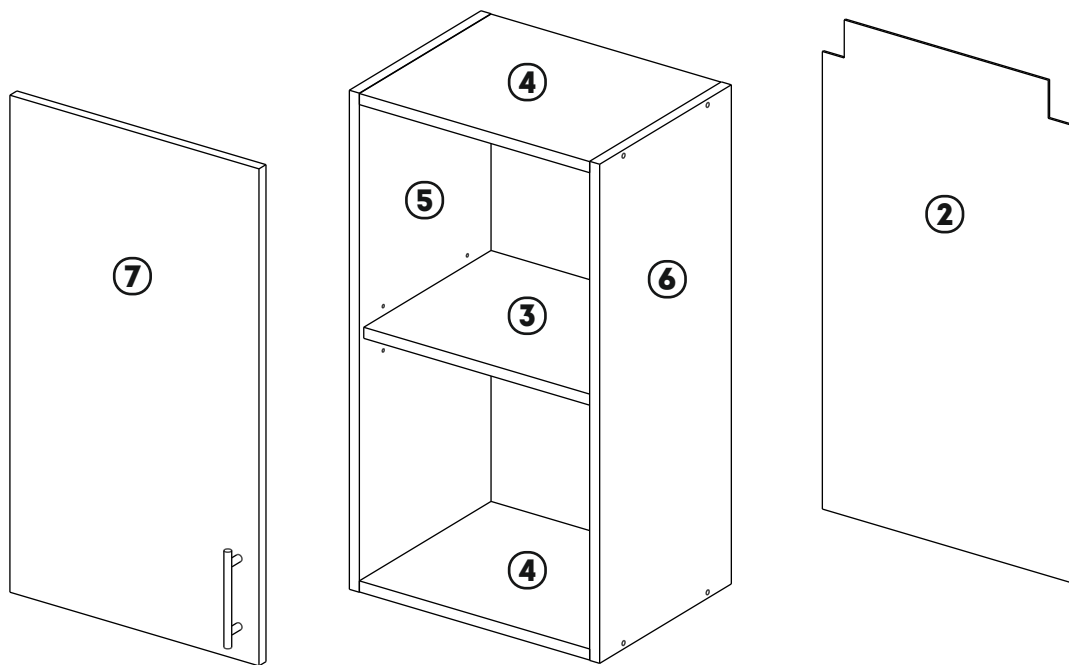

K7-7 (400)

No	a*b	X	Pack
2	716x396	1	2/10
3	368x290	1	2/10
4	368x300	2	2/10
5	720x300	1	2/10
6	720x300	1	2/10
7	716x397	1	7/10


Shelf Holder



x4

L1


Adjust. Cabinet Hanger



x2

F2

Confirmat



x8

A1

Cap for confirmate



x8

A2


Confirmation Key



x1

A3


Screw
3,5x16



x8

W1


Screw
3,5x30



x6

W3


Nail
1x16



x20

K1


Railing Handle



x1

RR 1


Full Overlay Hinge



x2

P5/P6

Mounting Rail





x1



SH

1


Mounting Plate

Screw
3,5x16


Shelf Holder

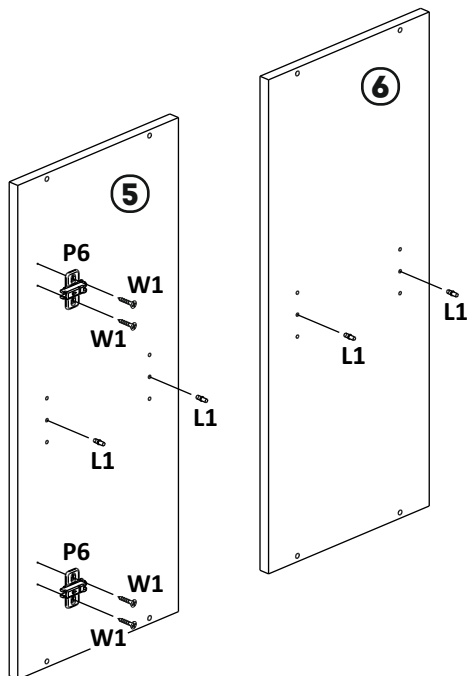**2**

Confirmat




Cap for confirmate

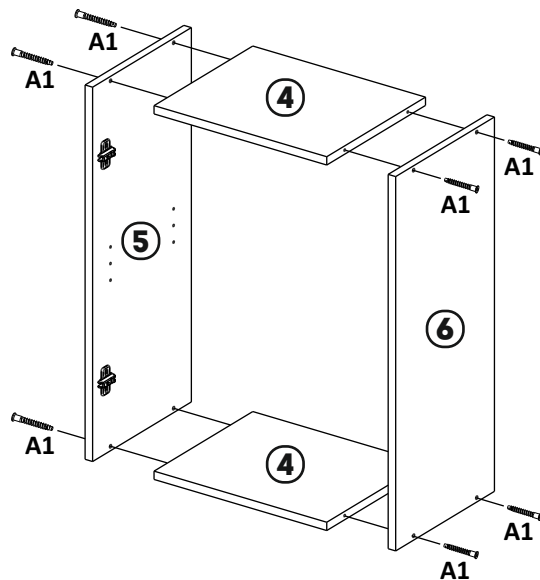

3


Screw
3,5x30



x4


W3

Adjust. Cabinet Hanger




x2

F2

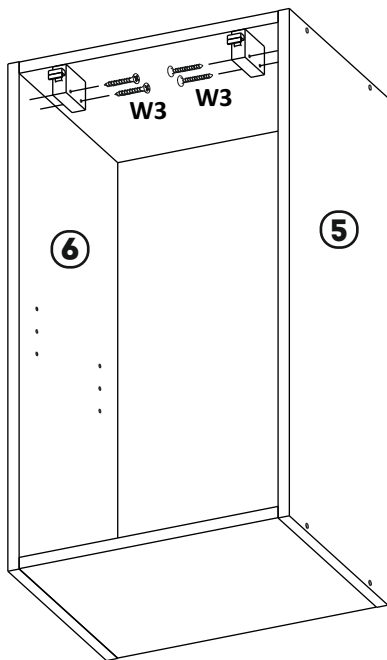



4

Nail
1x16



x20

K1

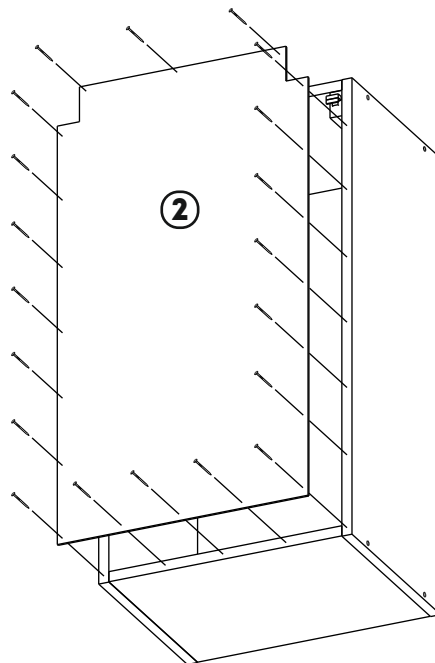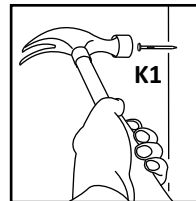


5

Railing Handle

x1


RR 1



Screw
3,5x16

x4




W1







Full Overlay Hinge


x2


P5

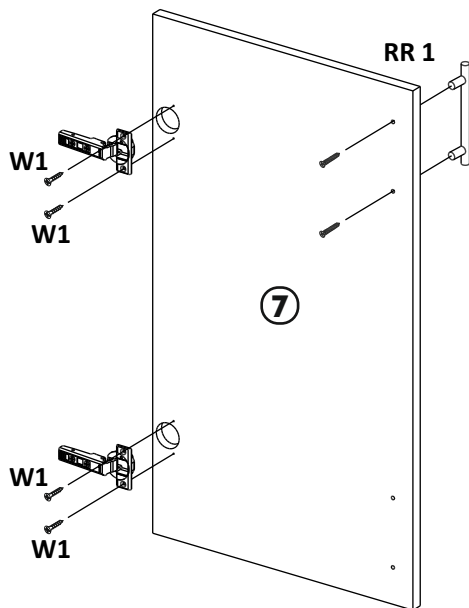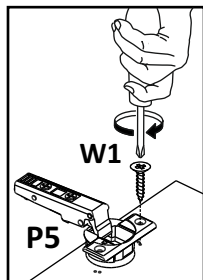













6

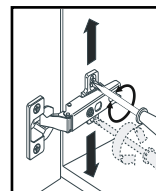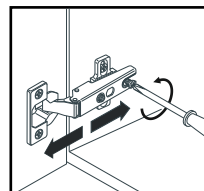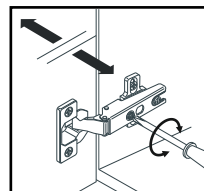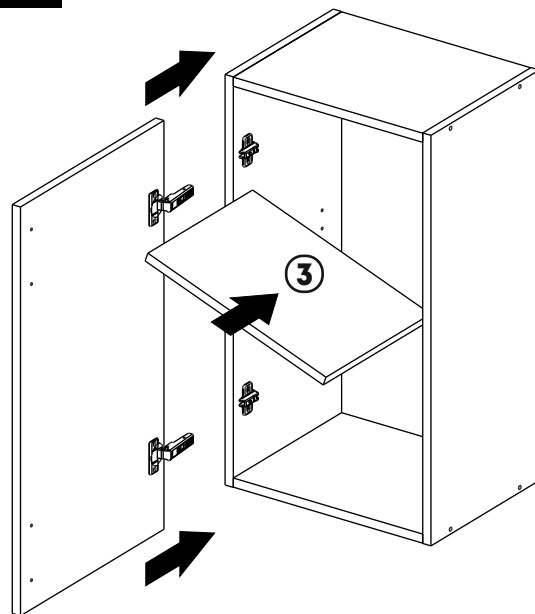

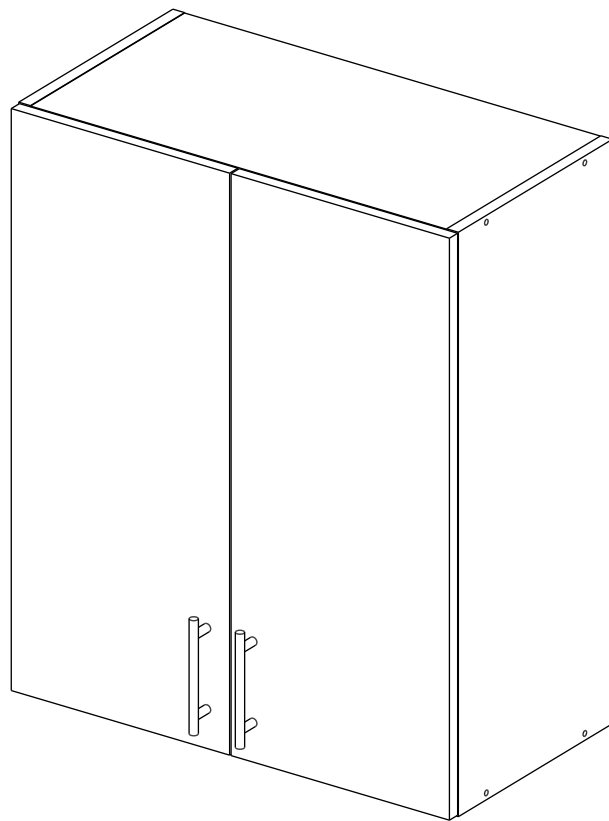


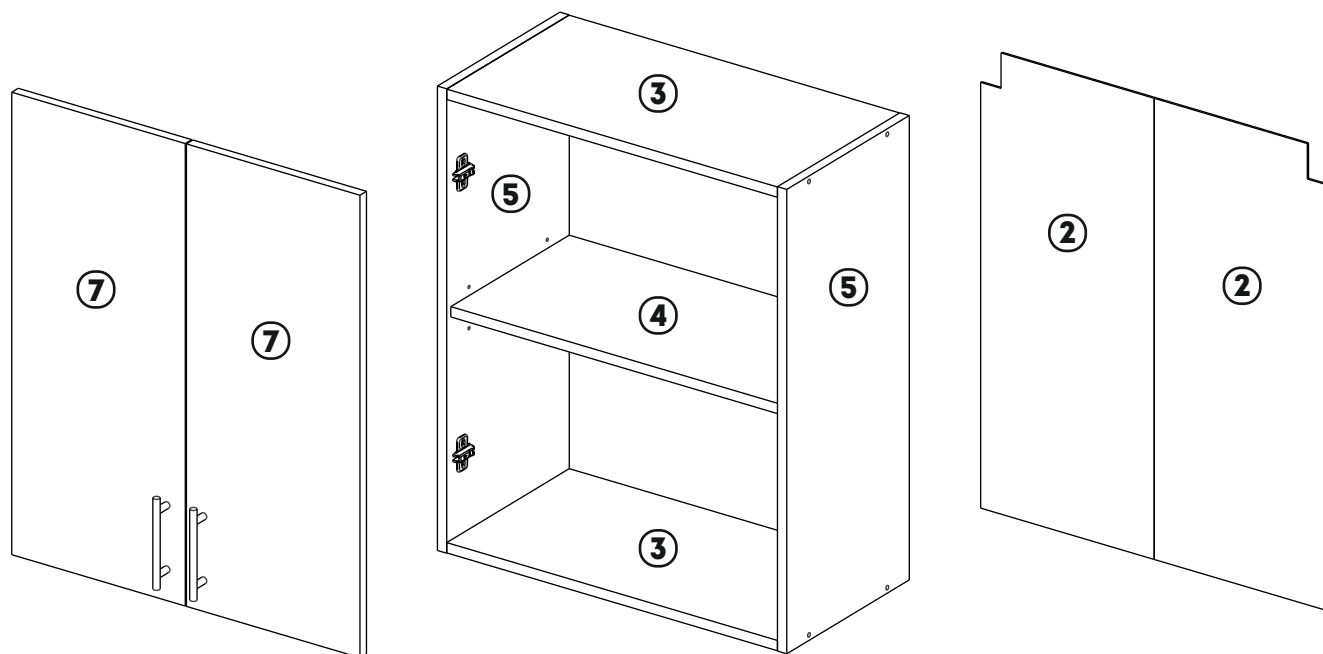


K7-12 (800)			
No	a*b	X	Pack
2	716x398	2	3/10
3	768x300	2	3/10
4	768x290	1	3/10
5	721x300	2	3/10
7	716x397	2	7/10

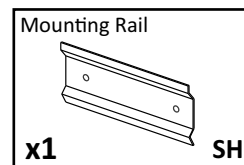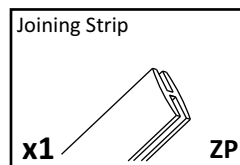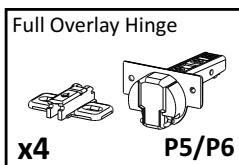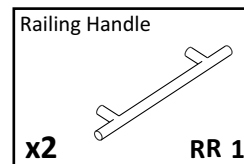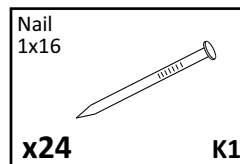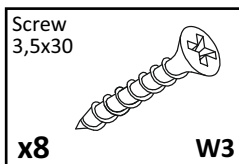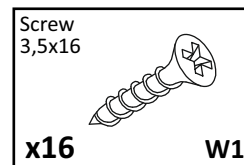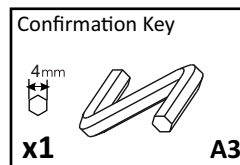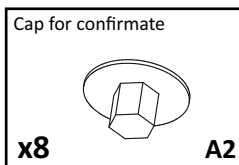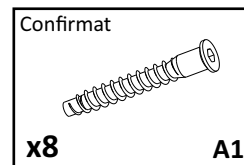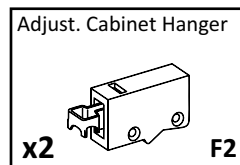
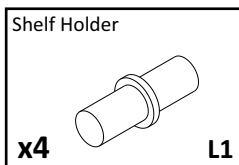


1


Mounting Plate

**x4****P6**Screw
3,5x16**x8****W1**


Shelf Holder

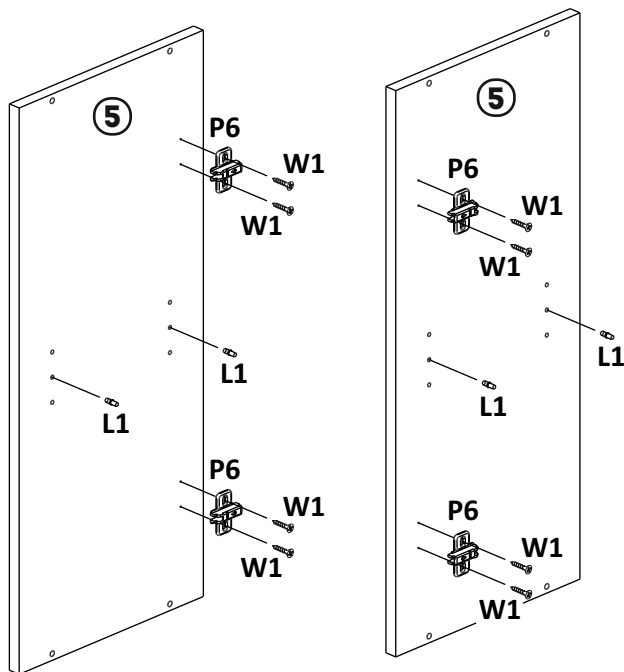
**x4****L1****2**

Confirmat




**x8****A1**

Cap for confirmate


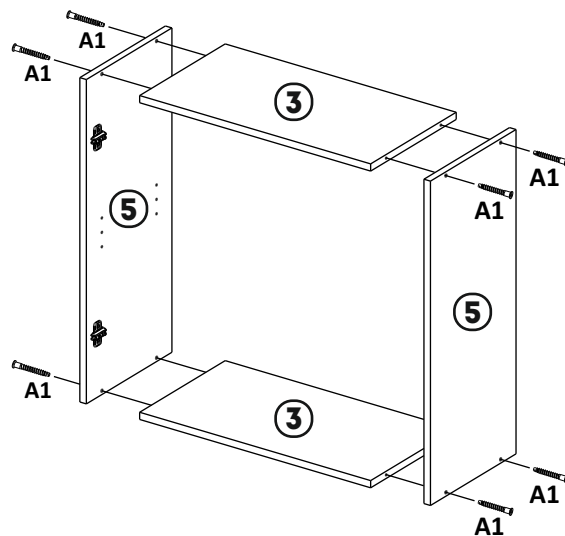
**x8****A2**

3Screw
3,5x30**x4****W3**

Adjust. Cabinet Hanger

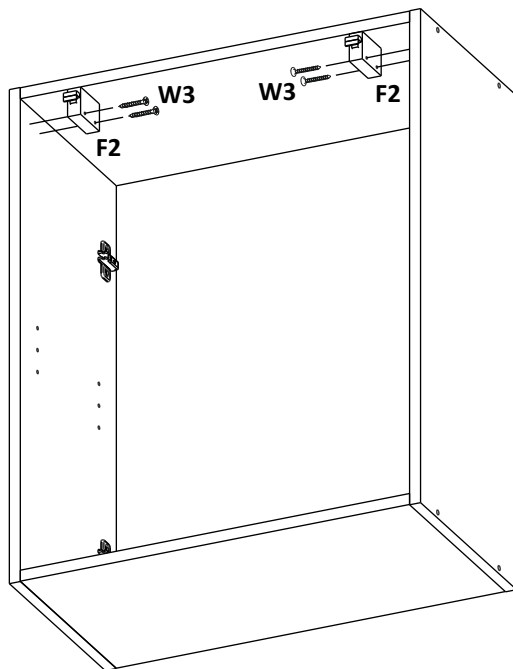**x2****F2****4**Nail
1x16**x28****K1**


Joining Strip

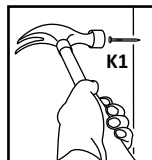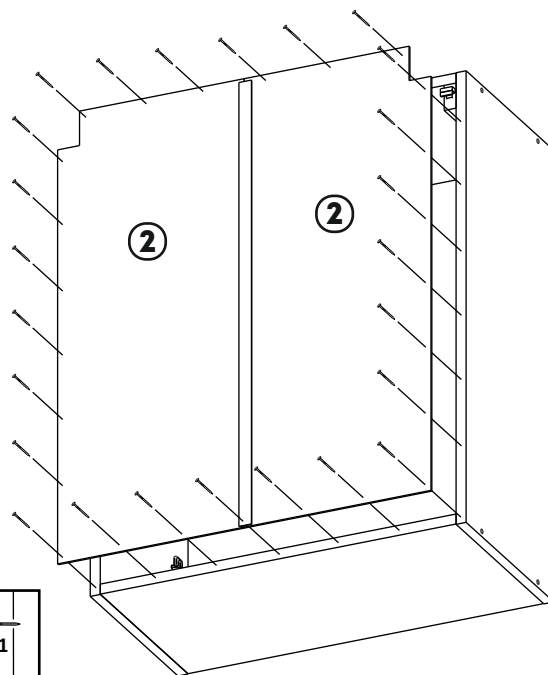**x1****ZP**

5

Railing Handle


x2



RR 1

Screw
3,5x16


x8




W1

Full Overlay Hinge





x4





P5

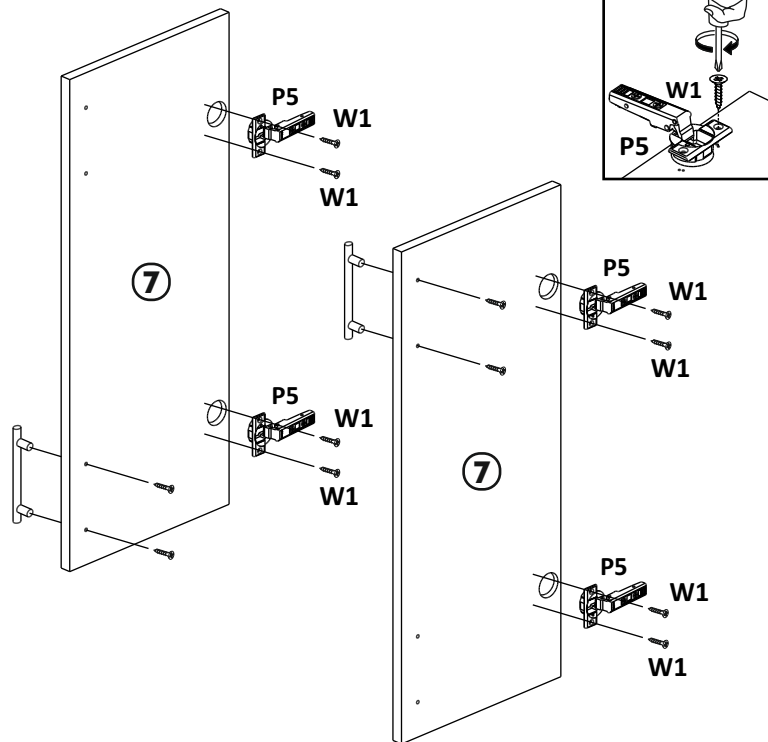

6







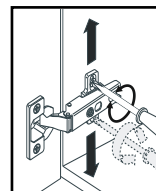
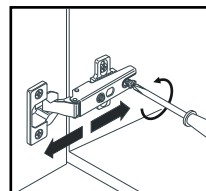
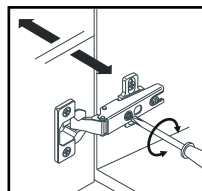
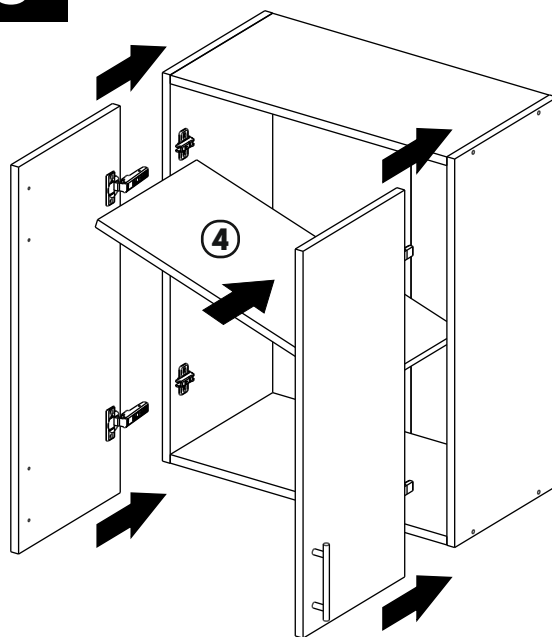




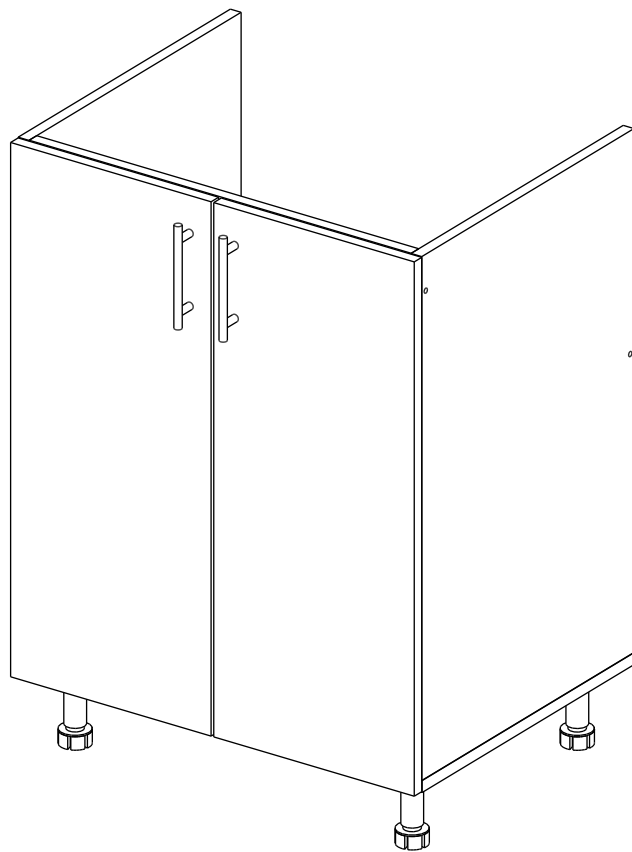


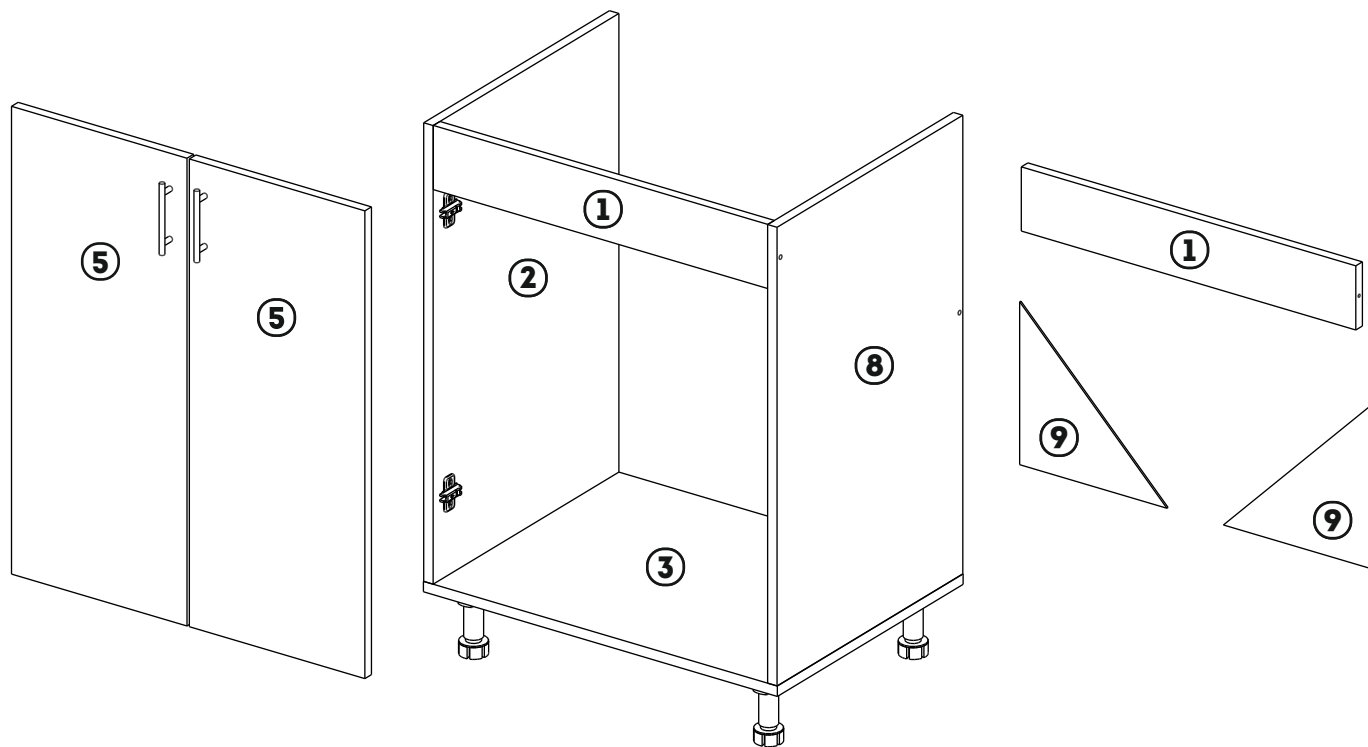



KH-14 (600)

No	a*b	X	Pack
1	99x568	2	4/10
2	704x451	1	4/10
3	601x451	1	4/10
8	704x451	1	4/10
5	716x297	2	7/10
9	250x250	2	4/10

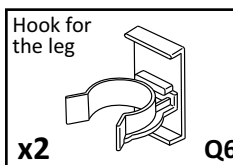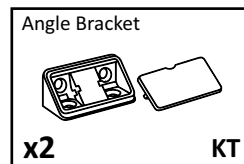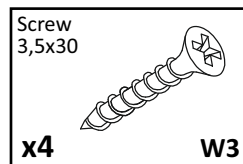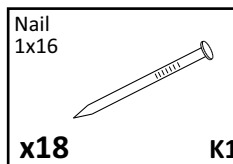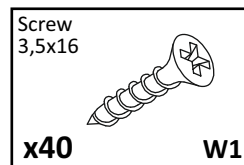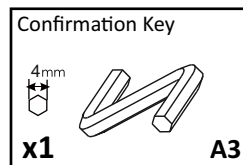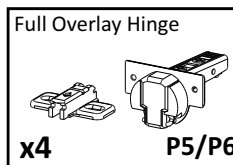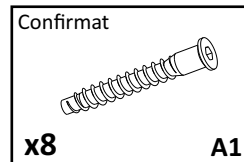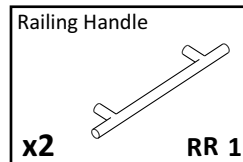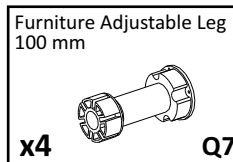

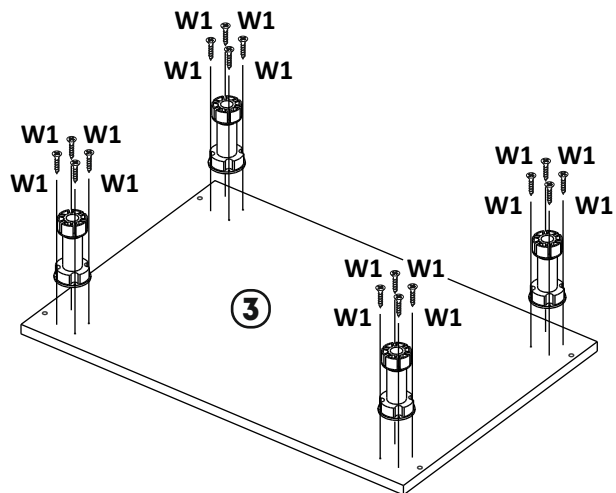
1Screw
3,5x16**x16****W1**Furniture Adjustable Leg
100 mm**x4****Q7****2**

Mounting Plate

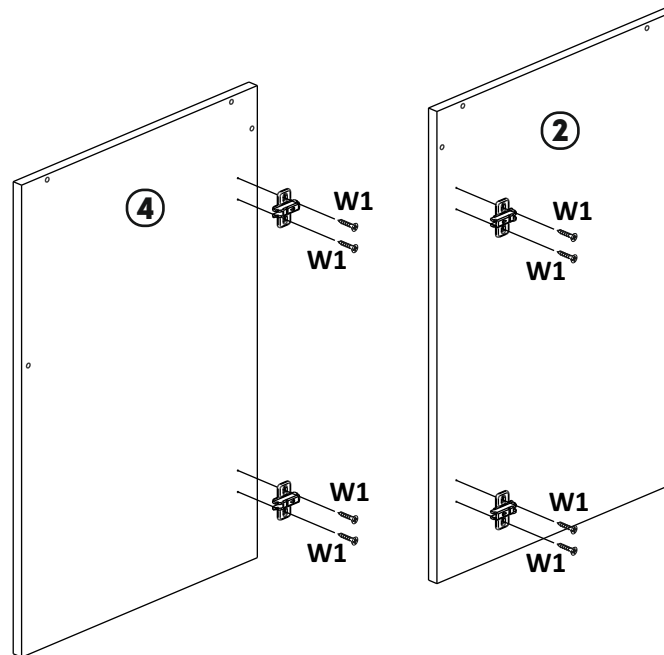**x4****P6**Screw
3,5x16**x8****W1**


3

Confirmat




x4

A1

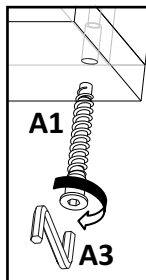


A1

A3

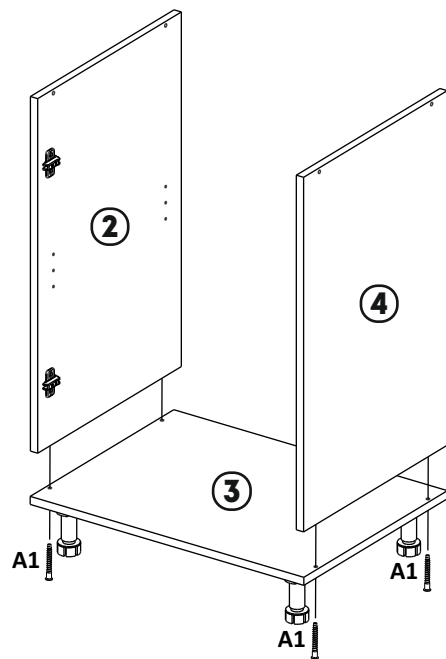

4


Nail
1x16



x18


K1

Confirmat




x4

A1

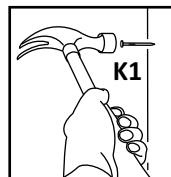


A1

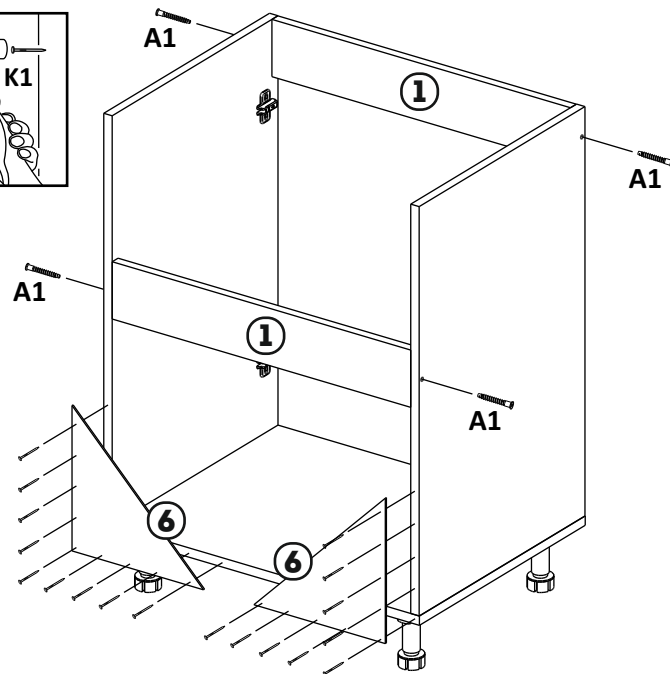

5

Railing Handle


x2



RR 1

Screw
3,5x16


x8




W1

Full Overlay Hinge





x4





P5

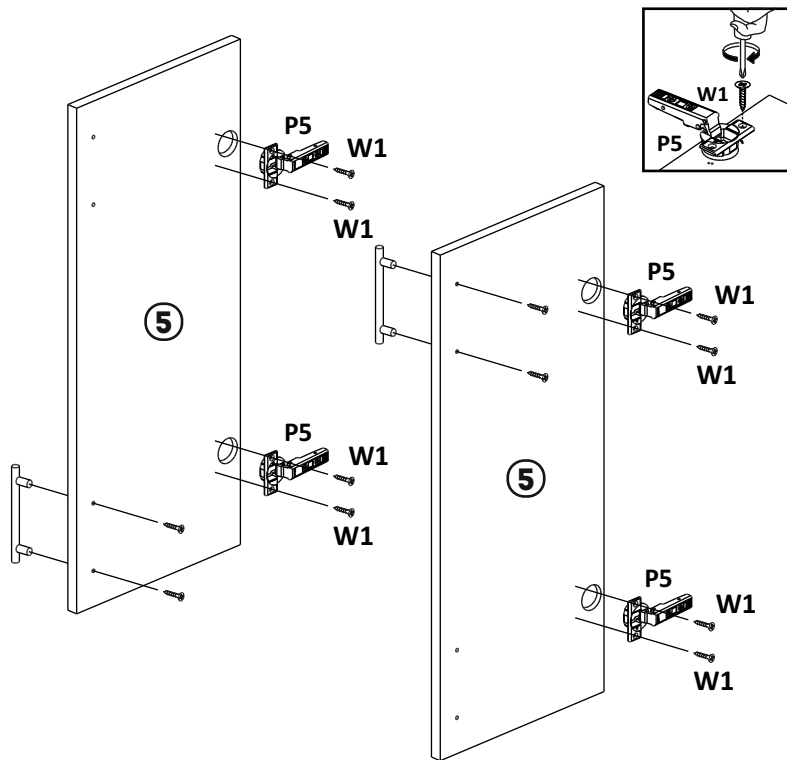











6

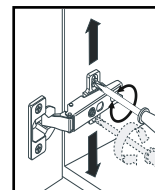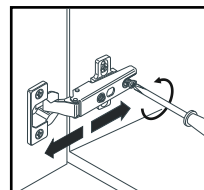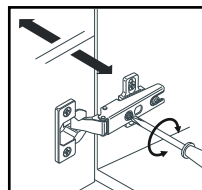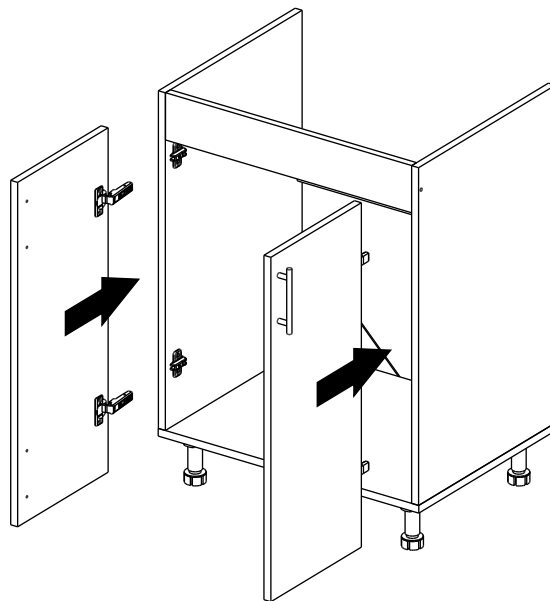

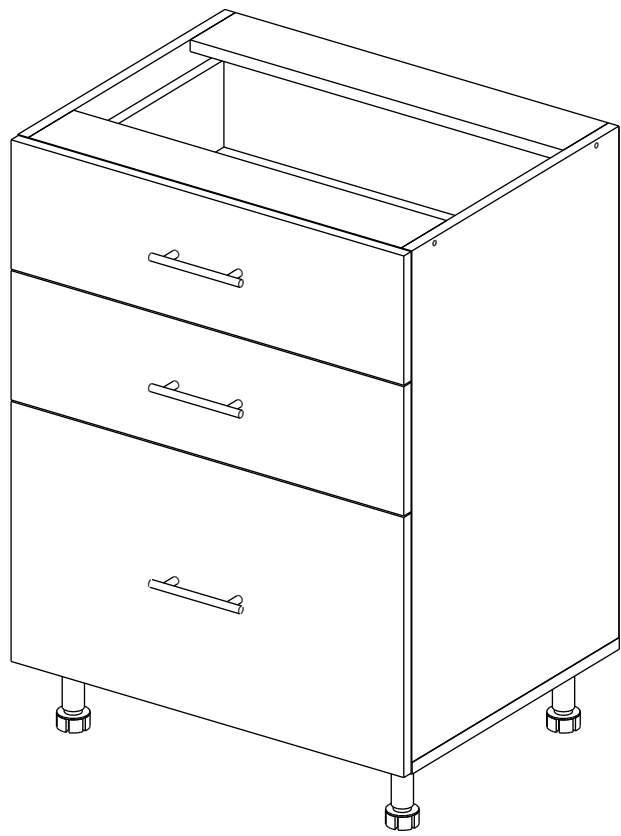




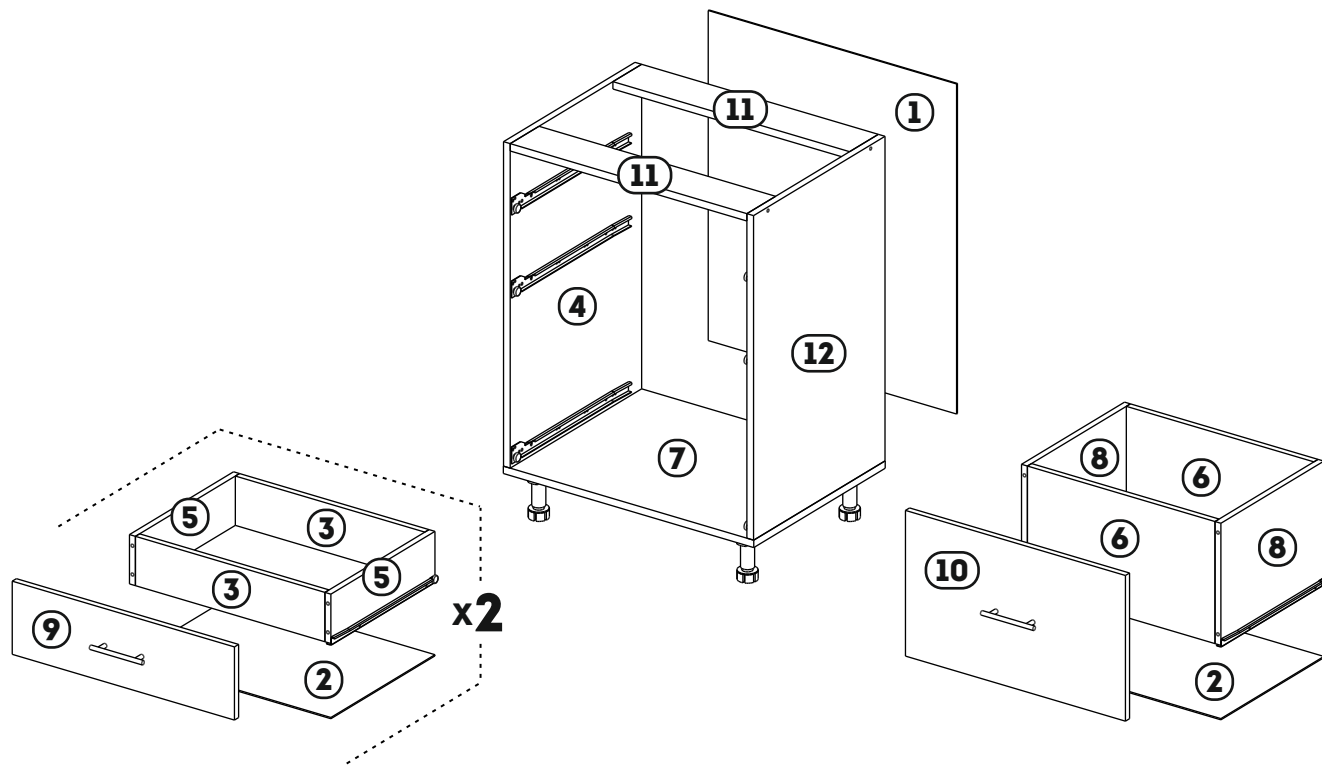


KH-19 (400)			
No	a*b	X	Pack
1	716x396	1	5/10
2	342x400	3	5/10
3	124x310	4	5/10
4	704x450	1	5/10
5	124x400	4	5/10
6	304x310	2	5/10
7	401x450	1	5/10
8	304x400	2	5/10
9	176x397	2	7/10
10	356x397	1	7/10
11	98x368	2	5/10
12	704x750	1	5/10

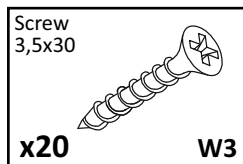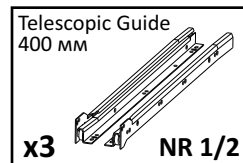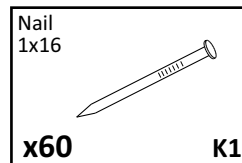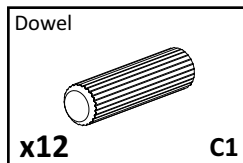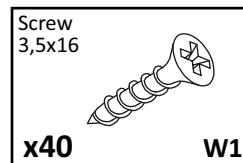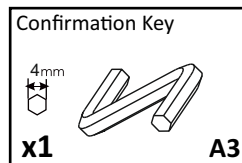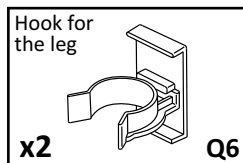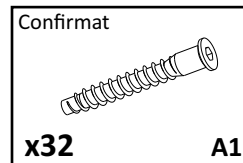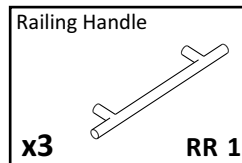
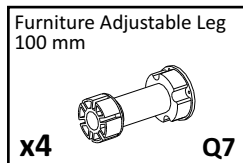


1

Confirmat

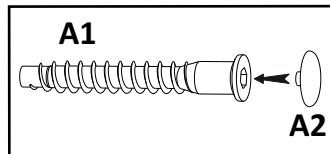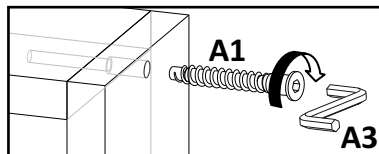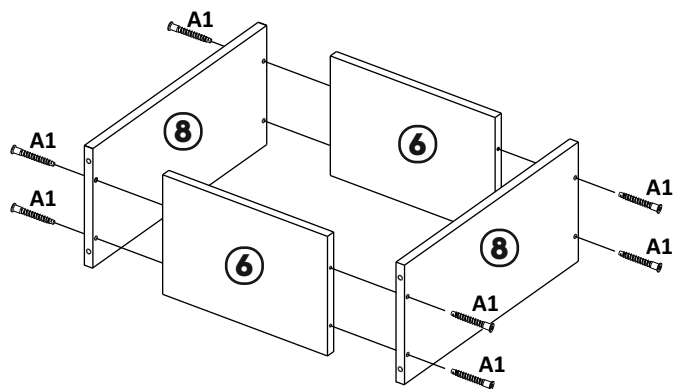
**x8****A1****2**

Railing Handle

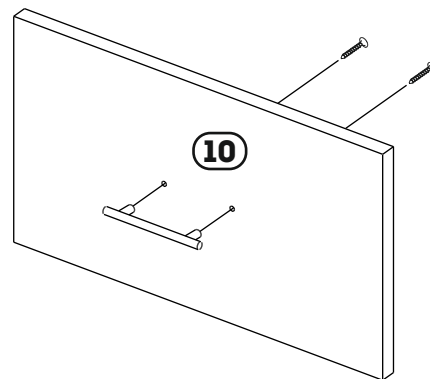**x1****RR 1**

3


Dowel



x4



C1

Nail
1x16



x12

K1

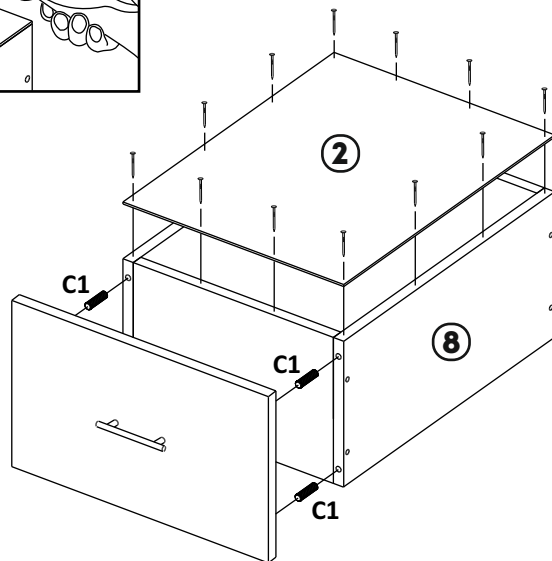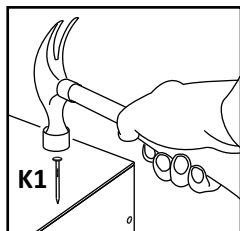

4


Telescopic Guide
400 mm



x1



NR 2

Screw
3,5x16




x6

W1

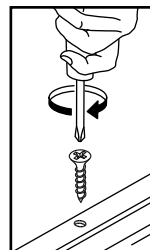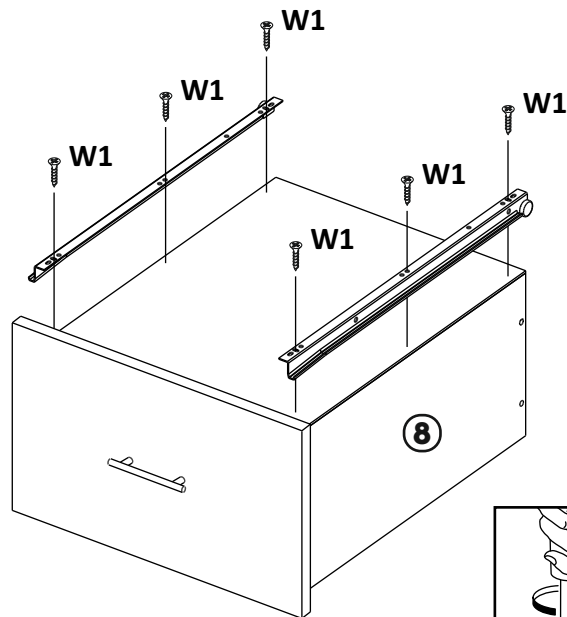


5

Screw
3,5x30



x4

W3

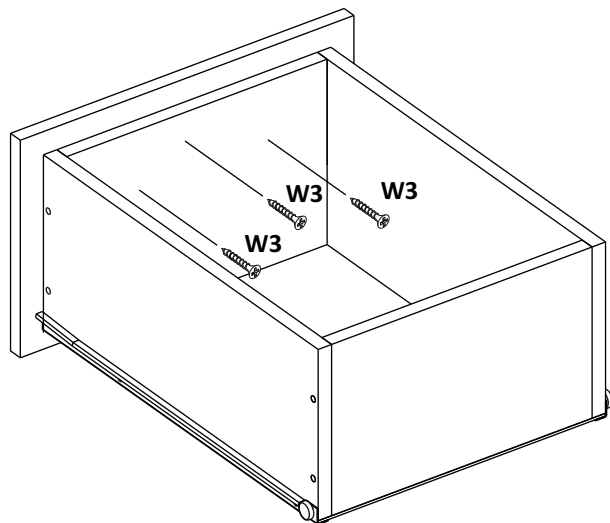

6


Telescopic Guide
400 mm



x3



NR 2

Screw
3,5x16




x12

W1

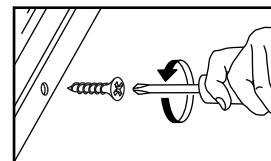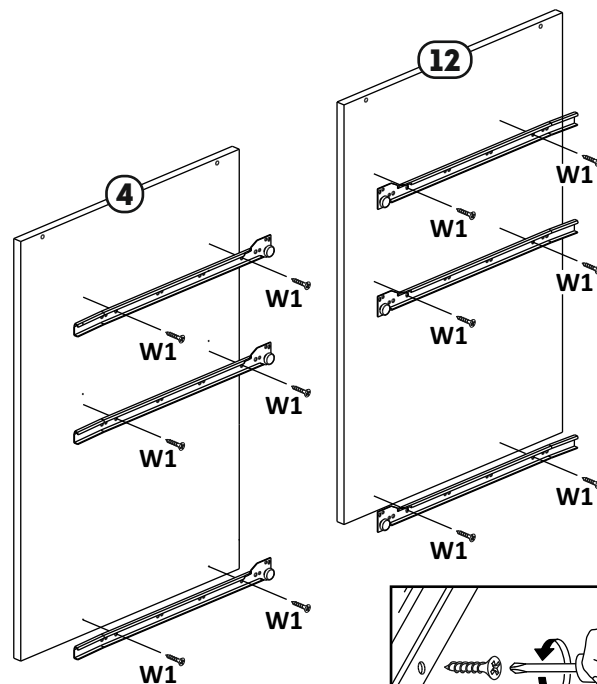

7


Screw
3,5x16



x16


W1

Furniture Adjustable Leg
100 mm




x4

Q7

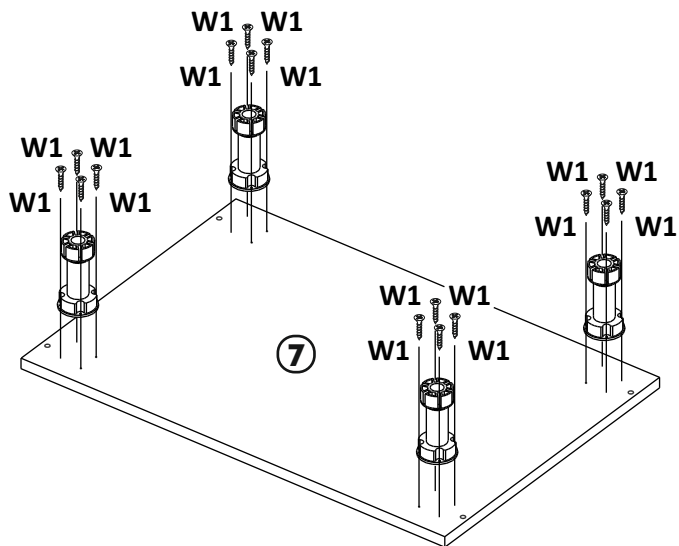


8

Confirmat




x4

A1

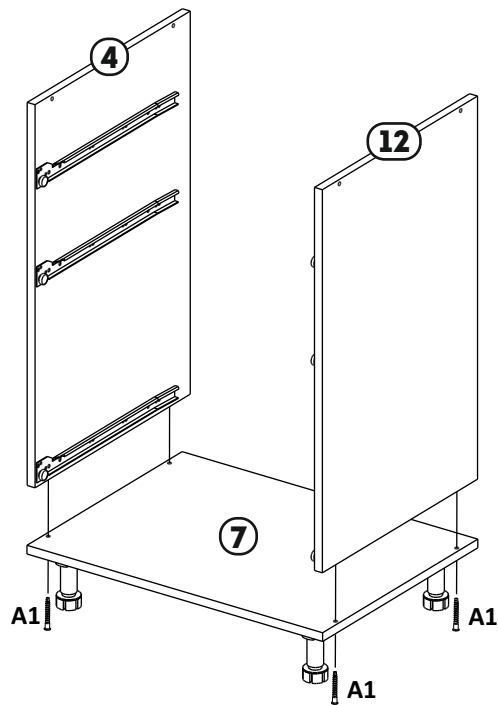



9

Nail
1x16





x24


K1

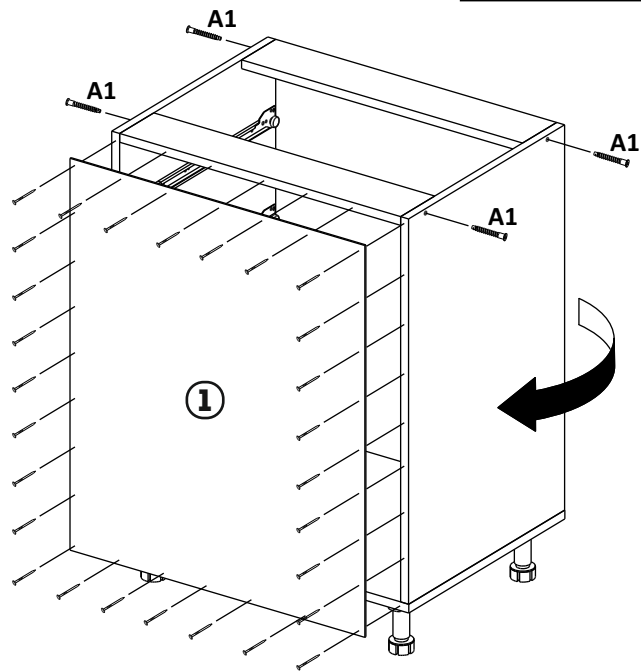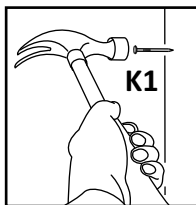

10











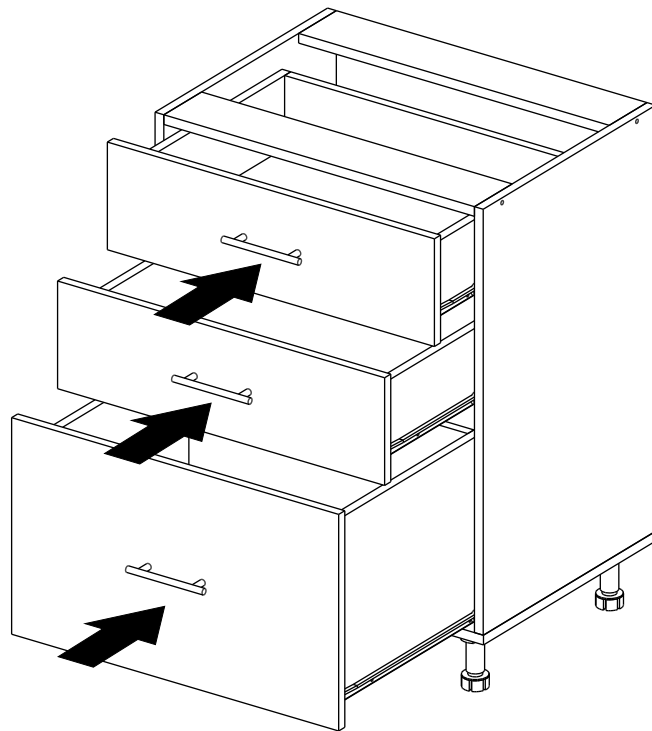




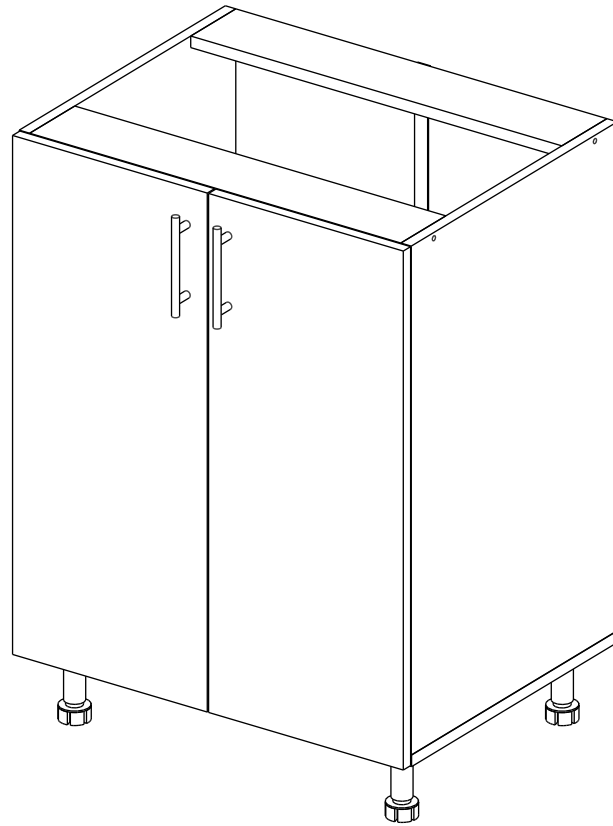


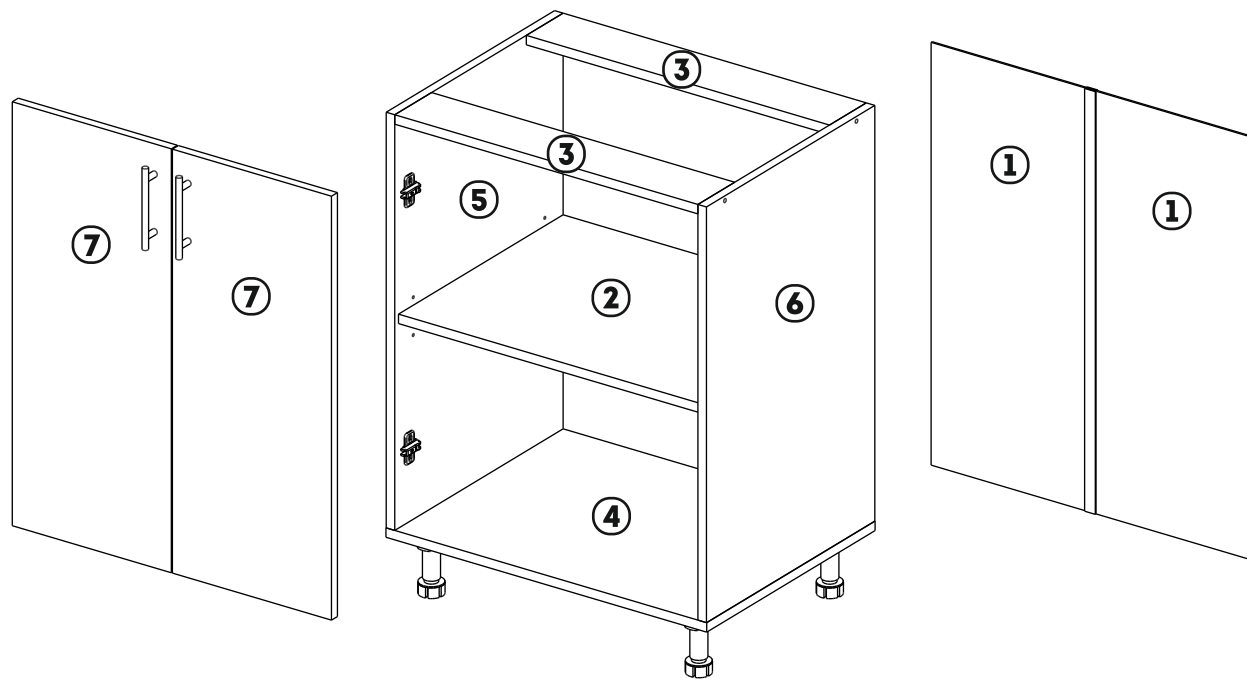



KH-13 (800)

No	a*b	X	Pack
1	716x398	2	6/10
2	768x440	1	6/10
3	768x98	2	6/10
4	800x450	1	6/10
5	704x450	1	6/10
6	704x450	1	6/10
7	716x397	2	7/10

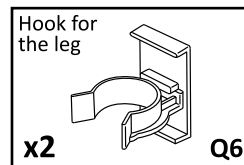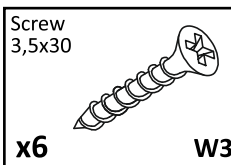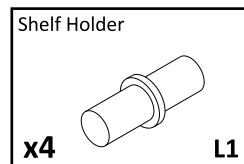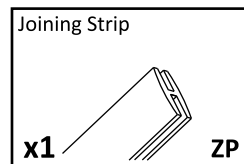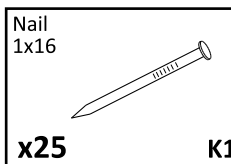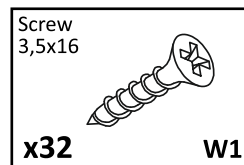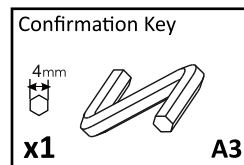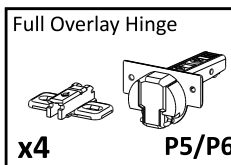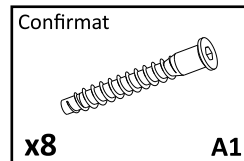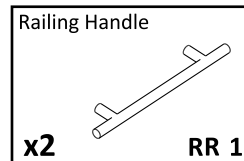
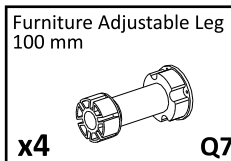


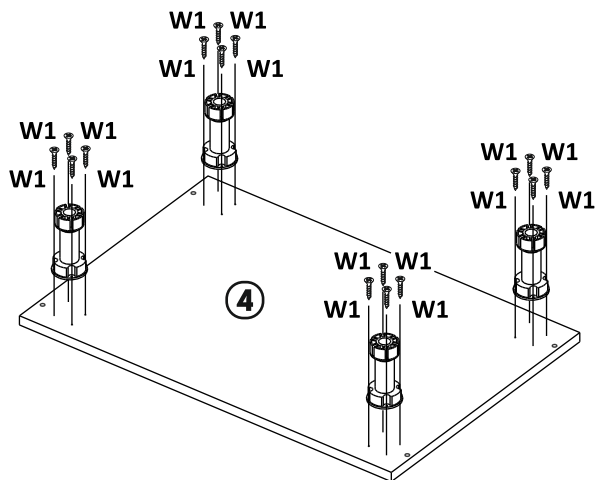1Screw
3,5x16**x16****W1**Furniture Adjustable Leg
100 mm**x4****Q7****2**

Mounting Plate


**x4****P6**Screw
3,5x16**x8****W1**

Shelf Holder

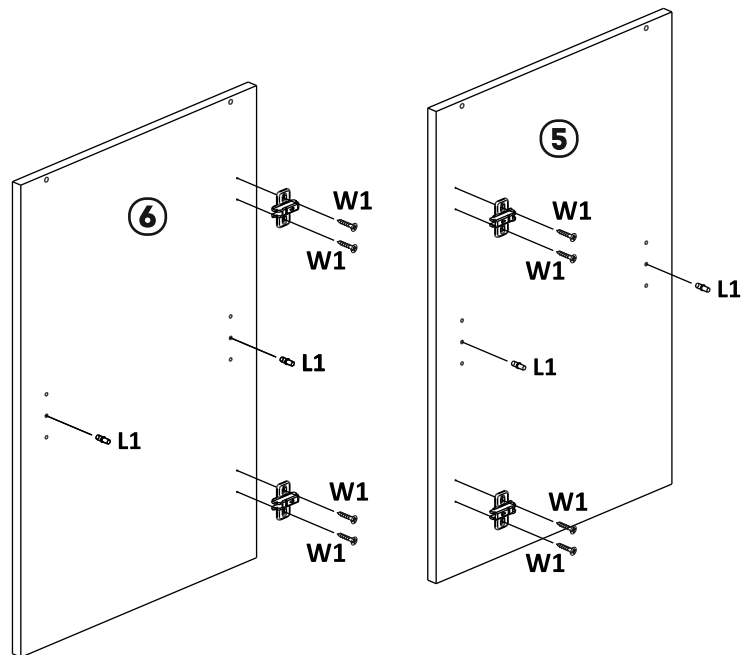**x4****L1**



3

Conformat




x4

A1

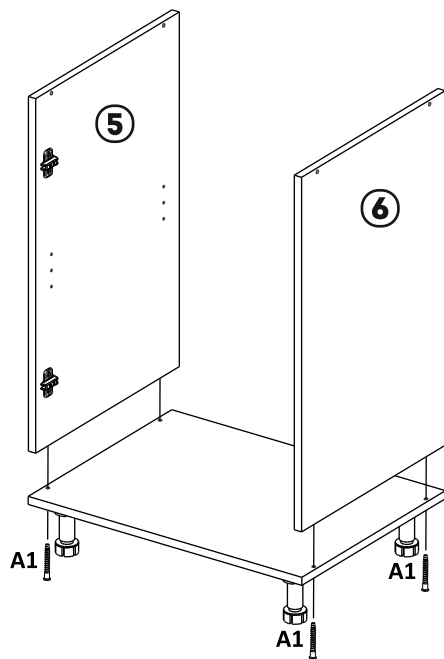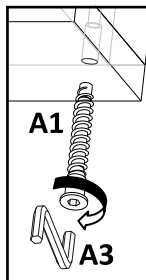

4

Nail
1x16



x25

K1


Joining Strip



x1




ZP

Conformat



x4


A1

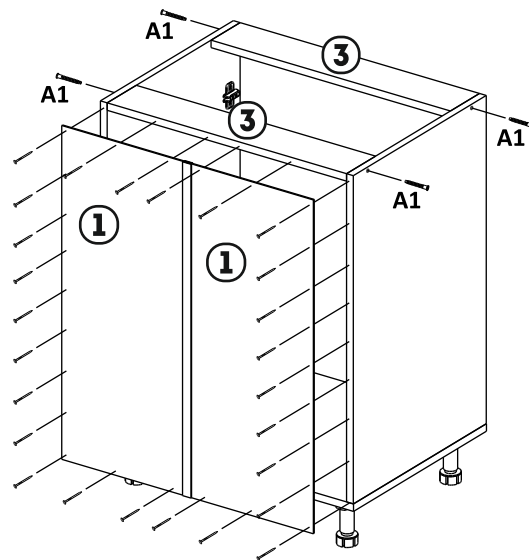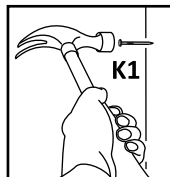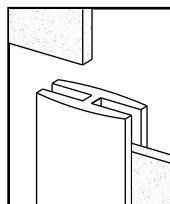

5

Railing Handle


x2



RR 1

Screw
3,5x16


x8






W1

Full Overlay Hinge





x4



P5

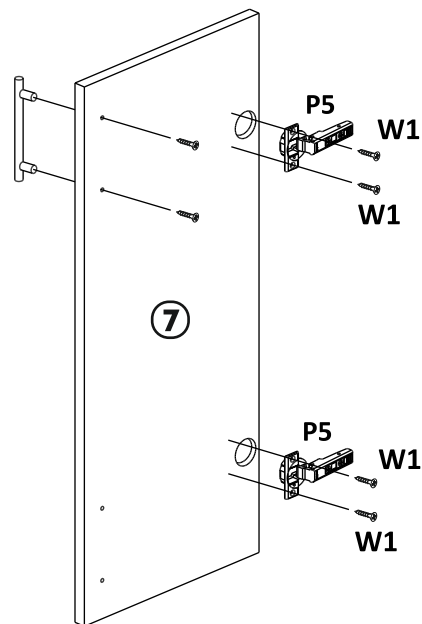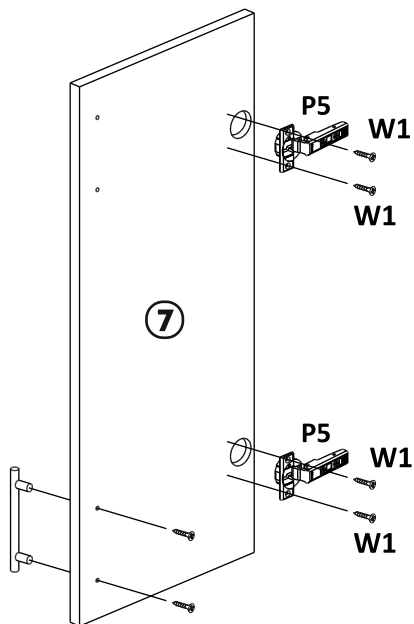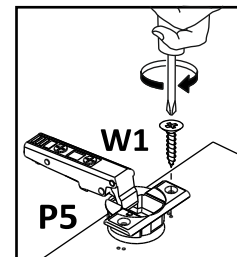

6

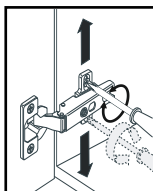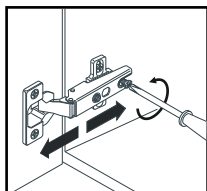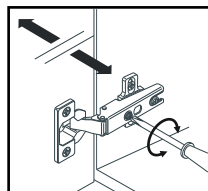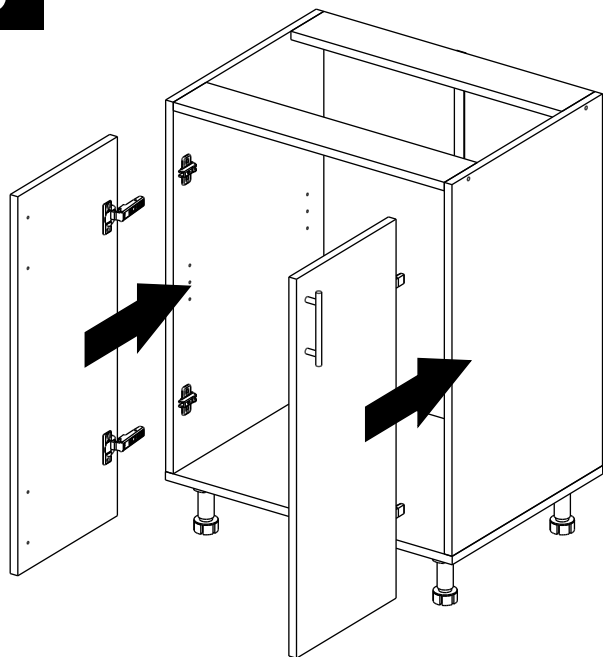

7

