


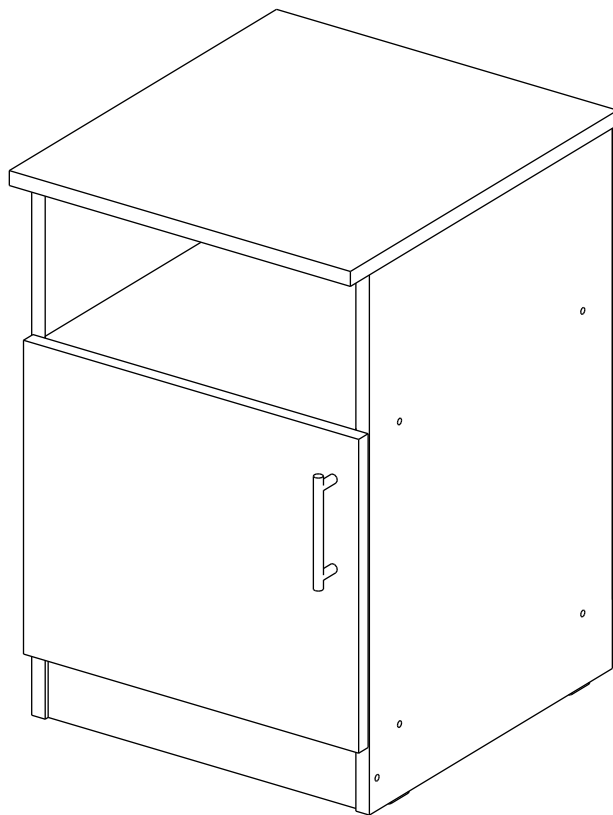
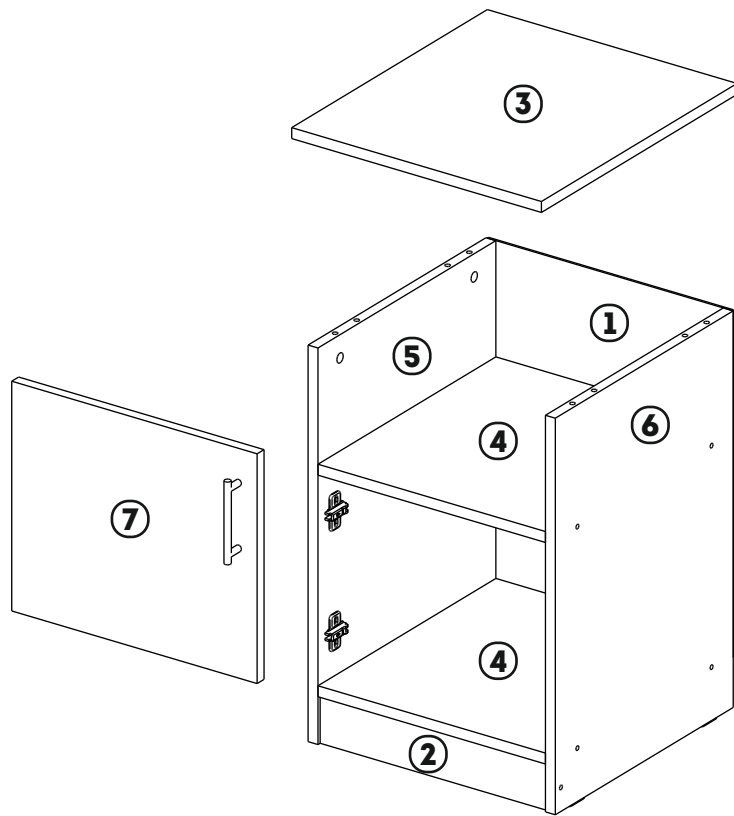
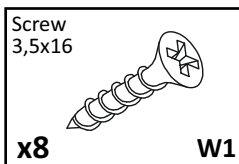
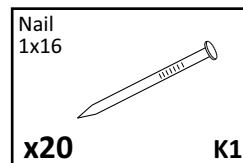
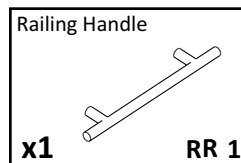
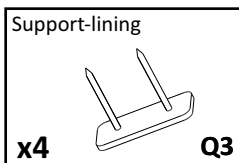
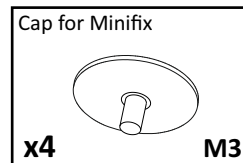
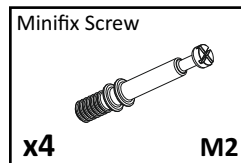
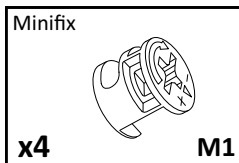
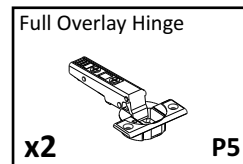
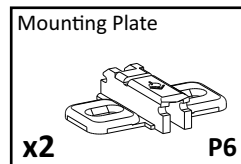
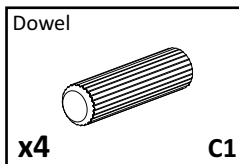




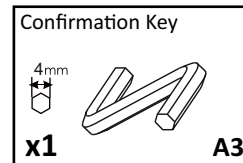


361-000035

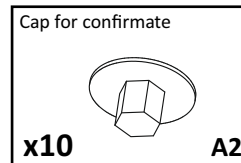

No	a*b	X	Pack
1	508x396	1	1/1
2	368x70	1	1/1
3	404x452	1	1/1
4	368x411	2	1/1
5	580x411	1	1/1
6	580x411	1	1/1
7	336x397	1	1/1

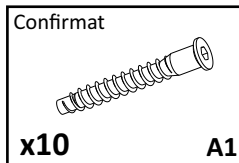

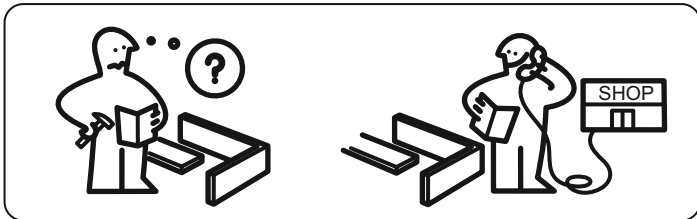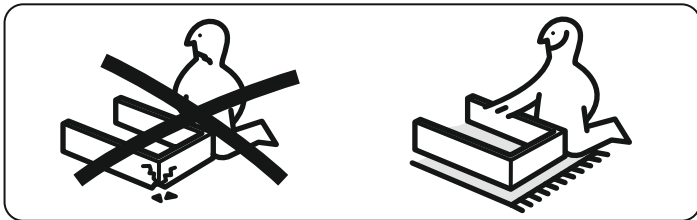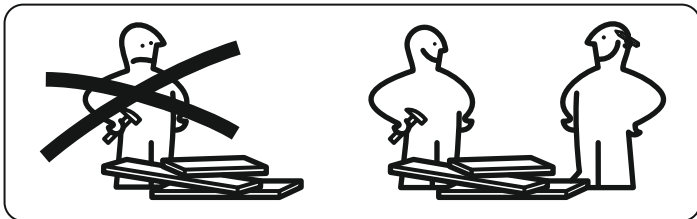

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1


Minifix



x4



M1

Mounting Plate




x2

P6

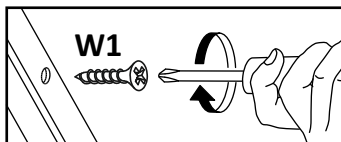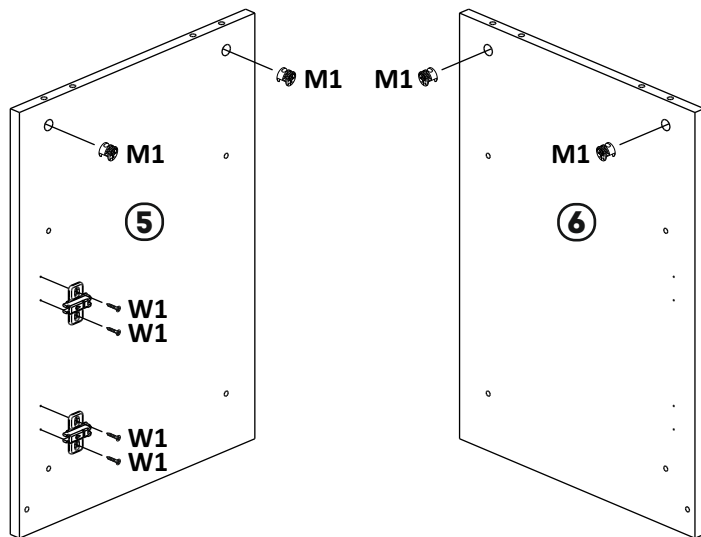

2

Confirmat



x10




A1

Cap for confirmate




x10

A2

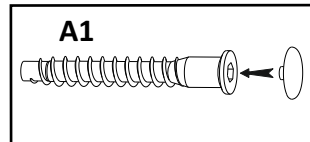
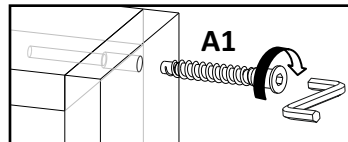
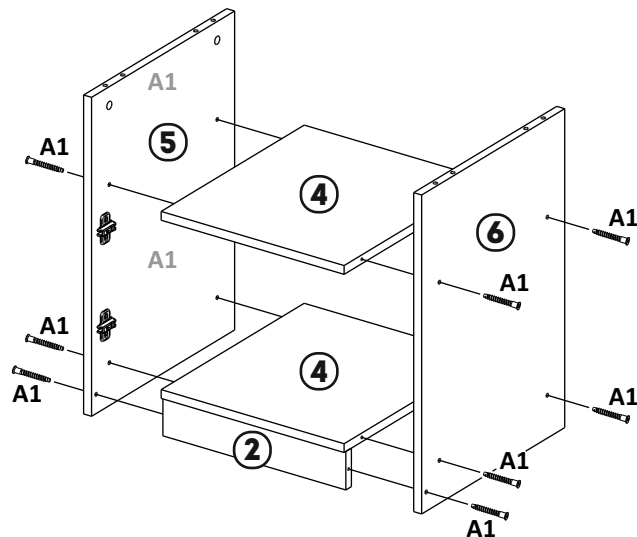


3

Minifix Screw






Dowel

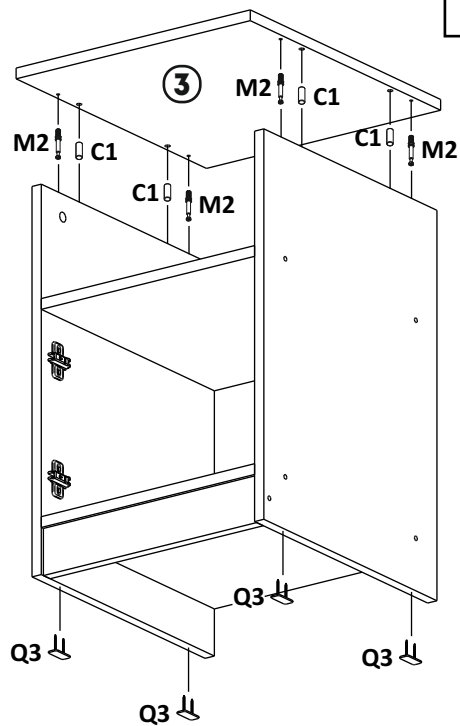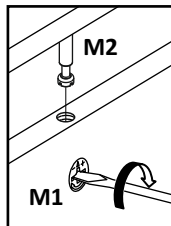

4


Nail
1x16

x20

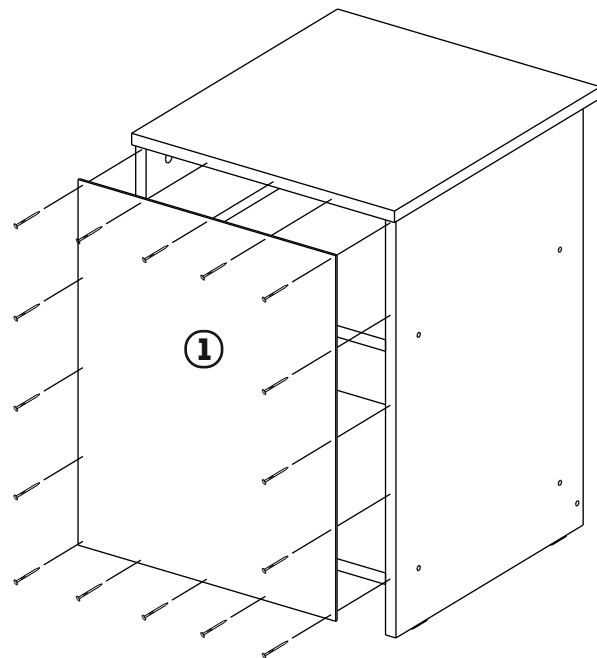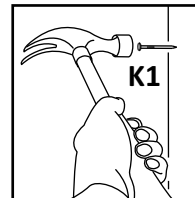

5


Railing Handle



x1


RR 1

Full Overlay Hinge



x2

P5

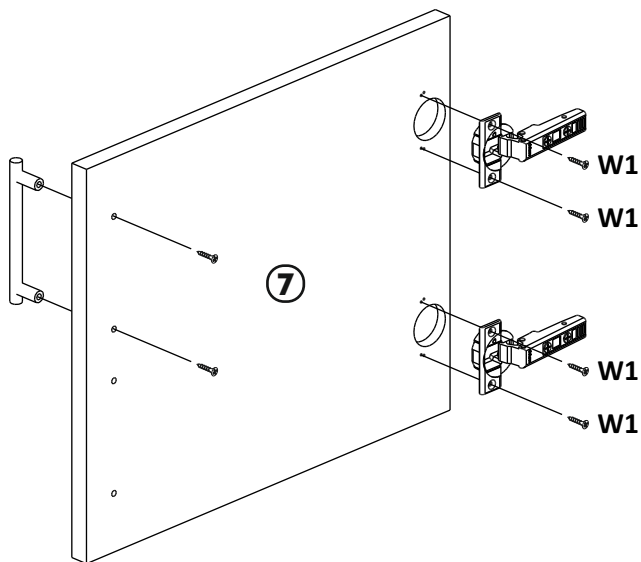

6

