


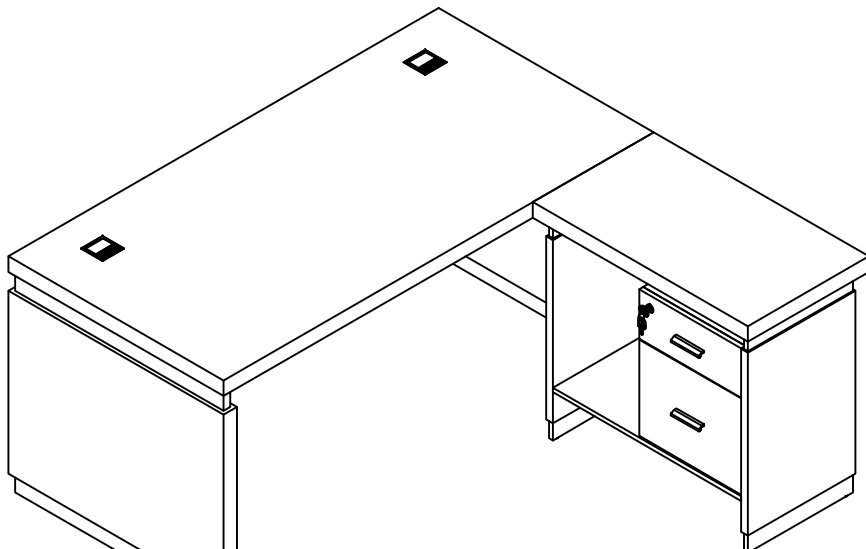
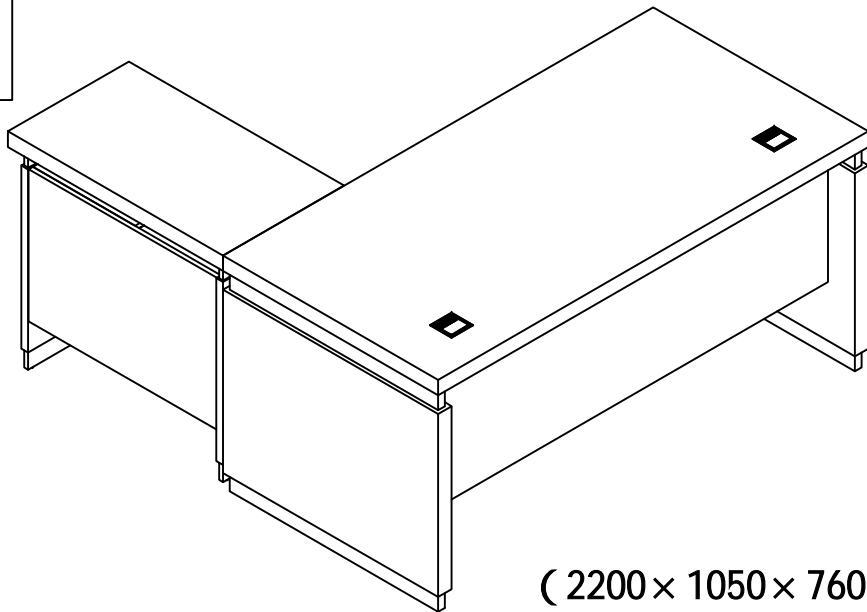

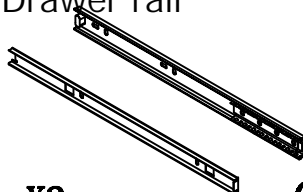
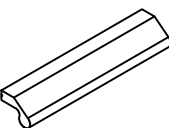


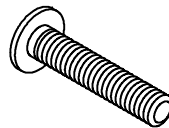






246-000016


<div>Screw</div> <div></div> <div>X24A</div>	<div>Lock bar</div> <div></div> <div>X1F</div>	<div>Screw</div> <div></div> <div>X34K</div>	<div></div> <div></div> <div>(2200× 1050× 760)</div>
<div>Wood Minifix</div> <div></div> <div>X26B</div>	<div>Drawer rail</div> <div></div> <div>X2G</div>	<div>Handle</div> <div></div> <div>X2L</div>	
<div>Minifix Screw</div> <div></div> <div>X44C</div>	<div>Screw</div> <div></div> <div>X8H</div>	<div>Handle screw</div> <div></div> <div>X4M</div>	
<div>Minifix</div> <div></div> <div>X44D</div>	<div>Lock</div> <div></div> <div>C1I</div>		
<div>Wire box</div> <div></div> <div>X2E</div>	<div>Lock metal fix</div> <div></div> <div>X2J</div>		

Ø4*50 STEP:1

To fix the panel 1 on panel 2 and 3

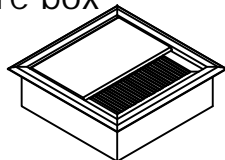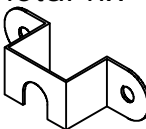
X12

A

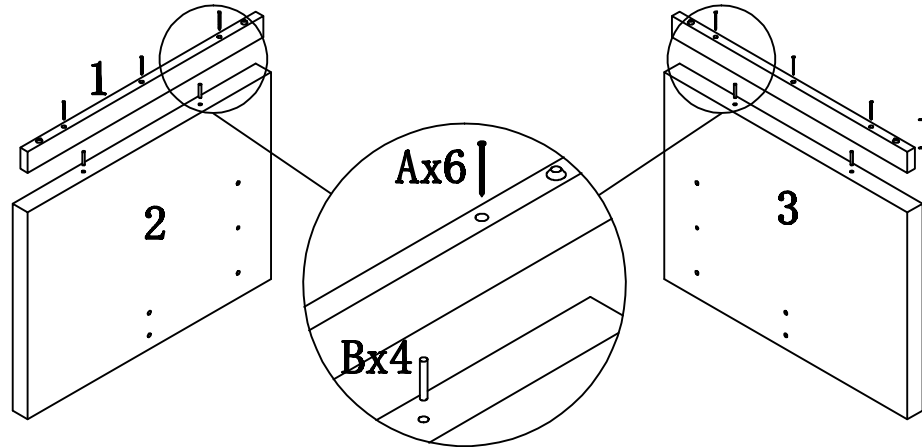



X8

B




To fix the panel 4 on panel 2 and 3

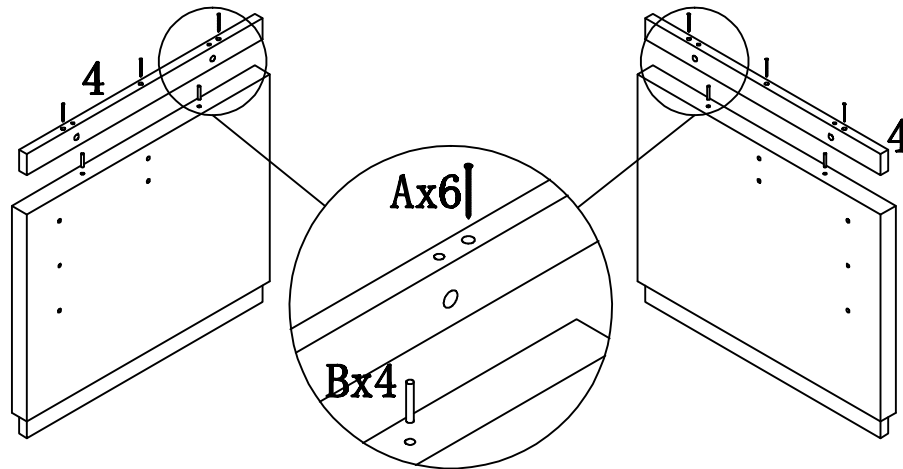




X2

B

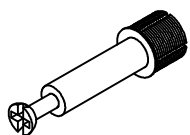

X8


C




X8


D

STEP:2 To fix the minifix screw C on both legs panel

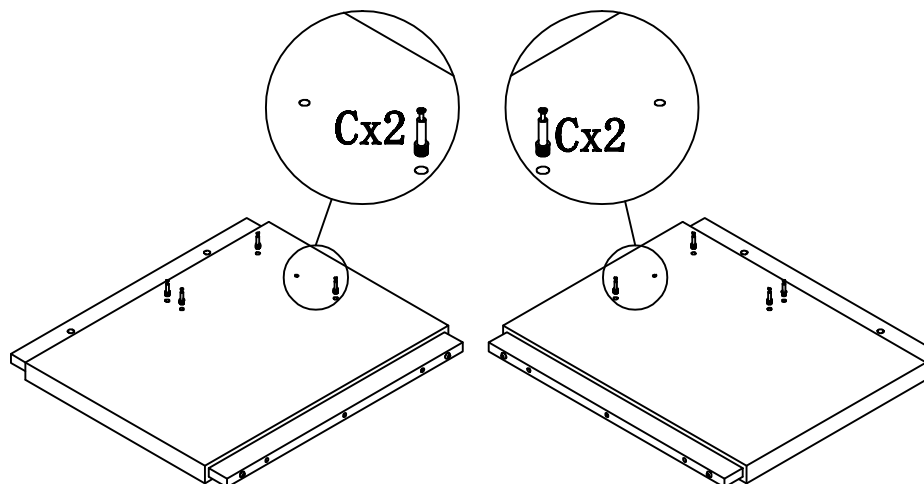


To fix the front panel 5 and middle support panel 55

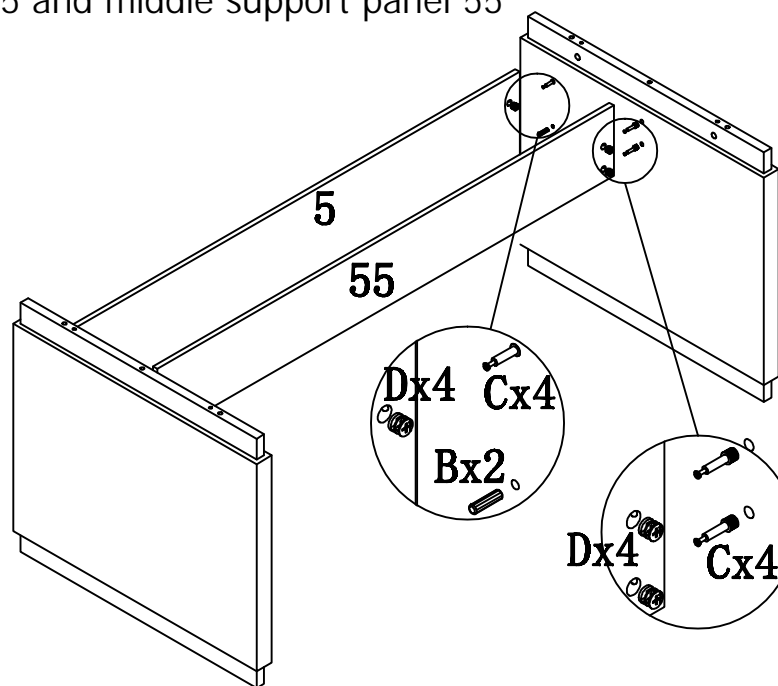

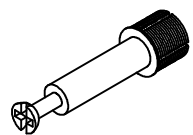


X4

C



X4

D


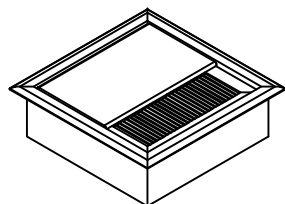


X2

E

STEP:3

To fix the minifix screw C on top panel 6,
then to fix the top panel on legs panel

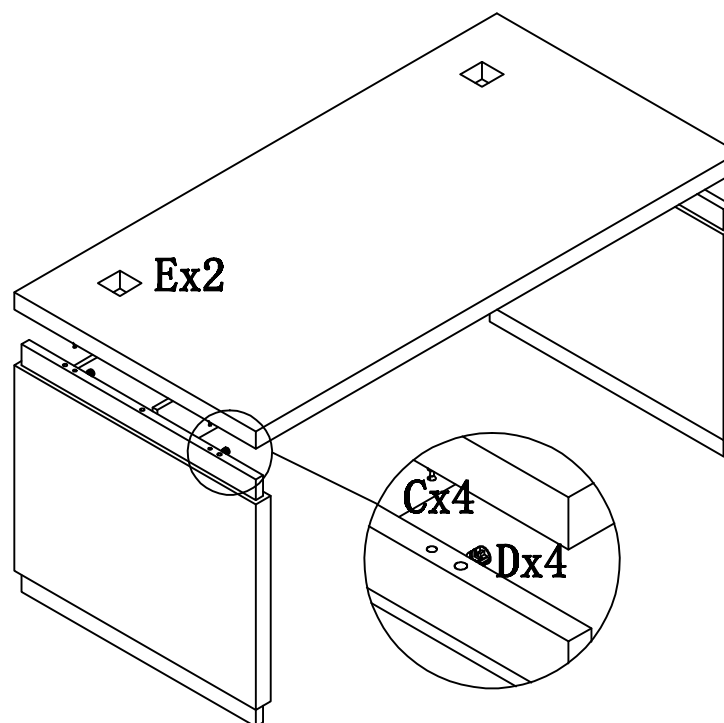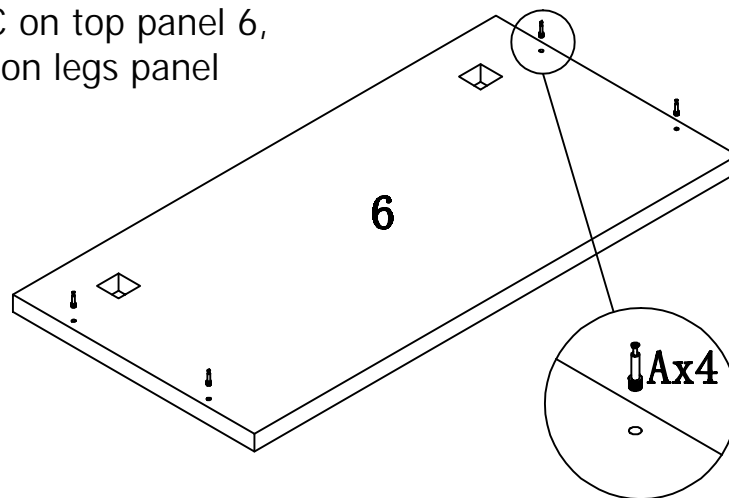


Ø4*50 STEP:4

X12




A


To fix the panel 7 on panel 8 and 9

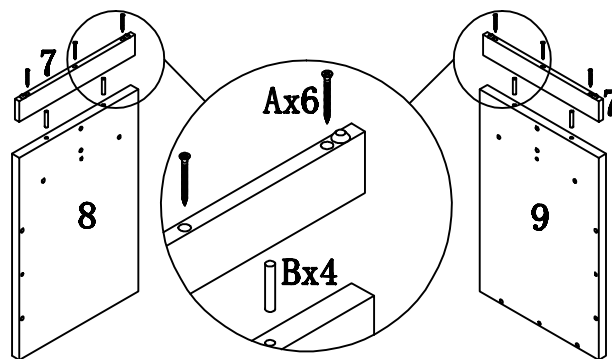

To fix the panel 10 on panel 8 and 9

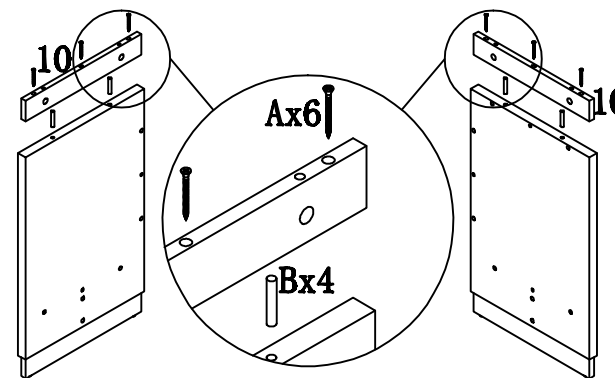


X11




B


To fix the panel 11,12 and 13

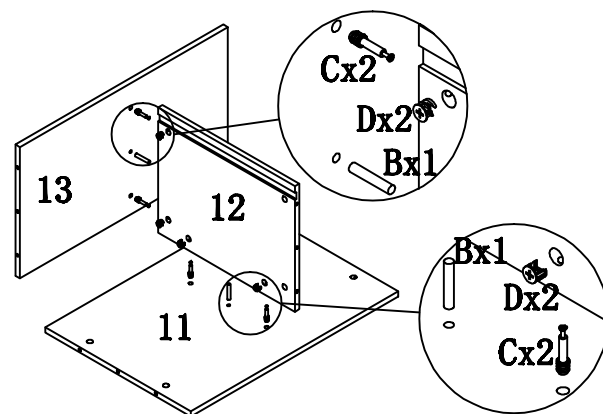

To fix the panel 14

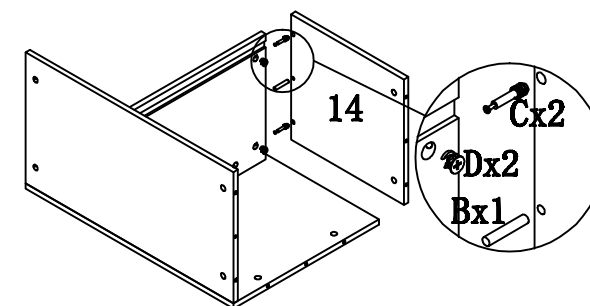


X6







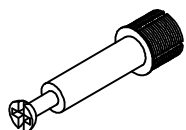

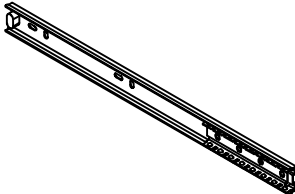












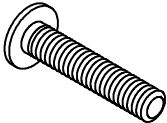
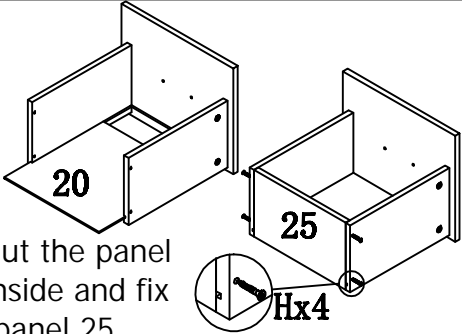

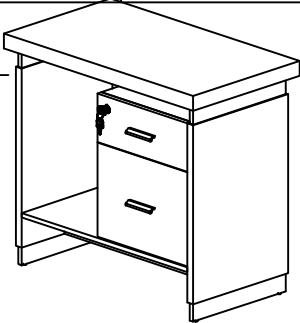
C

X6

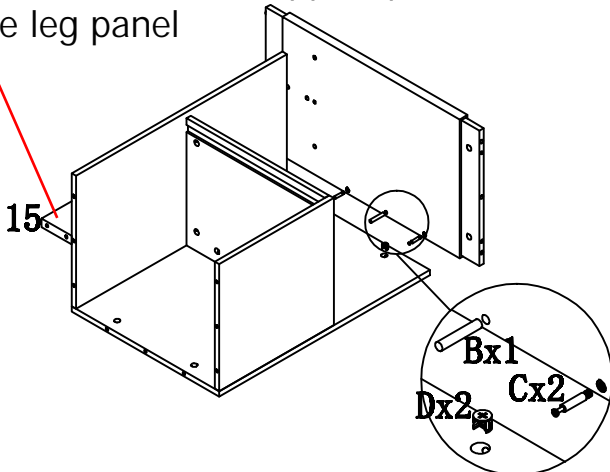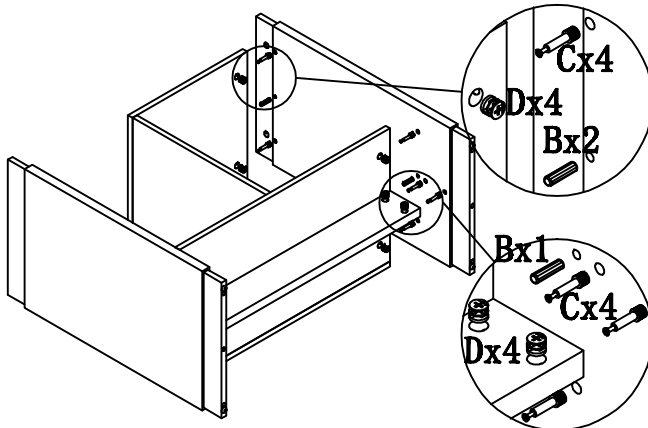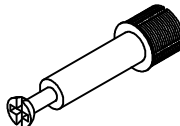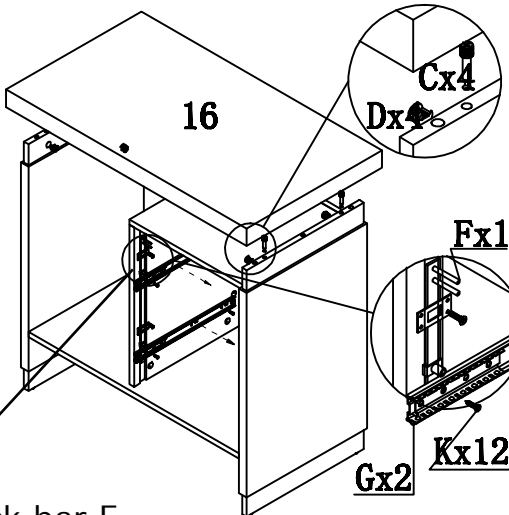

D
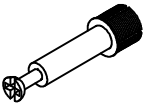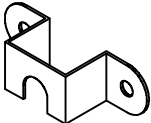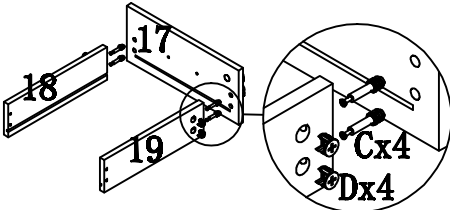
<div></div> <div>X5</div> <div>B</div>	<div>STEP:5 To fix the bottom support panel 15 and one side leg panel</div> <div></div>		<div>To fix the another side leg panel</div> <div></div>
<div></div> <div>X18</div> <div>C</div>			
<div></div> <div>X18</div> <div>D</div>	<div></div> <div>X1</div> <div>F</div>	<div>To fix the side table top panel 16 finally</div> <div></div>	
<div>Ø3.5*14</div> <div></div> <div>X20</div> <div>K</div>	<div></div> <div>X2</div> <div>G</div>	<div>To fix the lock bar F</div>	<div>To fix the both side rail G</div>

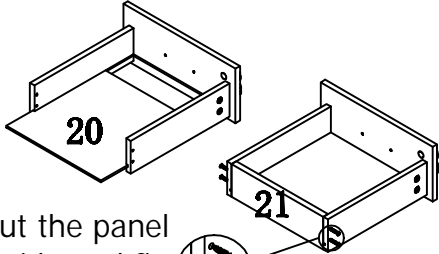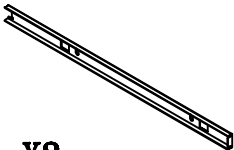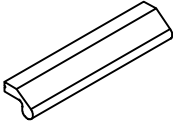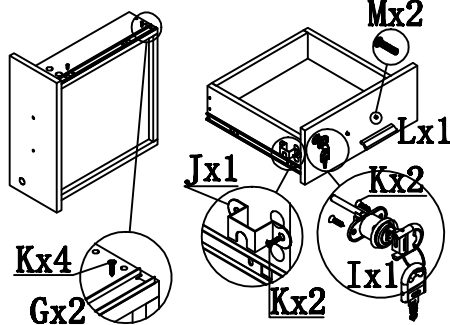 <p>X4 C</p>	 <p>X2 J</p>	<p>STEP:6</p>  <p>To fix the panel 17,18,19</p>	
 <p>X4 D</p>	<p>Ø3.5*14</p>  <p>X10 K</p>	 <p>To put the panel 20 inside and fix the panel 21</p>	
 <p>X2 G</p>	 <p>X2 L</p>	 <p>To fix the both side rail G and lock I ,lock metal fix J and handle L</p>	
<p>Ø4*30</p>  <p>X8 H</p>	<p>M4*18</p>  <p>X4 M</p>	 <p>To put the panel 20 inside and fix the panel 25</p>	
 <p>C1 I</p>			<p>FINISH</p>  <p>To use screw K to fix bottom panel 20 four side more tough</p>