


246-000022


Minifix Screw

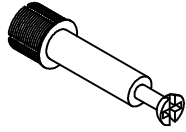

X26

A


Minifix

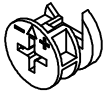

X26


B

Wood Minifix

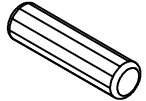

X7

C

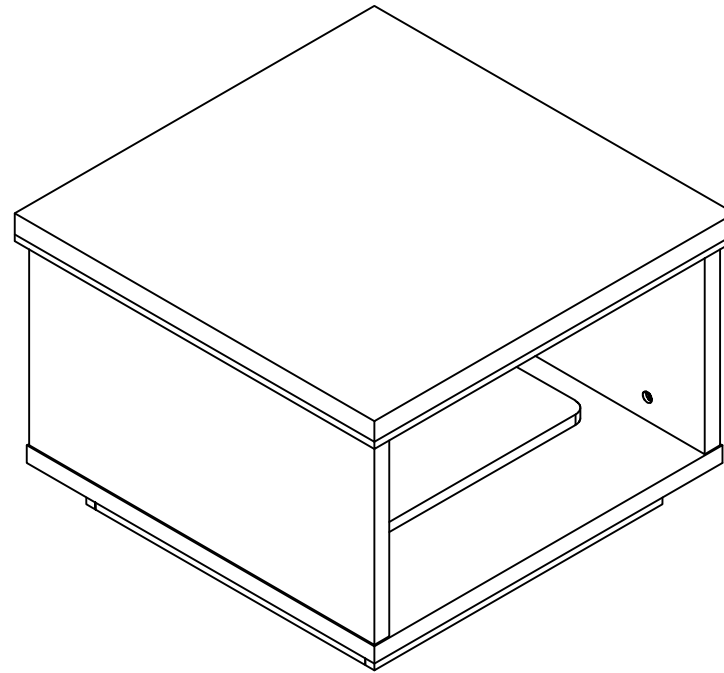


(600X600X420)

STEP:1

To fix the side panel(1)and shelf panel (2)


X2

A

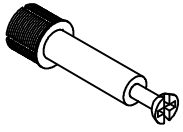



X2

B

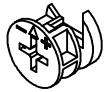


X1

C

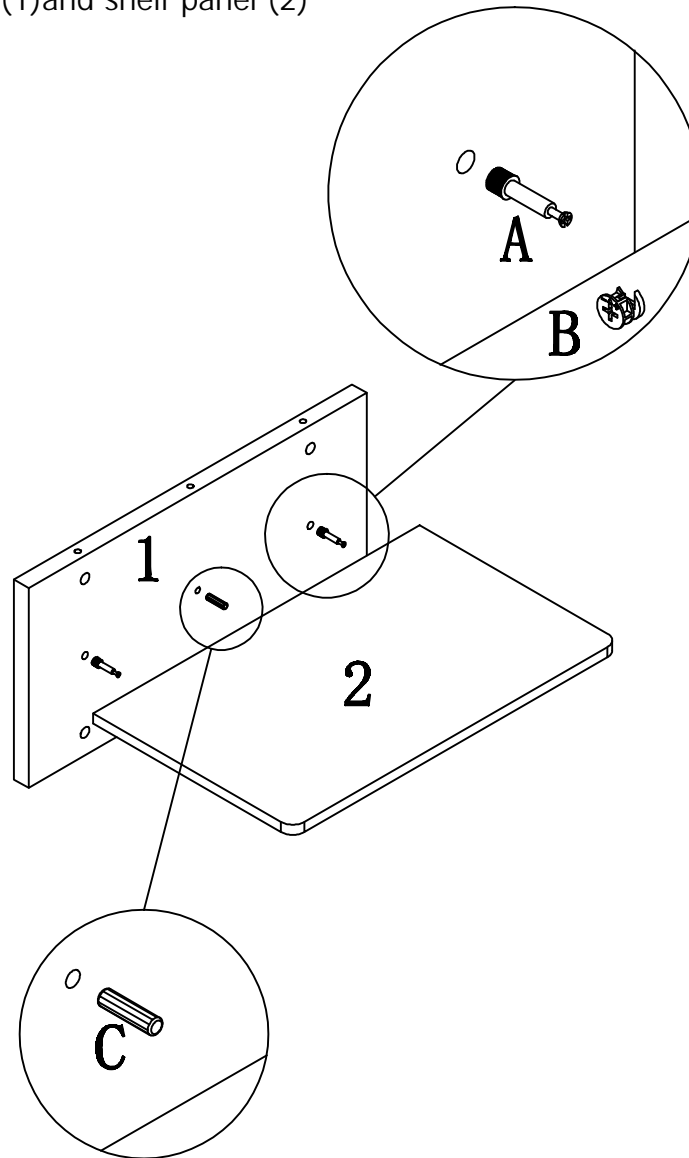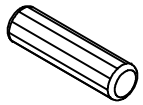


STEP:2

To fix the panel(3)

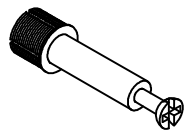


X2

A

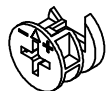



X2

B

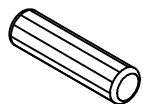


X1

C

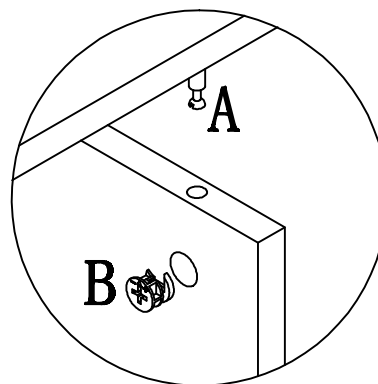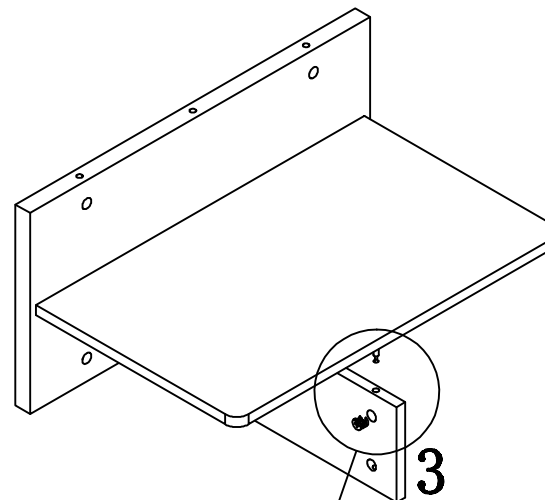

STEP:3

To fix the bottom panel(4)

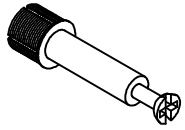


X4

A




X4

B

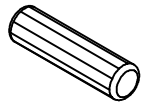


X2

C

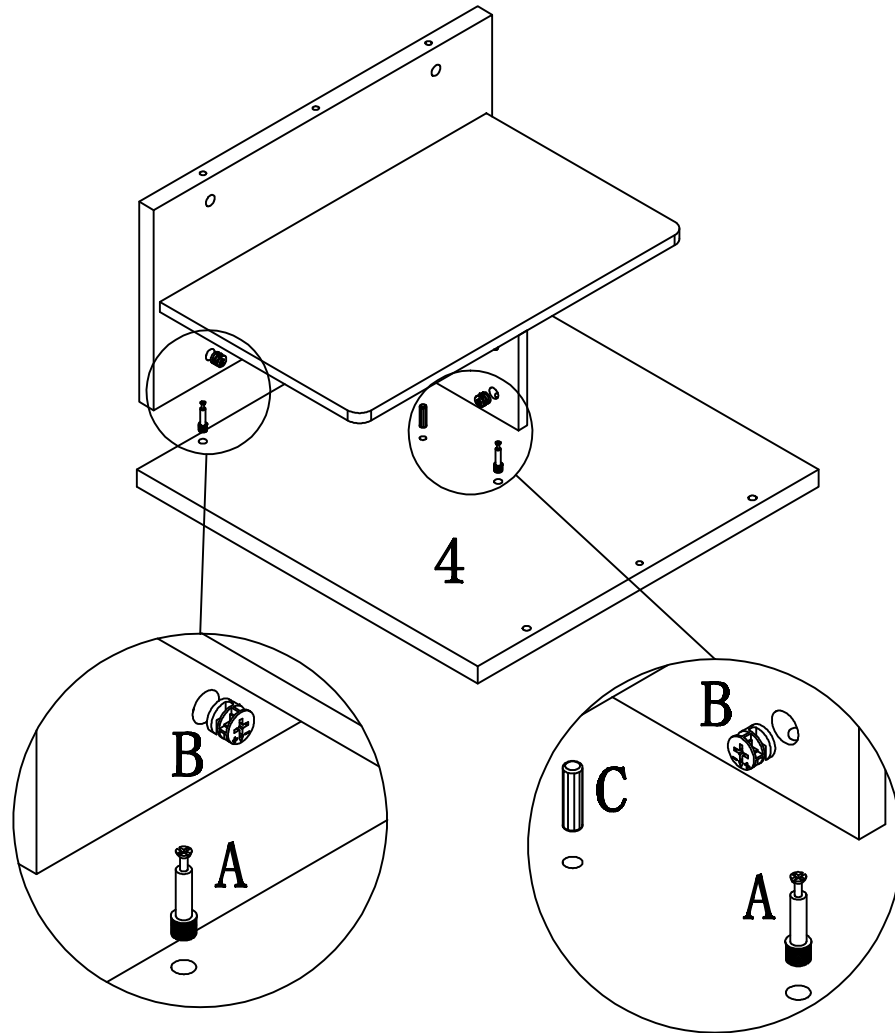


STEP:4

To fix the side panel (5) on bottom panel(4)

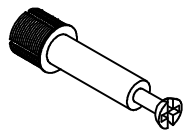


X2

A

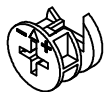


X2

B

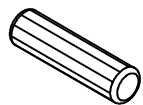


X1

C

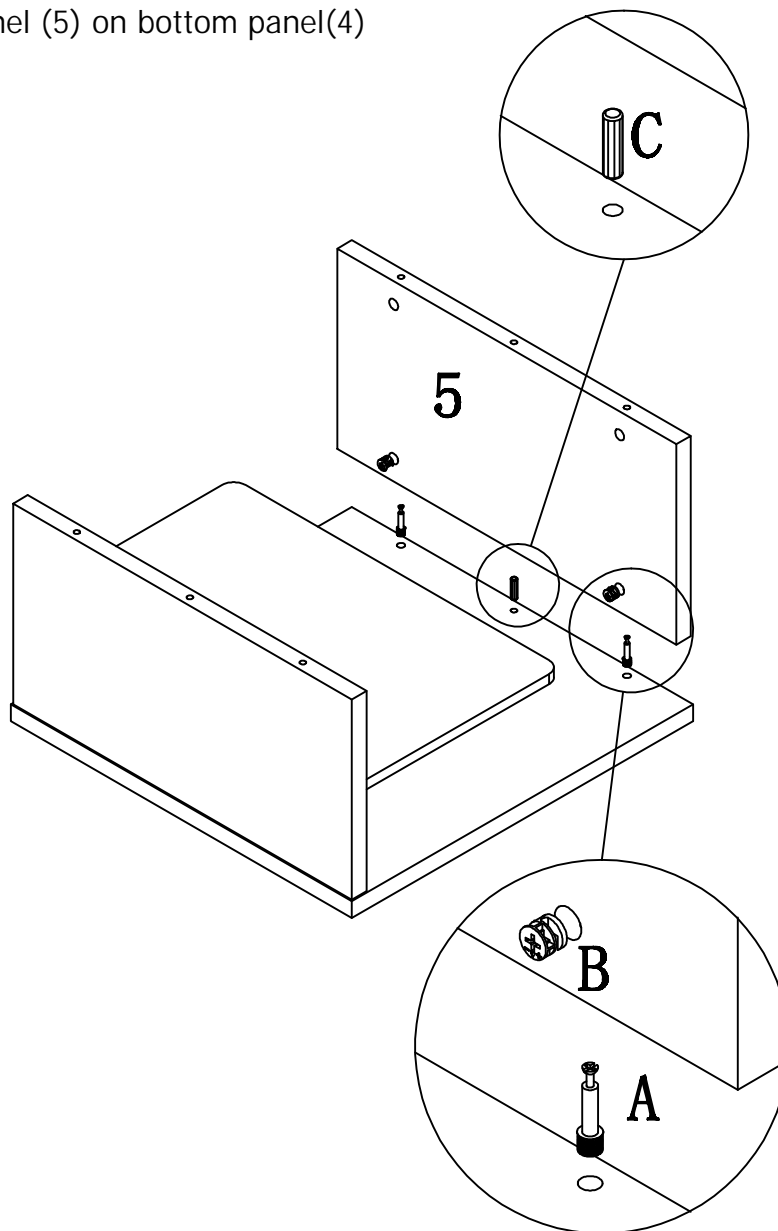


STEP:5

To fix the top panel (6) on both side panel

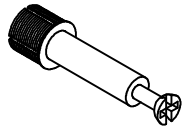


X4

A

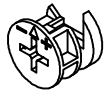


X4

B

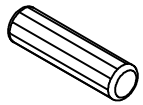


X2

C

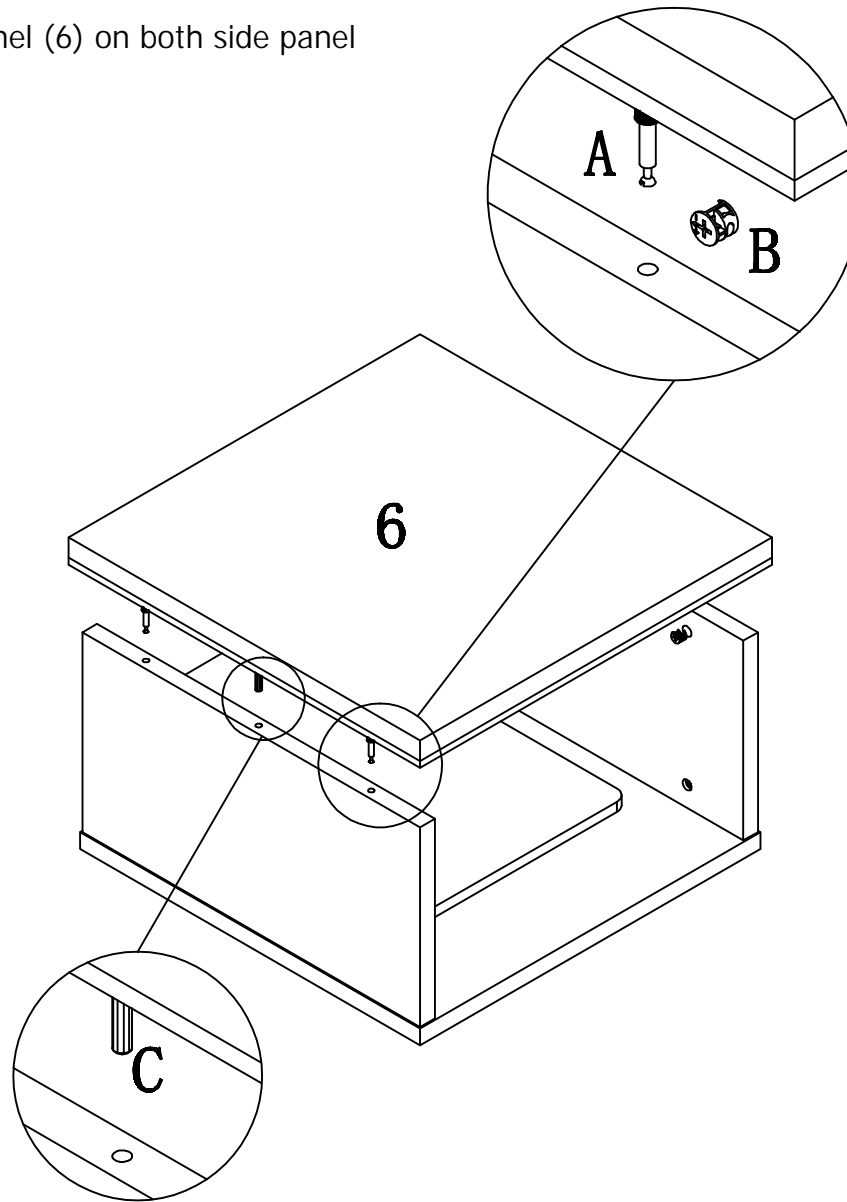

STEP:6

To fix the foot stand support panel(7 & 8)

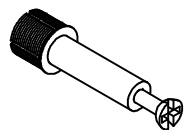



X8

A



X8


B

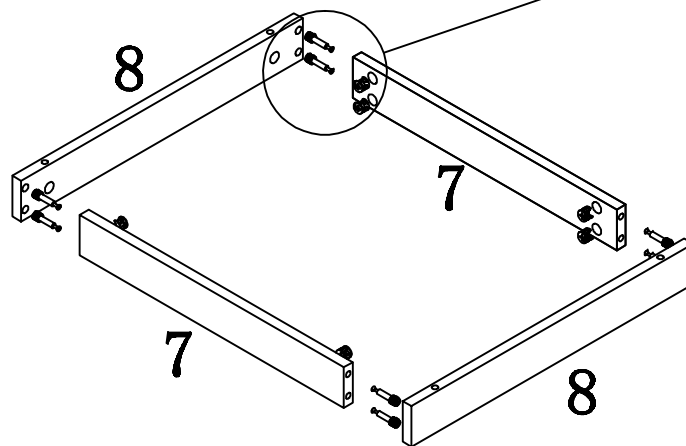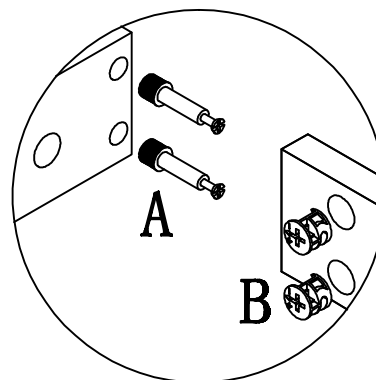

STEP:7

To fix bottom panel on foot stand support

FINISH

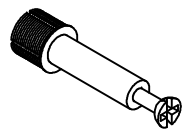

X4

A



X4

B

