















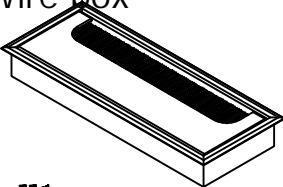
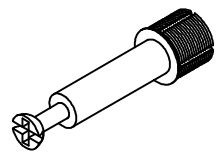



246-000015

| | | | |
|--|---|--|---|
| <div>Minifix Screw</div> <div></div> <div>X74A</div> | <div>Screw4*30</div> <div></div> <div>X4F</div> | <div>Full overlay hinge</div> <div></div> <div>X2K</div> | <div></div> <div></div> <div>(2200× 1050× 760)</div> |
| <div>Minifix</div> <div></div> <div>X74B</div> | <div>Drawer rail</div> <div></div> <div>X1G</div> | <div>Handle</div> <div></div> <div>X2L</div> | |
| <div>Wood Minifix</div> <div></div> <div>X12C</div> | <div>Lock</div> <div></div> <div>X1H</div> | <div>Handle screwM4*18</div> <div></div> <div>X4M</div> | |
| <div>Shelves fix screw</div> <div></div> <div>X4D</div> | <div>Screw4*20</div> <div></div> <div>X4I</div> | <div>Wire box</div> <div></div> <div>X1N</div> | |
| <div>Screw3.5*14</div> <div></div> <div>X24E</div> | <div>Lock metal fix</div> <div></div> <div>X1J</div> | <div>Wire box</div> <div></div> <div>X1O</div> | |

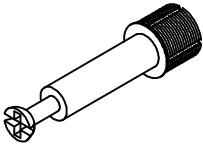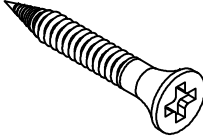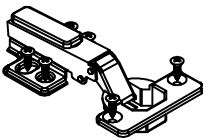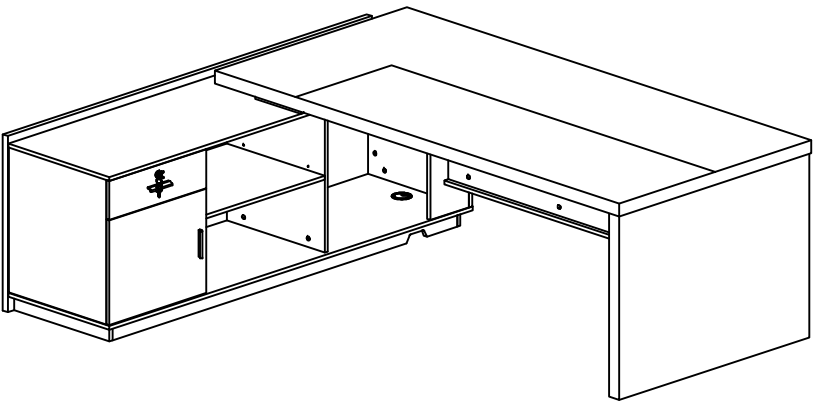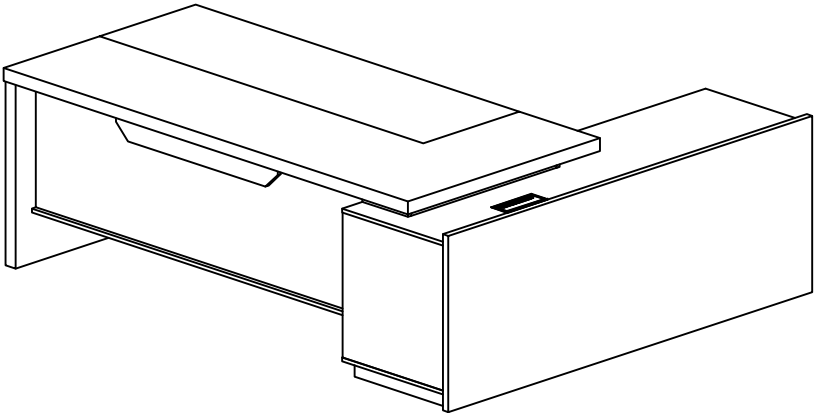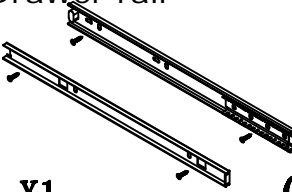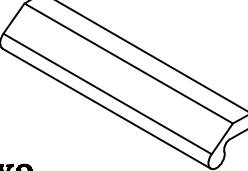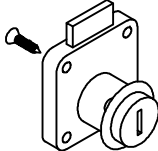


X28

A



X28

B




X8

C


STEP:1

To fix the back panel 1 and support panel 2 and 3

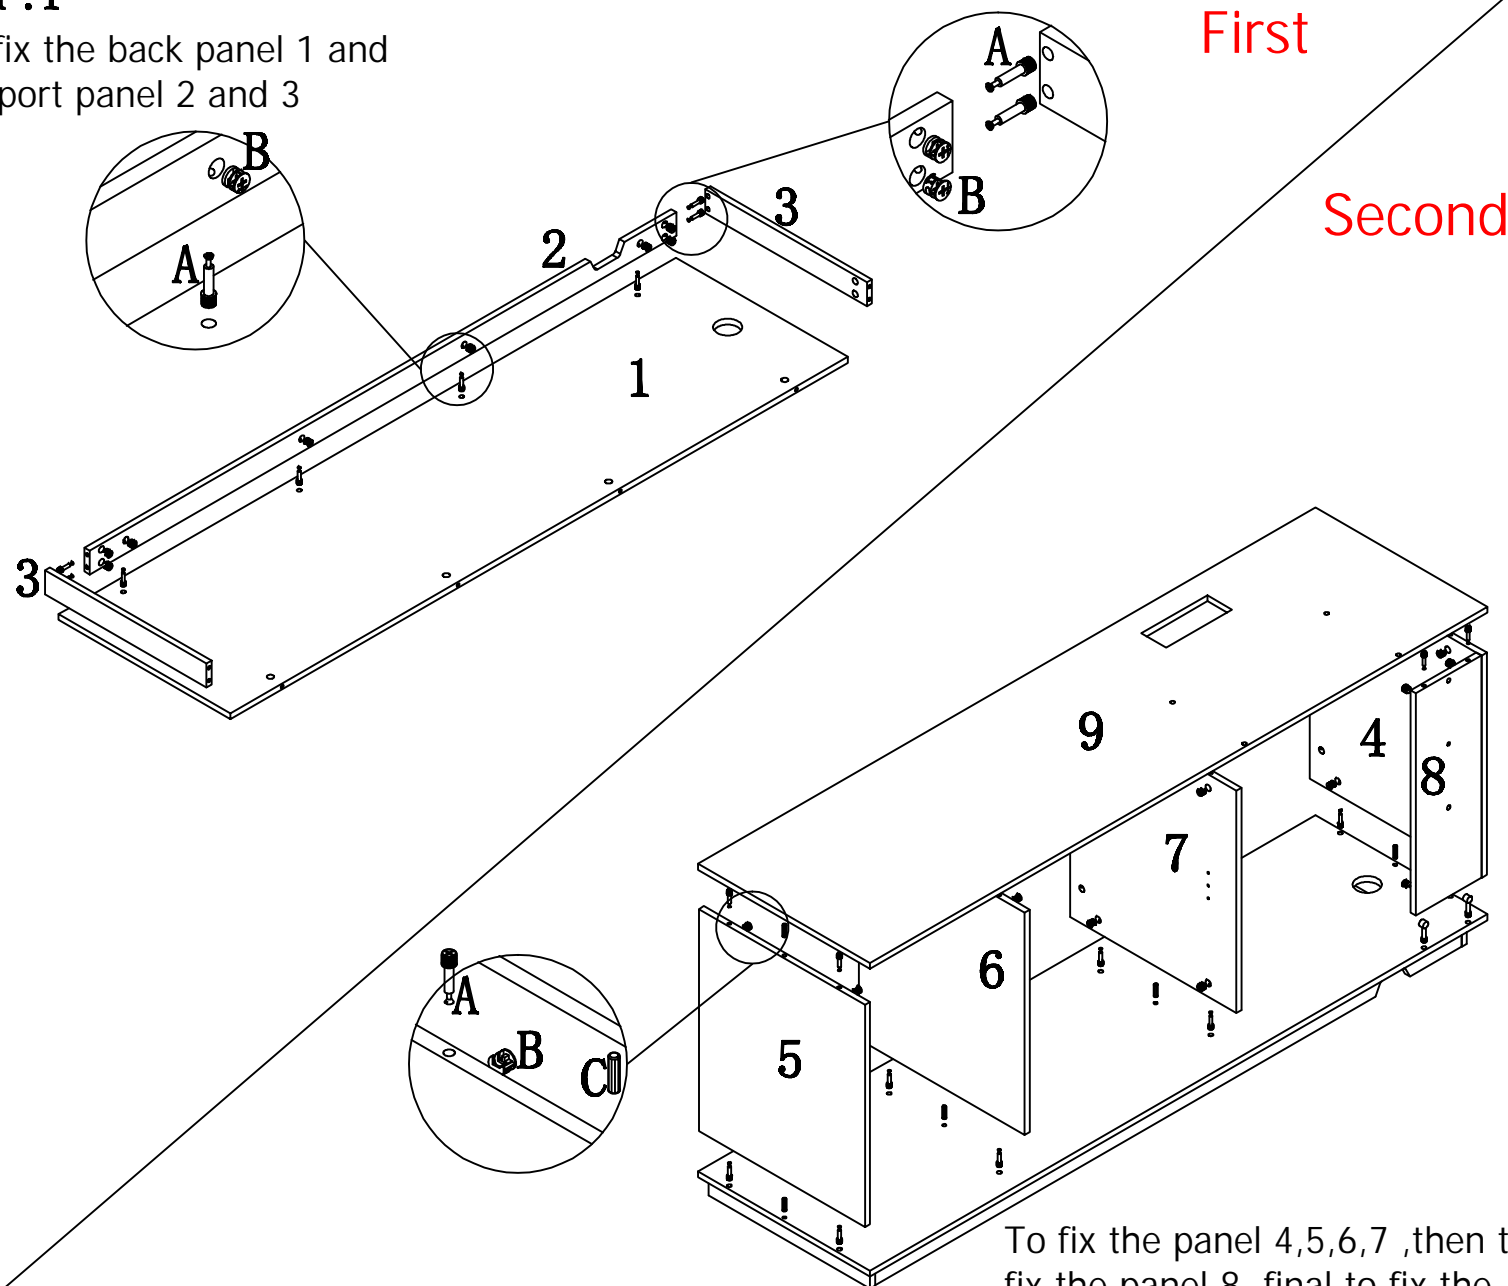

First

Second

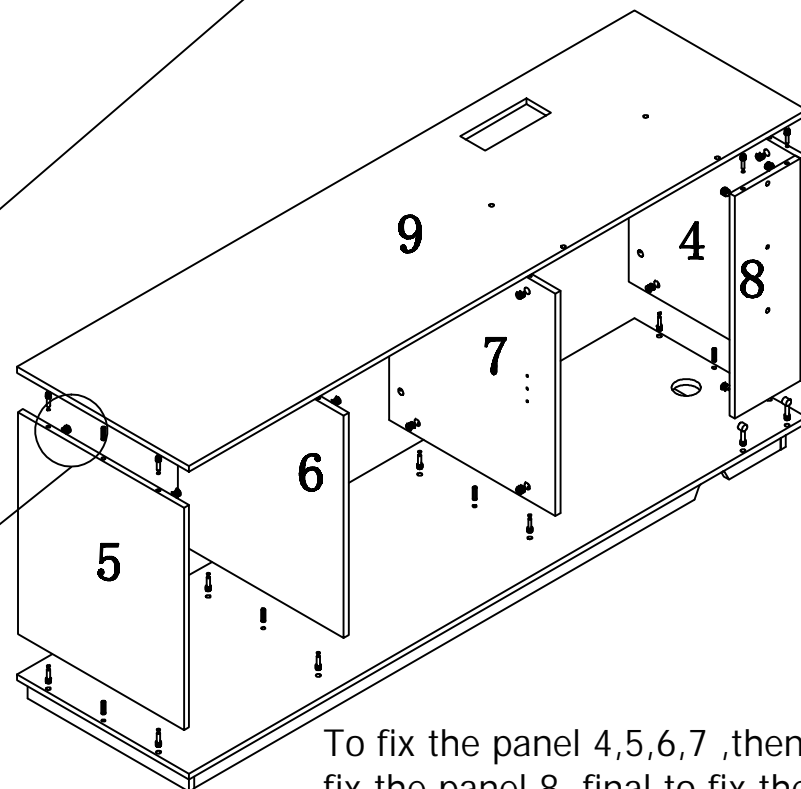


To fix the panel 4,5,6,7 ,then to fix the panel 8 ,final to fix the top panel 9

STEP:2

To fix the back panel 10


X20

A

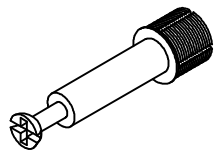


X1

G

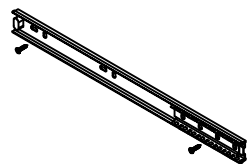


X20

B



X4

C

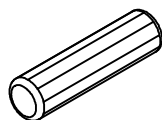

X4


D











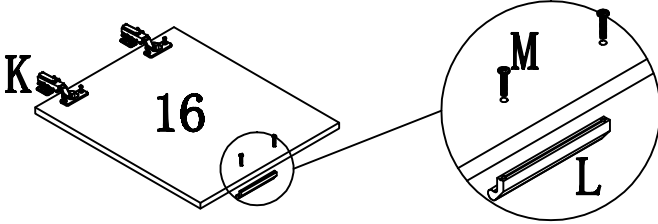
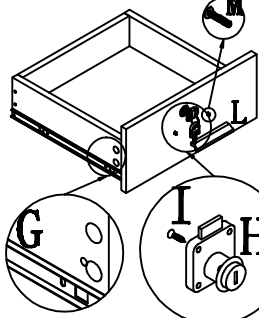
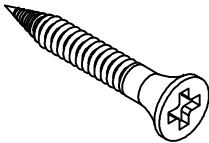
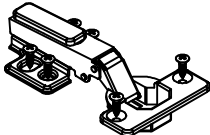
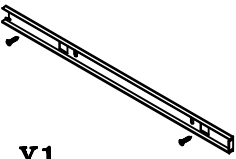
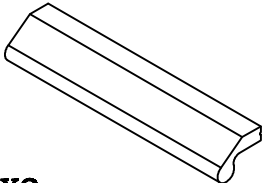


3.5*14

X6


E

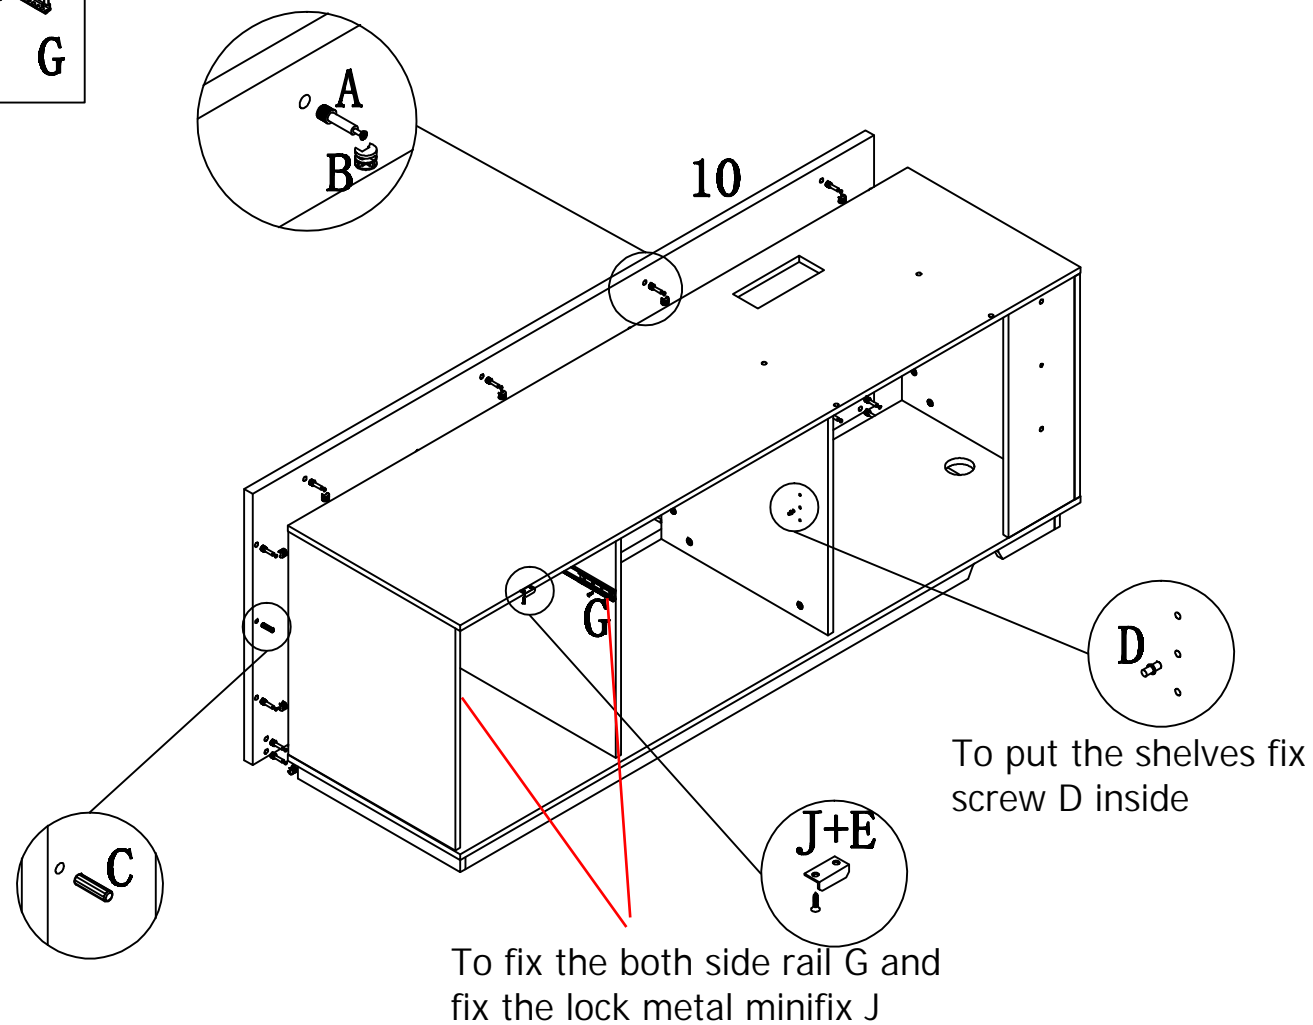
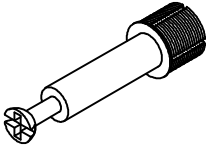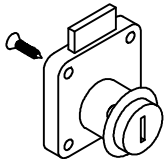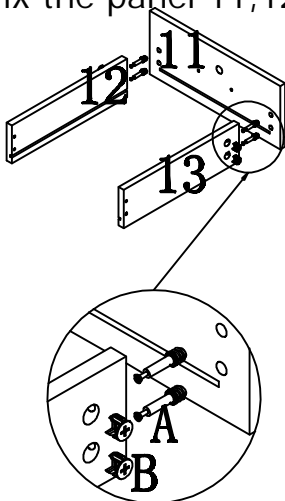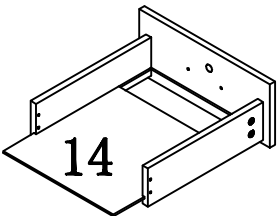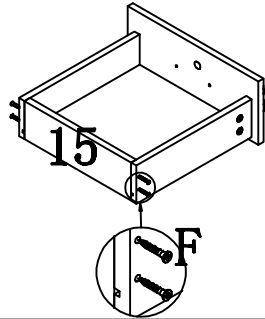
| | | | | |
|--|---|--|--|--|
|  <p>X4 A</p> |  <p>X1 H</p> | <p>M4*18STEP:3</p>  <p>X4 M</p> | <p>To put the panel 14 inside and fix the panel 15</p> | <p>To fix the both side rail G</p> |
|  <p>X4 B</p> | <p>4*20</p>  <p>X4 I</p> | <p>To fix the panel 11,12,13</p>  | |   <p>To use screw E to fix bottom panel four side more tough</p> |
| <p>3.5*14</p>  <p>X18 E</p> |  <p>X1 J</p> | <p>To fix the hinge K on door panel 16 and fix the handle L ,then to fix in cabinet</p>  | |  <p>To fix the lock H and handle L</p> |
| <p>4*30</p>  <p>X4 F</p> |  <p>X2 K</p> | | | |
|  <p>X1 G</p> |  <p>X2 L</p> | | | |


STEP:4

To fix the front panel 20 and 21

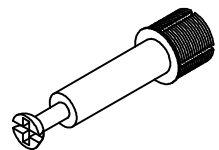


X16

A




X16

B




X1

N

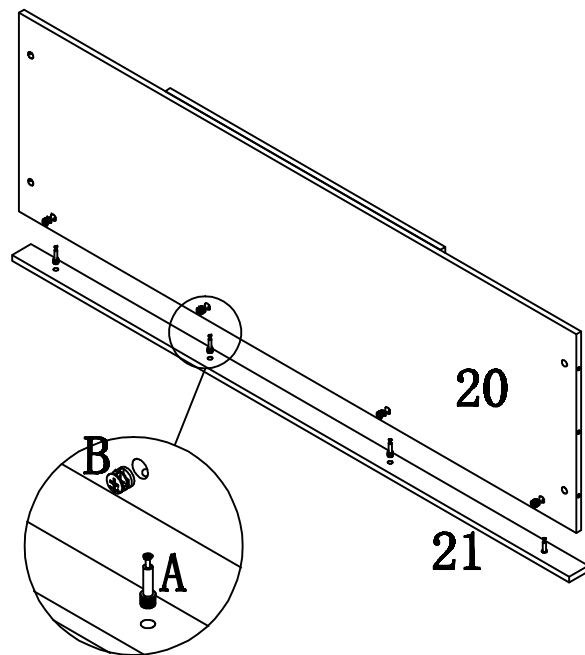


To fix the side table support panel 18 and 19

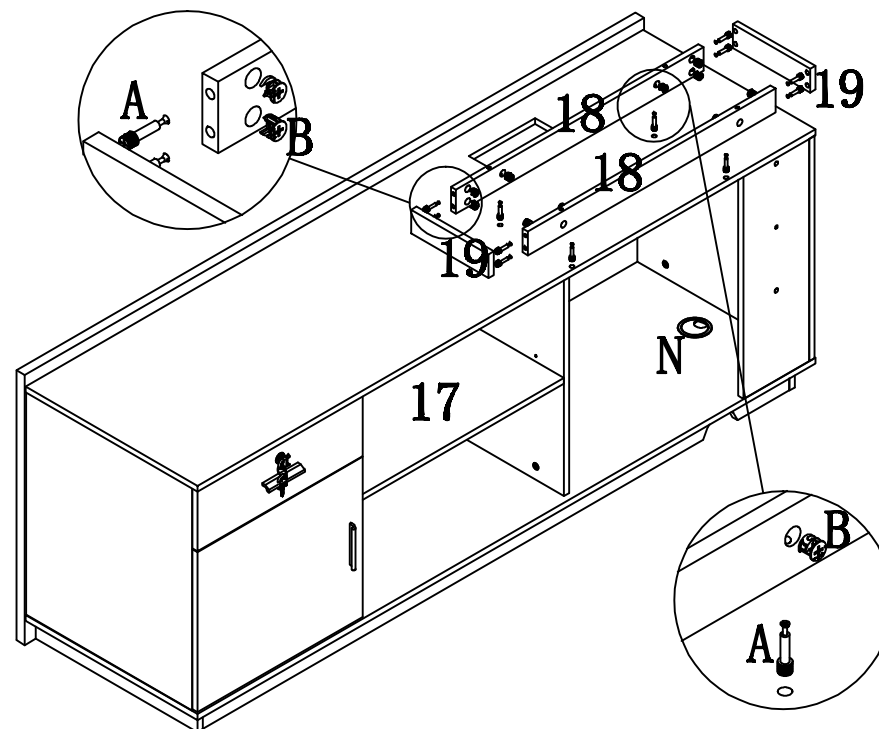


STEP:5

To fix the front panel and side table and leg panel 22

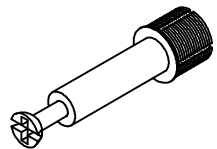


X4

A




X4


B



X2


C

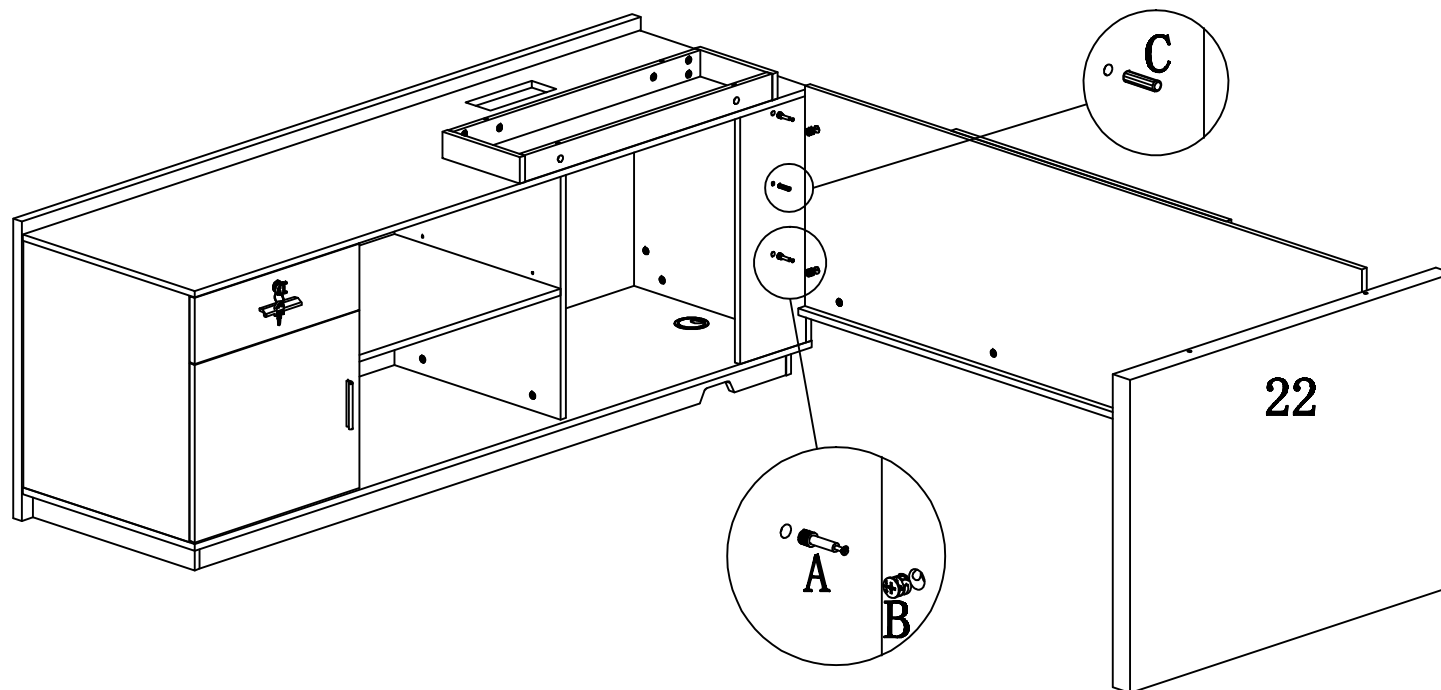

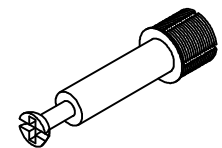


X6

A



X6

B

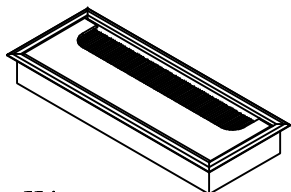

X1

0

STEP:6

To fix the table top panel 23

FINISH

