

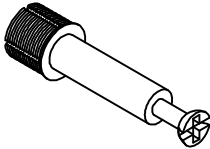

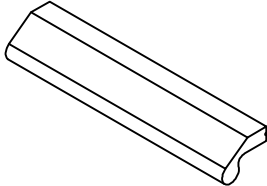
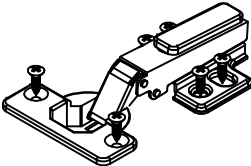


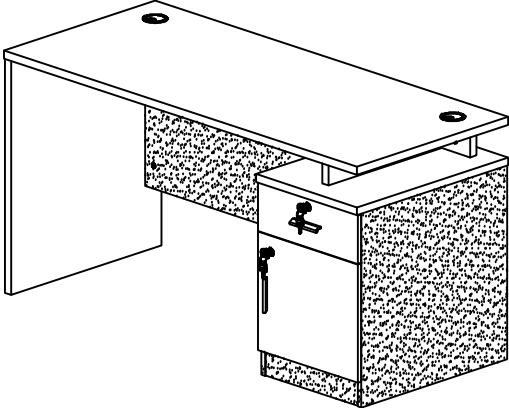
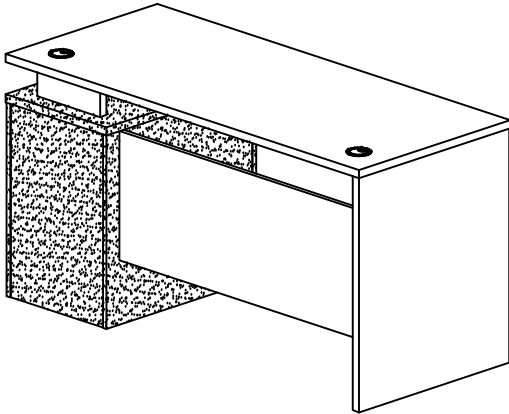
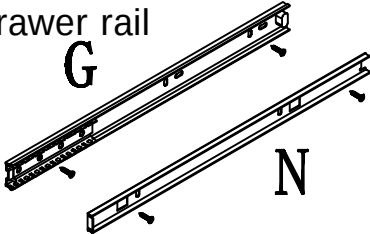
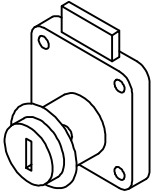
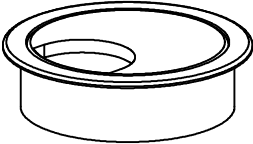
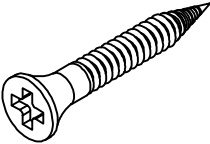


Minifix Screw  X37 A	Screw 3.5*14  X26 E	Handle  X2 I	Full overlay hinge  X2 M
Minifix  X37 B	Lock metal minifix  X2 F	Handle screw M*18  X4 J	  M655 (1500X800X760)
Wood Minifix  X8 C	Drawer rail  X1 G/N	Lock  X2 K	
Wire box  X2 D	Screw 4*30  X4 H	Screw 4*20  X8 L	

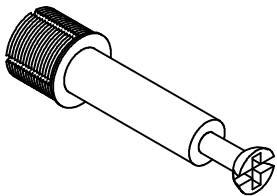


X6

A

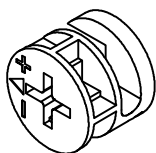

X6

B








X2

C


STEP:1

To fix the panel 3 and panel 4,
then to fix panel 2 ,final to fix the panel 1

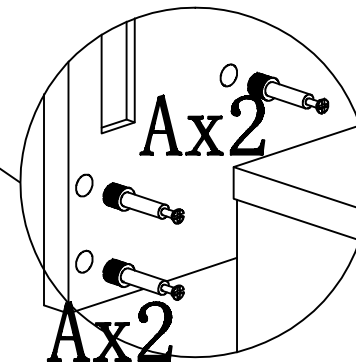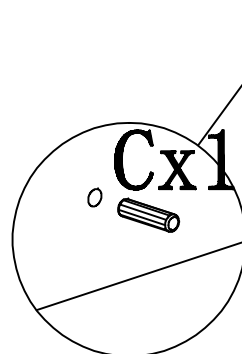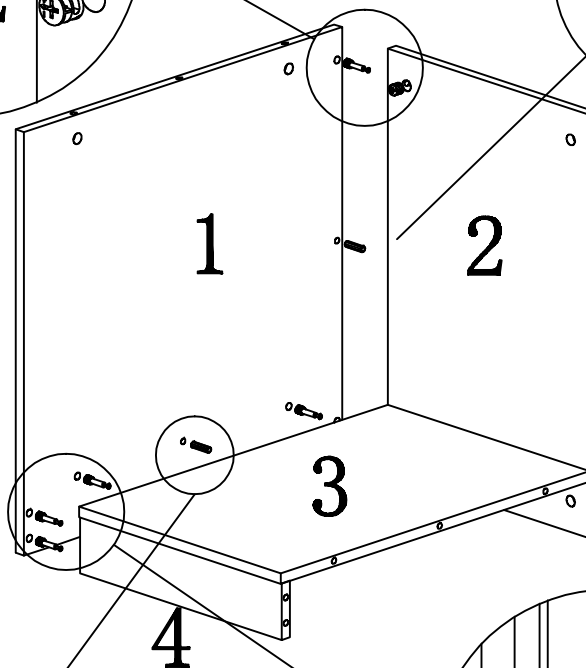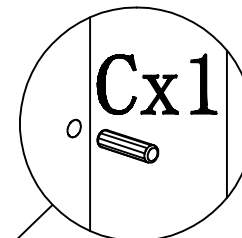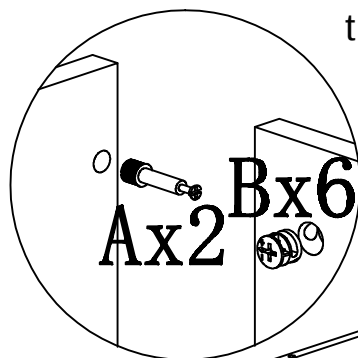


STEP:2

To fix the side panel 5

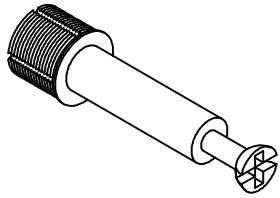

X6

A

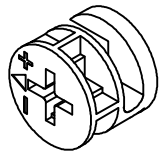


X6


B



X2


C

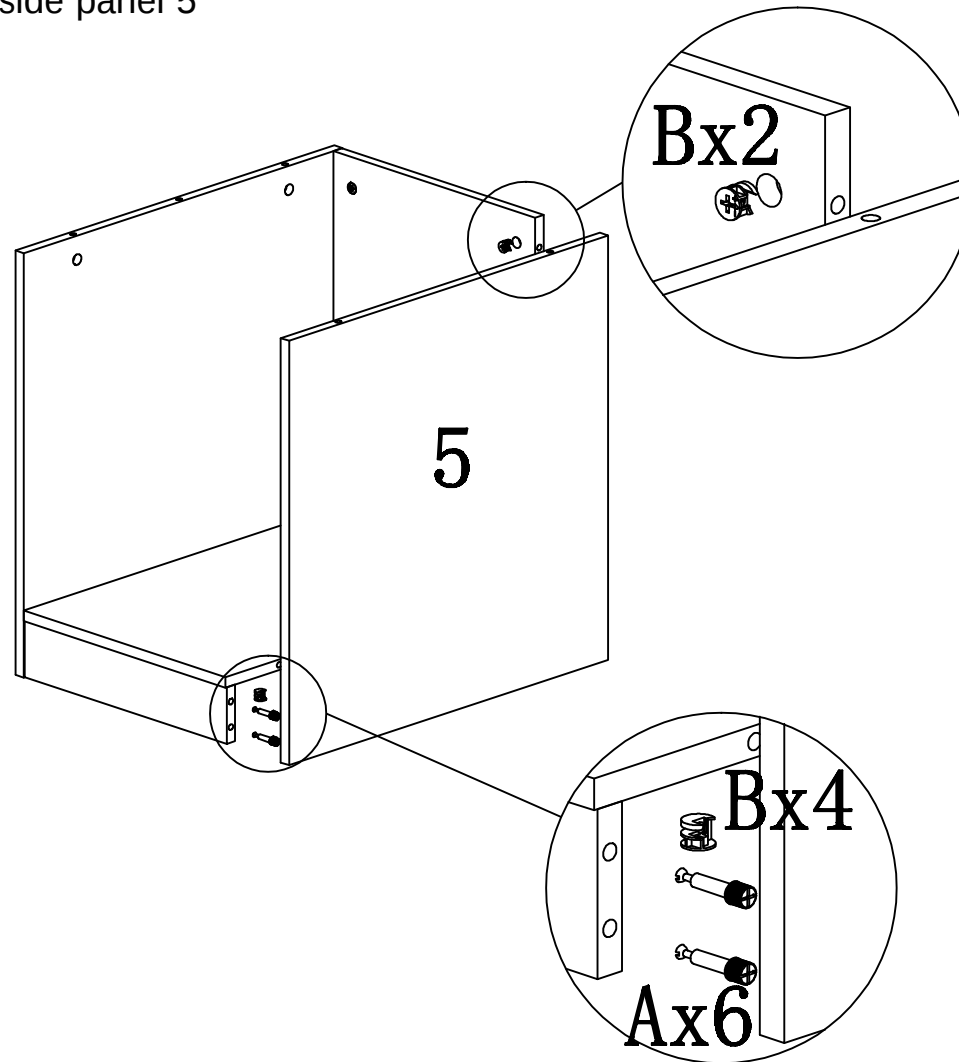

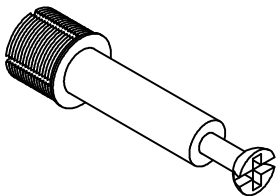


X4

A

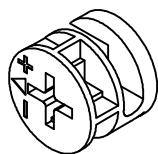

X4

B




X2


C

STEP:3


To fix the upper panel 6

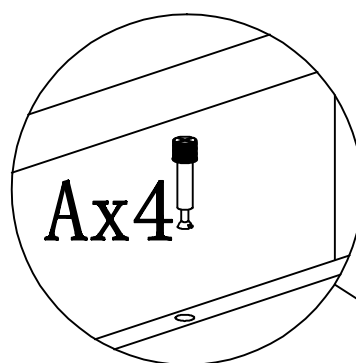


Ax4

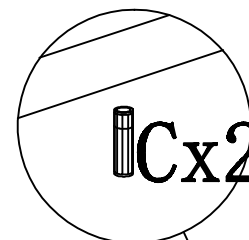

Cx2

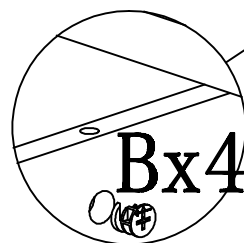


Bx4

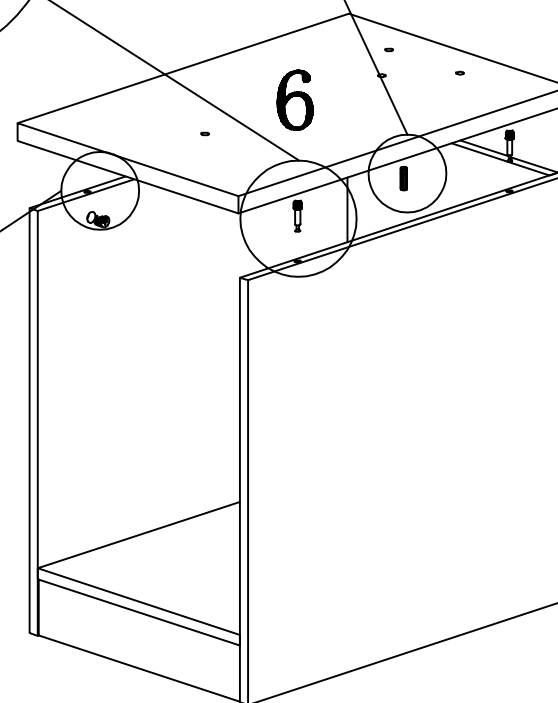


STEP:4

To fix the support panel 7 and panel 8

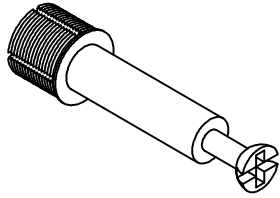


X1

A

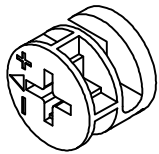


X1

B

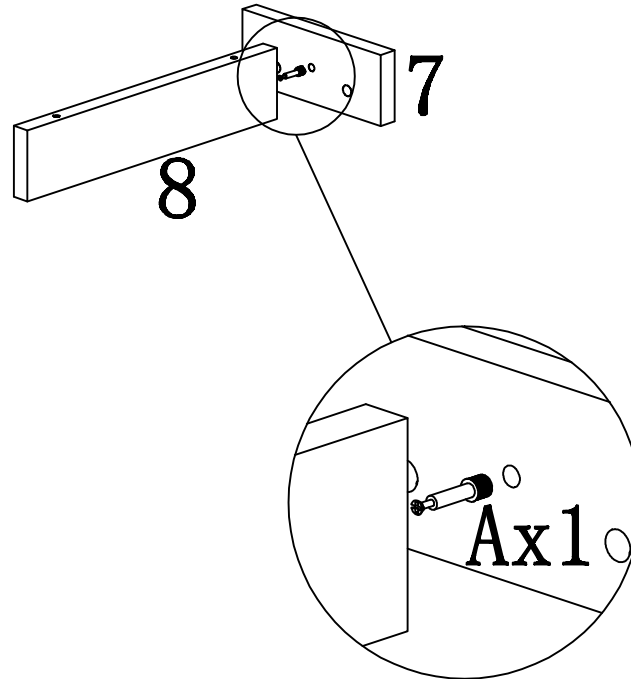


STEP: 5

To fix the support frame on upper panel 6

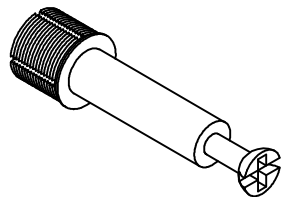


X4

A

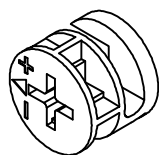


X4

B

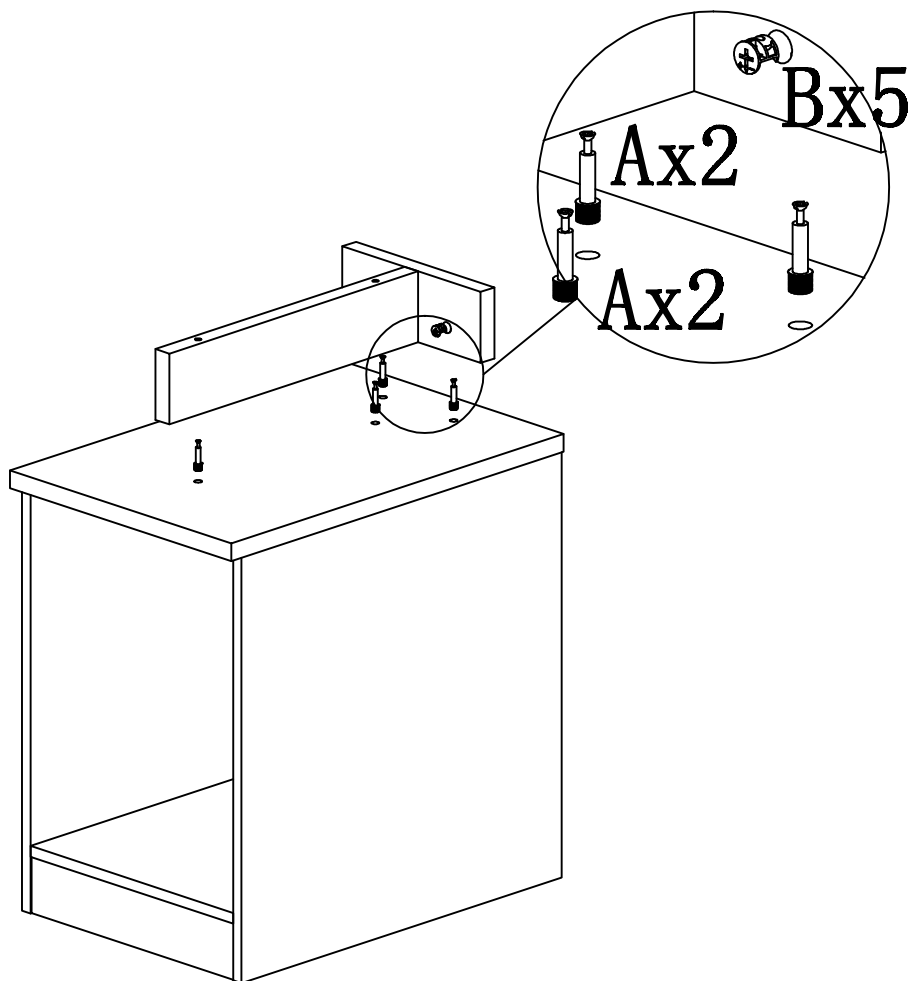


STEP:6 To fix the front panel 9 and side panel 10

To fix the support panel 55

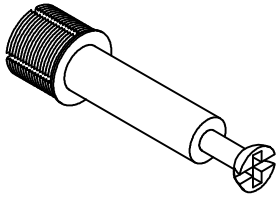


X8

A

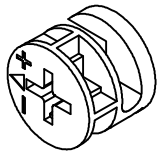


X8

B




X2

C

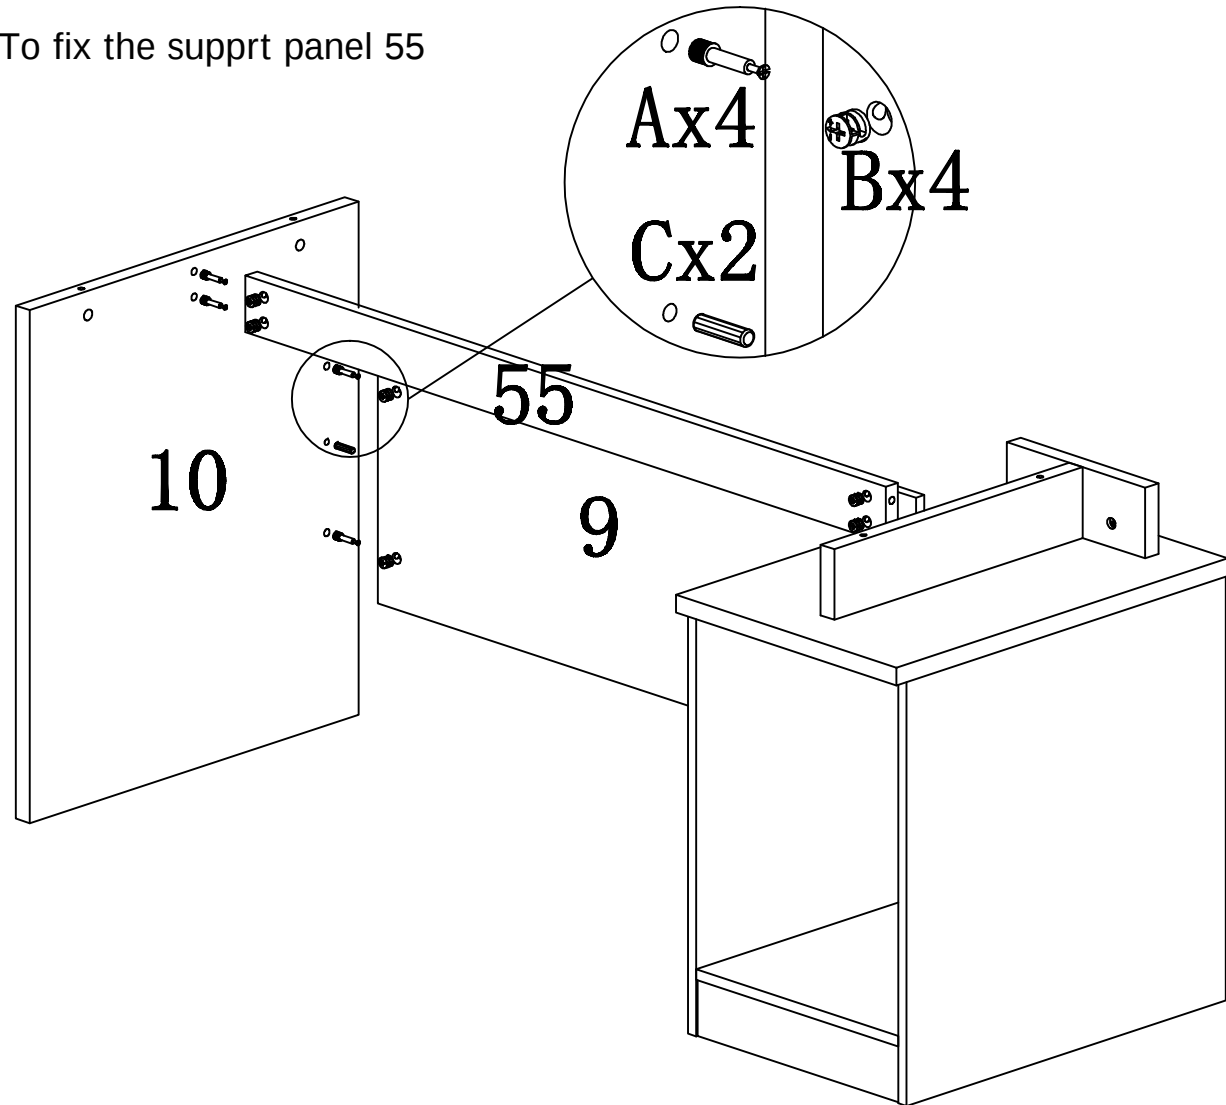


STEP:7 To put the mixfix B on both side

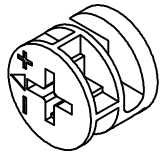


X4

B

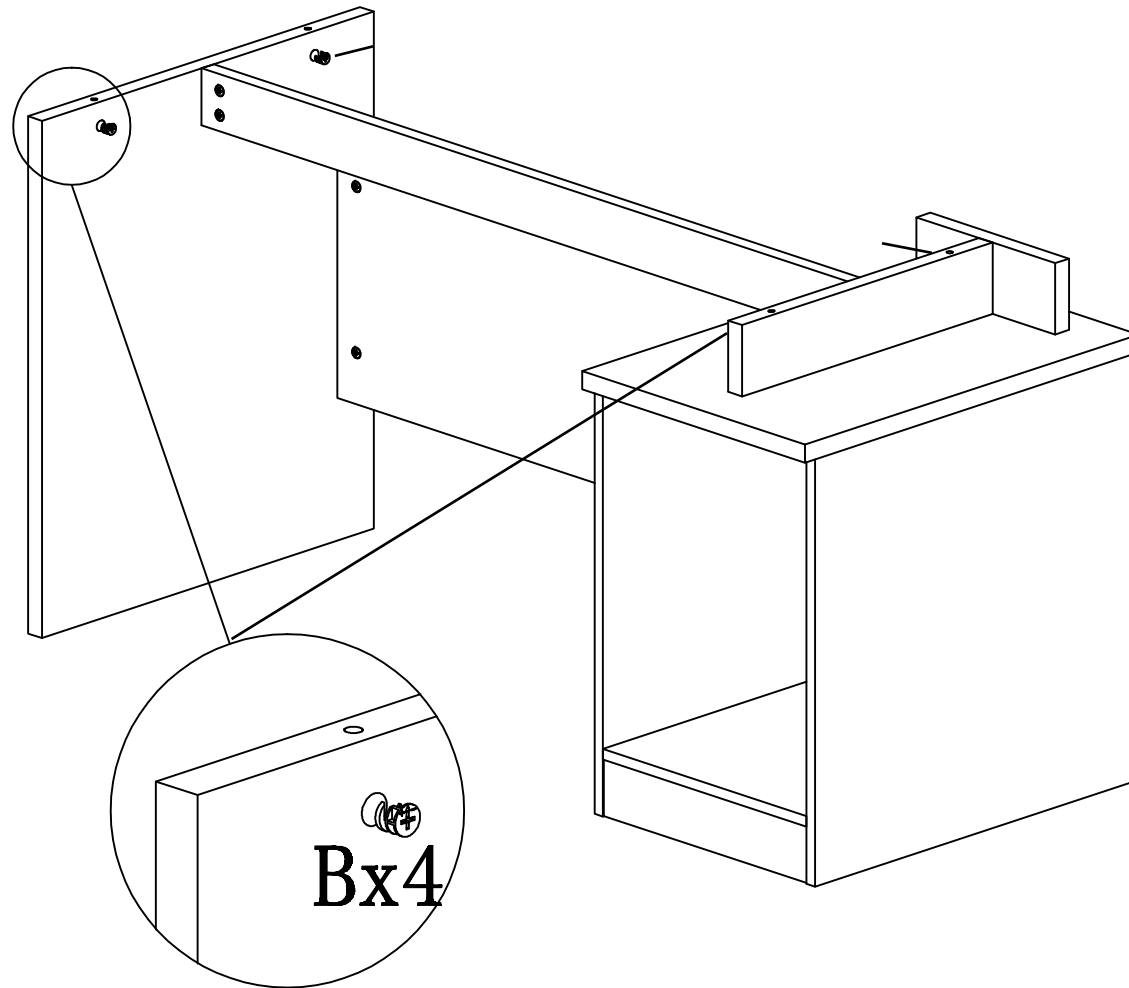



STEP:8

To fix the mixfix screw A on table top panel 11

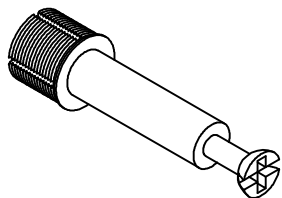


X4

A

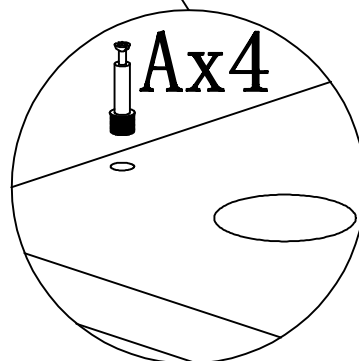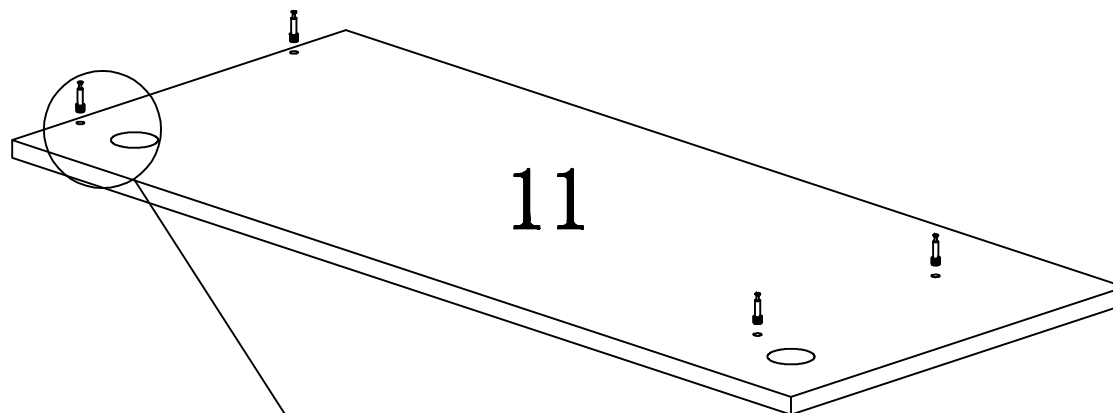


3. 5*14STEP:9




X8

E




X2

F

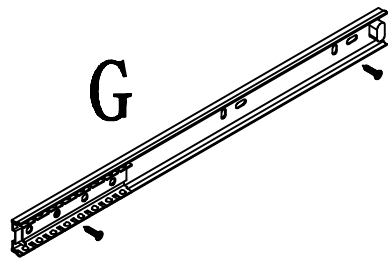

X1

G

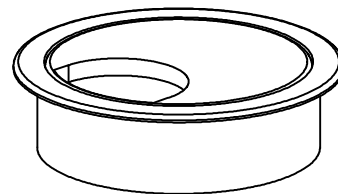

X2

D

Dx1

To fix the lock metal support F

Fx1+Ex2

Dx1

















Gx2

To fix the drawer rail G on both side

Ex2

Fx1+Ex2

To fix the lock metal support F

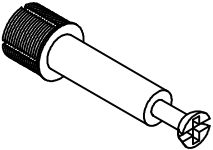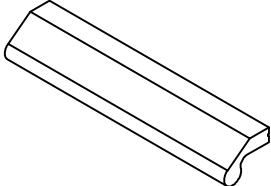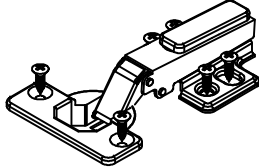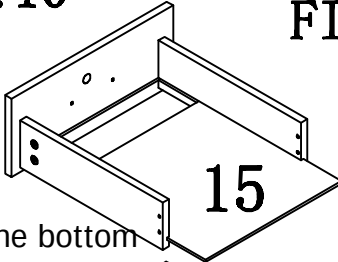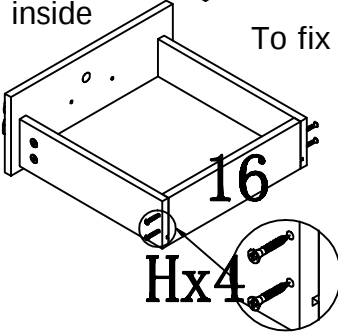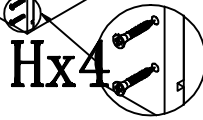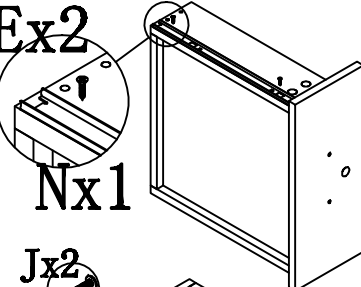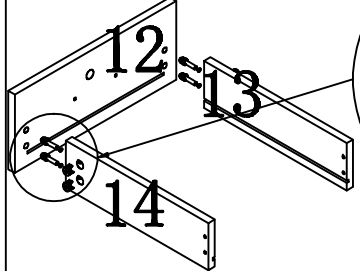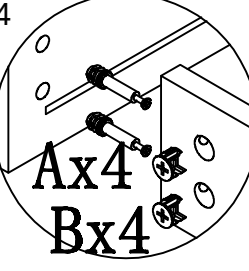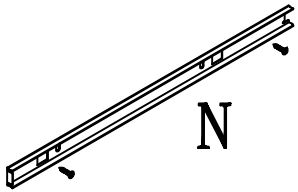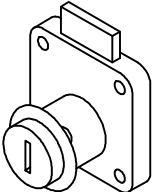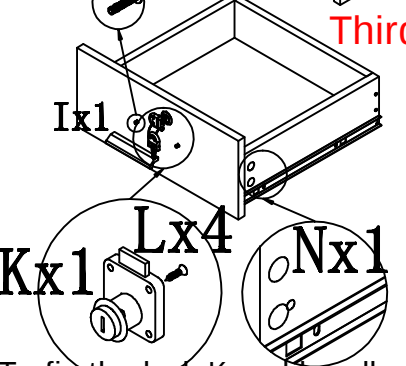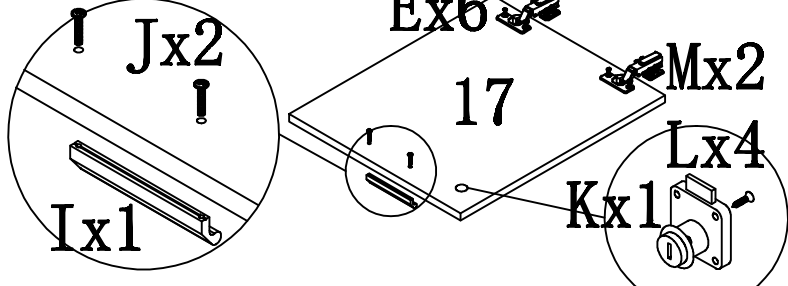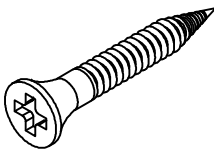 X4 A	 X2 I	 X2 M To fix the both side rail N	STEP:10 FINISH  15 To put the bottom panel 15 inside  16 To fix panel 16  Hx4 Second
 X4 B	 X4 J	 Ex2 Nx1 Third	To fix the panel 12,13,14  12 13 14  Ax4 Bx4 First
 X1 N	 X2 K	 Ix1 Lx4 Nx1 Kx1 To fix the lock K and handle I	 Ex6 Jx2 Mx2 Lx4 Kx1 Ix1 17 To fix the door hinge M and handle I ,then to fix the door in cabinet Final
 X4 H	 X8 L		

Remark: In third ,to use screw L to fix bottom panel 15 four side more tough