

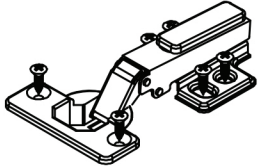
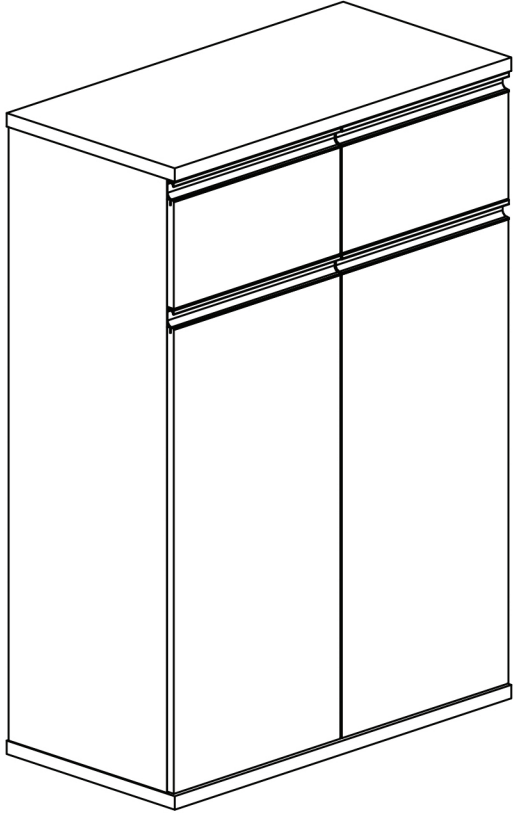
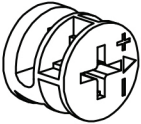



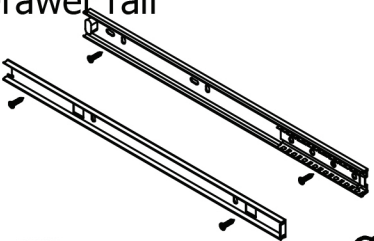
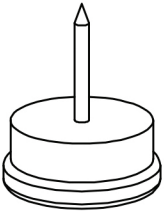

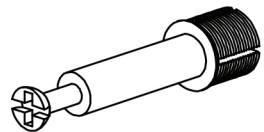



246-000030

<div>Minifix Screw</div> <div></div> <div>X44A</div>	<div>Screw 3.5*14</div> <div></div> <div>X52E</div>	<div>Full overlay hinge</div> <div></div> <div>X4I</div>	<div></div> <div>(800X400X1200)</div>
<div>Minifix</div> <div></div> <div>X44B</div>	<div>Screw 4*30</div> <div></div> <div>X8F</div>	<div>Back panel rubber fix</div> <div></div> <div>X8J</div>	
<div>Wood Minifix</div> <div></div> <div>X10C</div>	<div>Drawer rail</div> <div></div> <div>X2G</div>		
<div>Base nail</div> <div></div> <div>X4D</div>	<div>Shelves fix screw</div> <div></div> <div>X16H</div>		

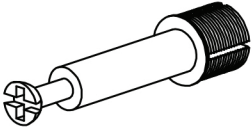


X24

A

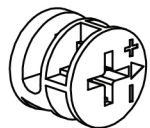

X24

B




X4


C


## STEP: 1

To fix panel 1 and 3,  
then fix the panel 2

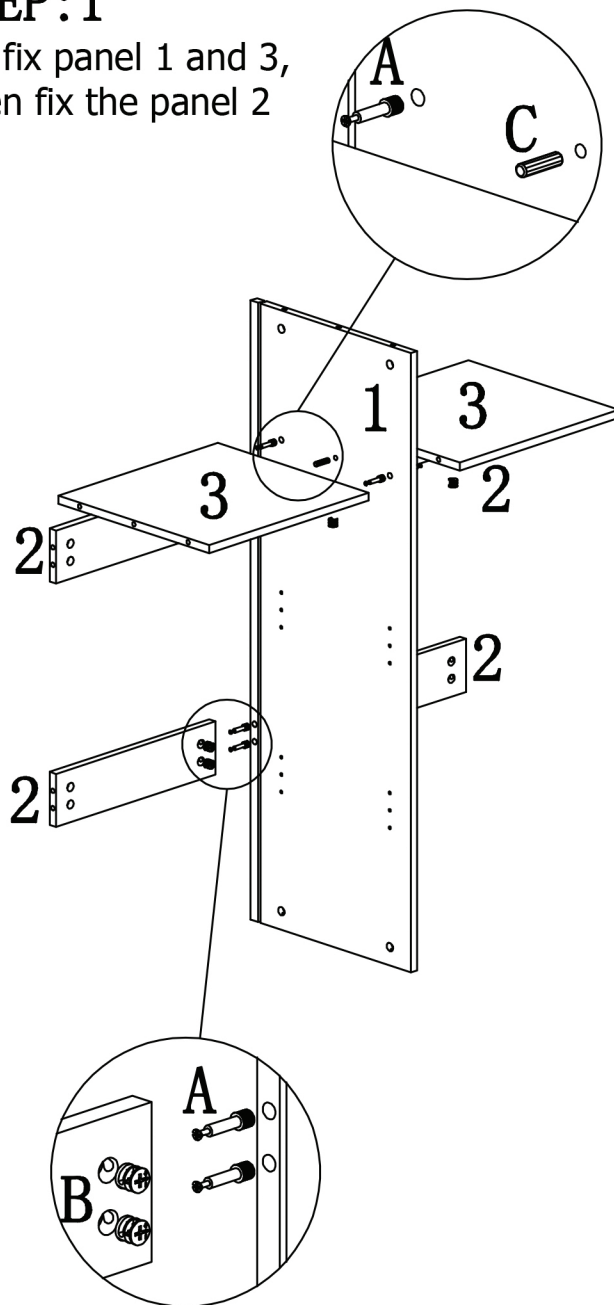


To fix the  
side panel 4

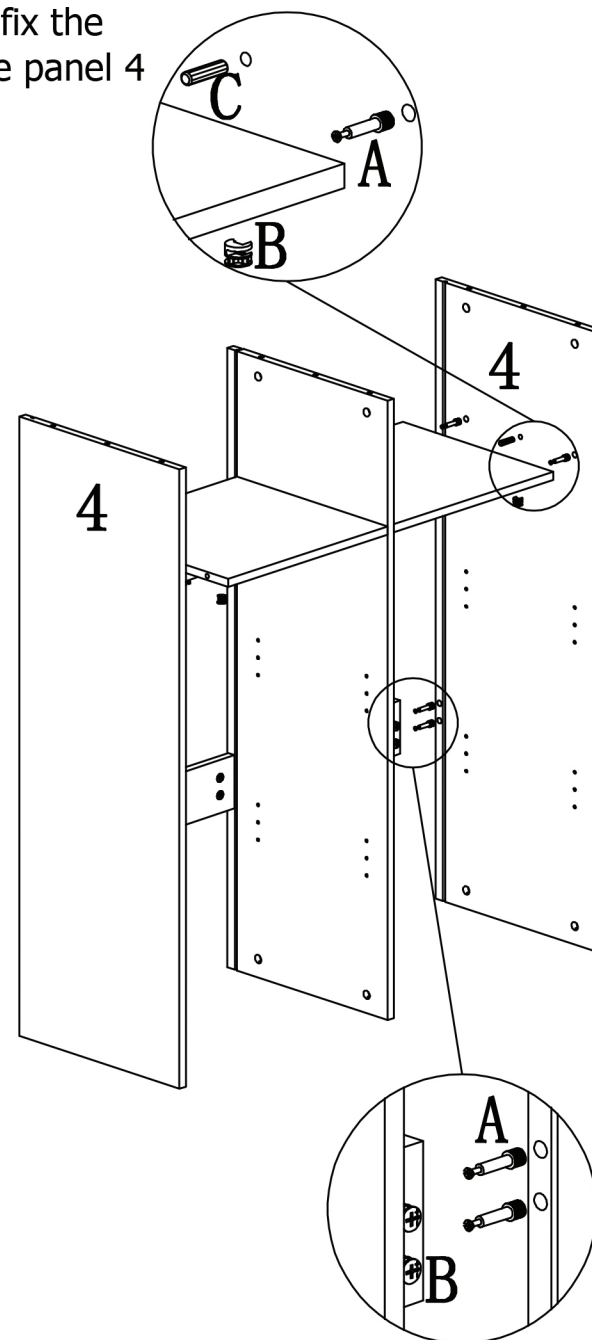

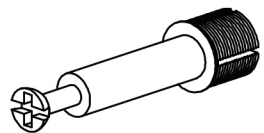


X6

A

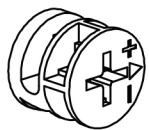

X6

B




X3


C

To fix the bottom panel 5


## STEP:2

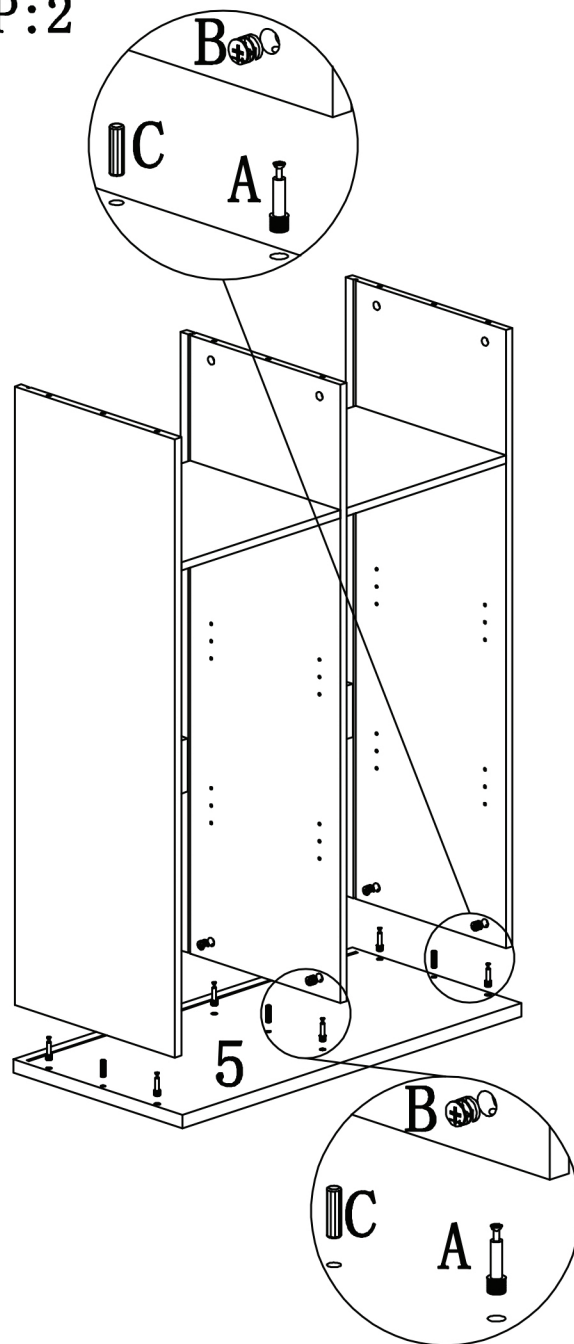

To put the back panel 6 inside

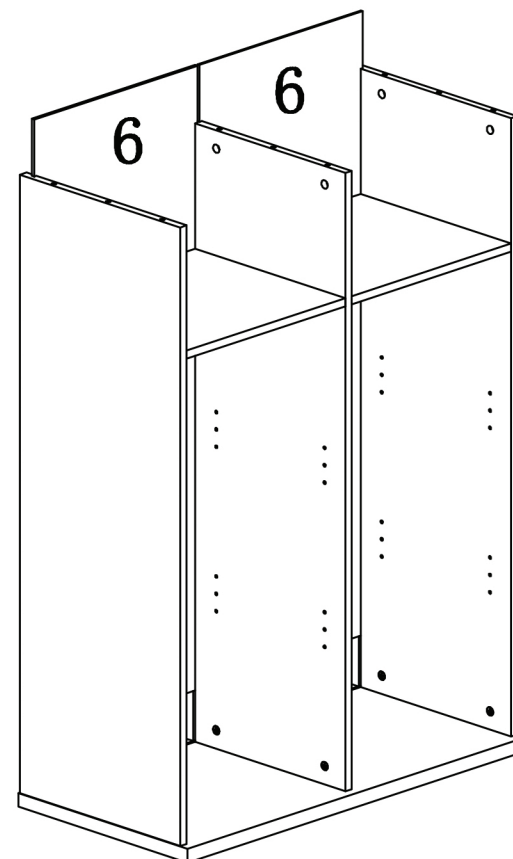


**STEP : 3** To fix the top panel 7

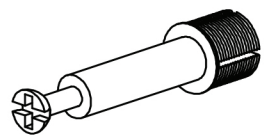


X6

A

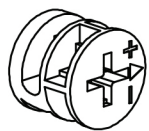


X6

B







X3

C




X16


H

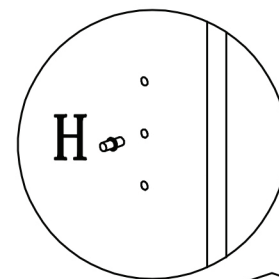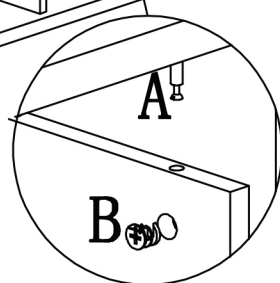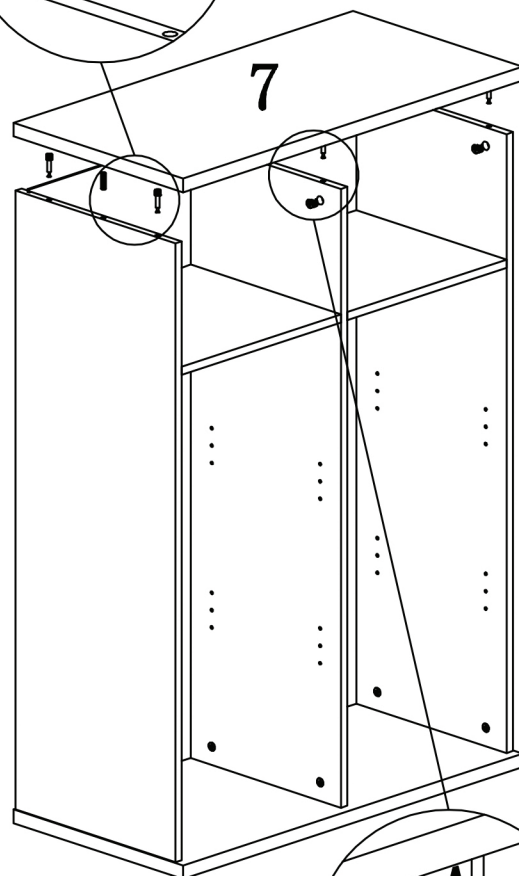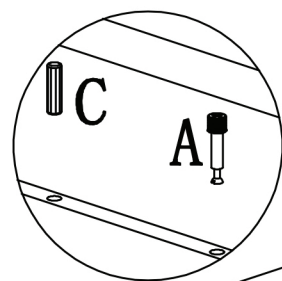

To fix shelves  
fix screw H

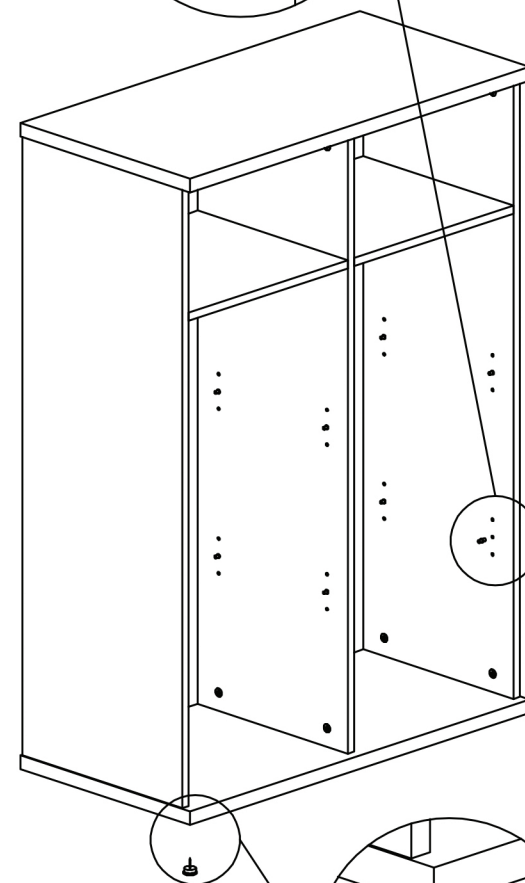

To fix base nail D

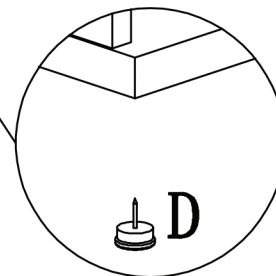



### 3. 5\*14 STEP:4


To put all shelves panel 8 inside

X12




E

X2

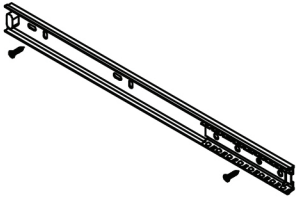


G


X4

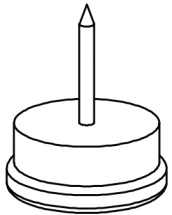

D

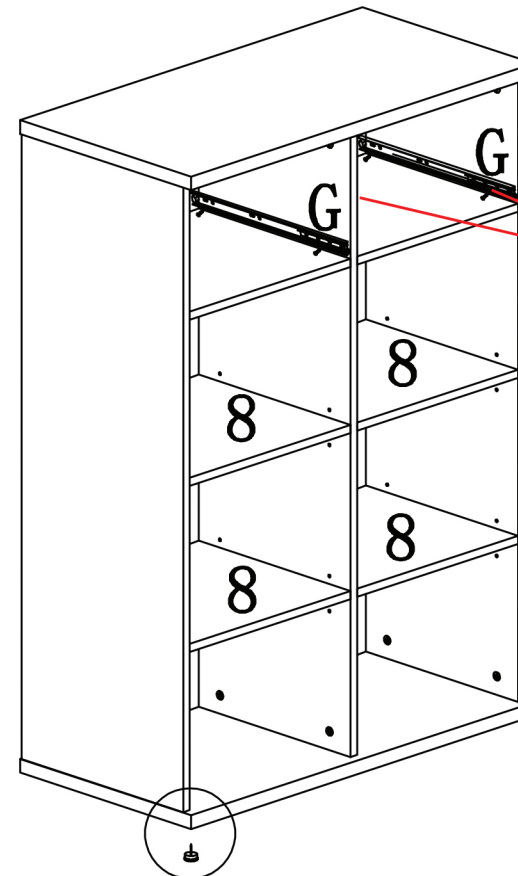


To fix the both side rail G

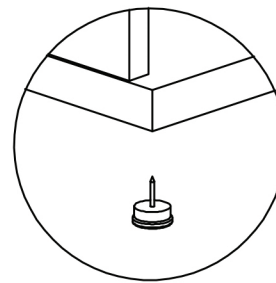


## STEP:5

To fix the panel 9 and  
drawer side panel 11




X8

A

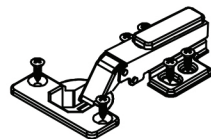

X4

I



X8

B

3.5\*14



X32


E

4\*30






X8

F



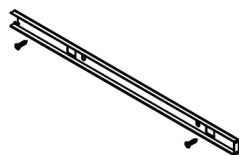


X2



G

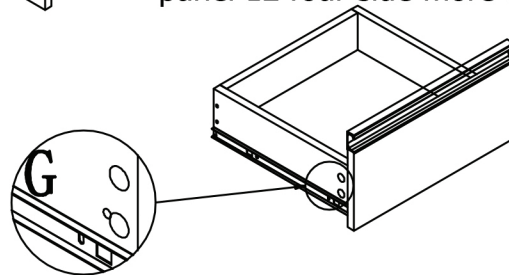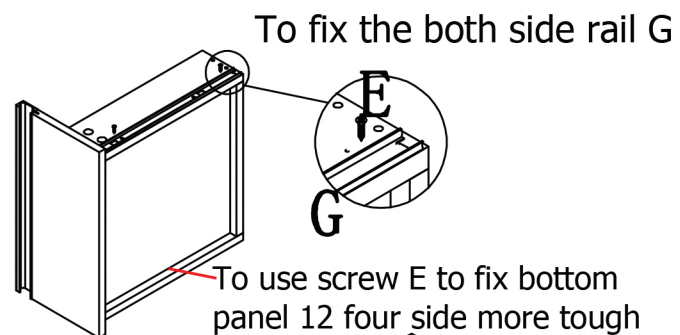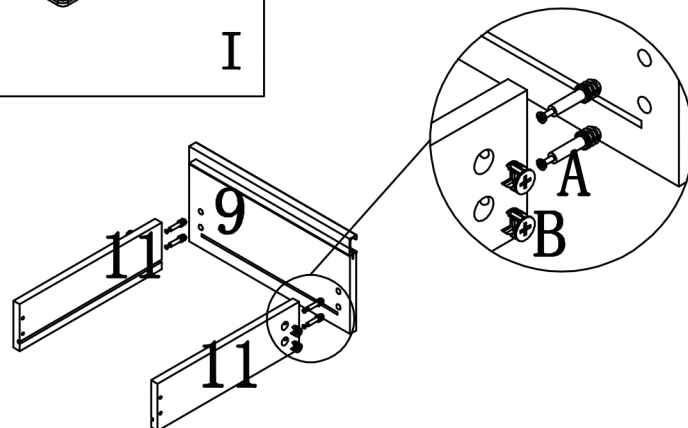

To put the back panel 12 inside, then fix  
panel 13

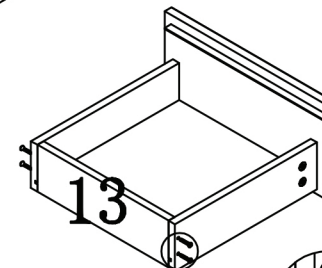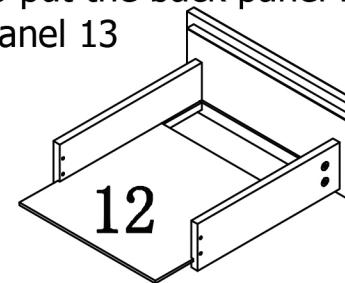

To fix the hinge I on doors, then fix in  
cabinet

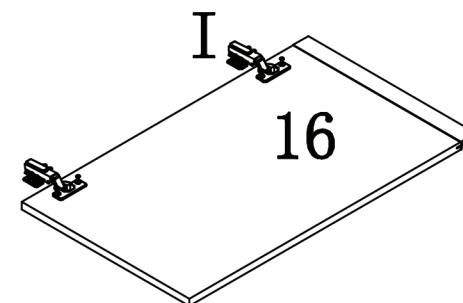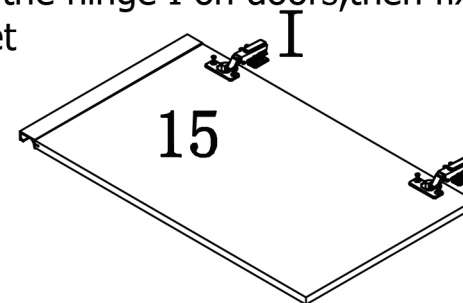


### 3. 5\*14STEP:6

To put the two drawers inside




X8

E

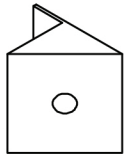

X8

J

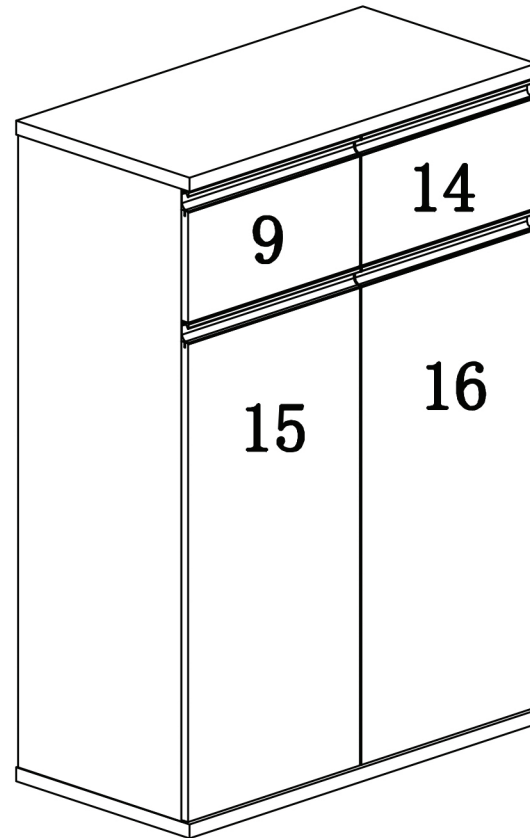

To fix the back panel rubber J **FINISH**

