



**Drill two holes into the wall with a 70 cm interval and insert the anchors provided in the package.**

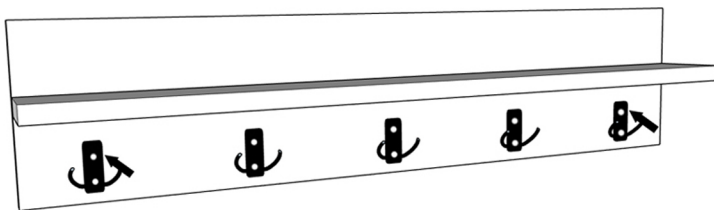

**Screw the product onto the wall with long screws through the upper holes of the hooks at the first and last row.**

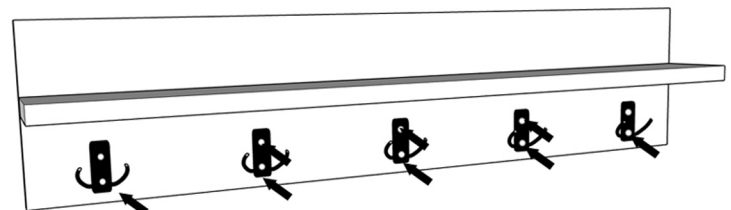

**Screw the bottom screws of the first and last hooks, and all the screws of the remaining hooks, with 3.5x18 short screws. The product is now ready for use.**