

ASSEMBLY INSTRUCTIONS

SOLINE PAKOWORLD COLUMN CABINET SONOMA

383-000130




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.

HARDWARE LIST			QTY (pcs)
DH3		Door Holder	6
DW4		Wood Dowel 6 x 25mm	16
HD3		Handle 96mm	3
LG1		Leg Pin	4
MG1		Magnet Catch KD	3 Sets
PF2		Single Plastic Cap	12
SC3		Screw M3.5 x 14mm	27
SC9		Screw M3.5 x 22mm	6
SC18		Screw M4 x 38mm	16

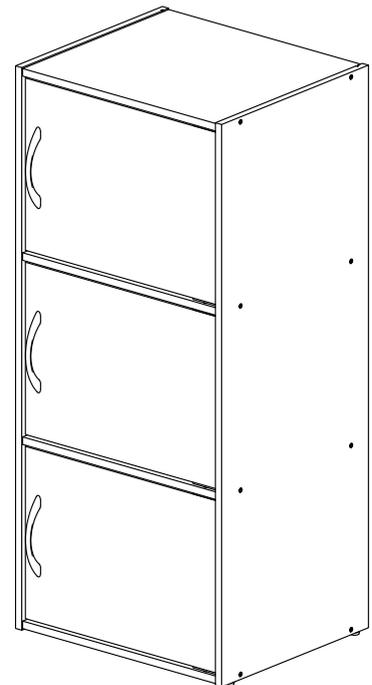


Parts List		QTY
A	Side Panel	2 pcs
B	Door Panel	3 pcs
C	Top Panel	1 pc
D	Shelf Panel	2 pcs
E	Bottom Panel	1 pc
F	Backboard	3 pcs

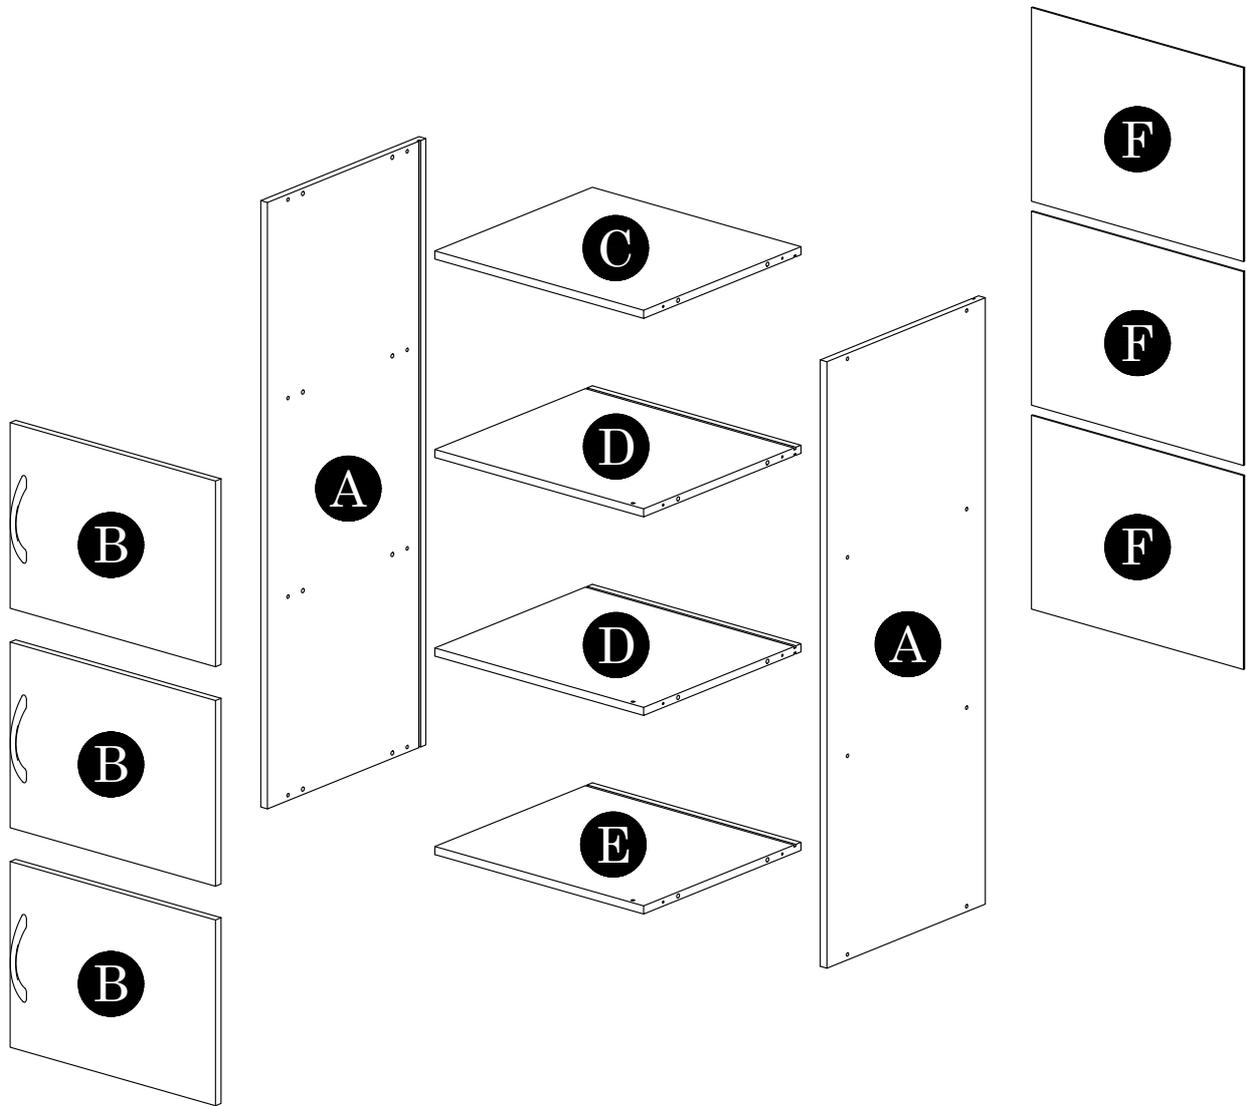



STEP 1

DW4		Wood Dowel 6 x 25mm	16
MG1		Magnet Catch KD	3

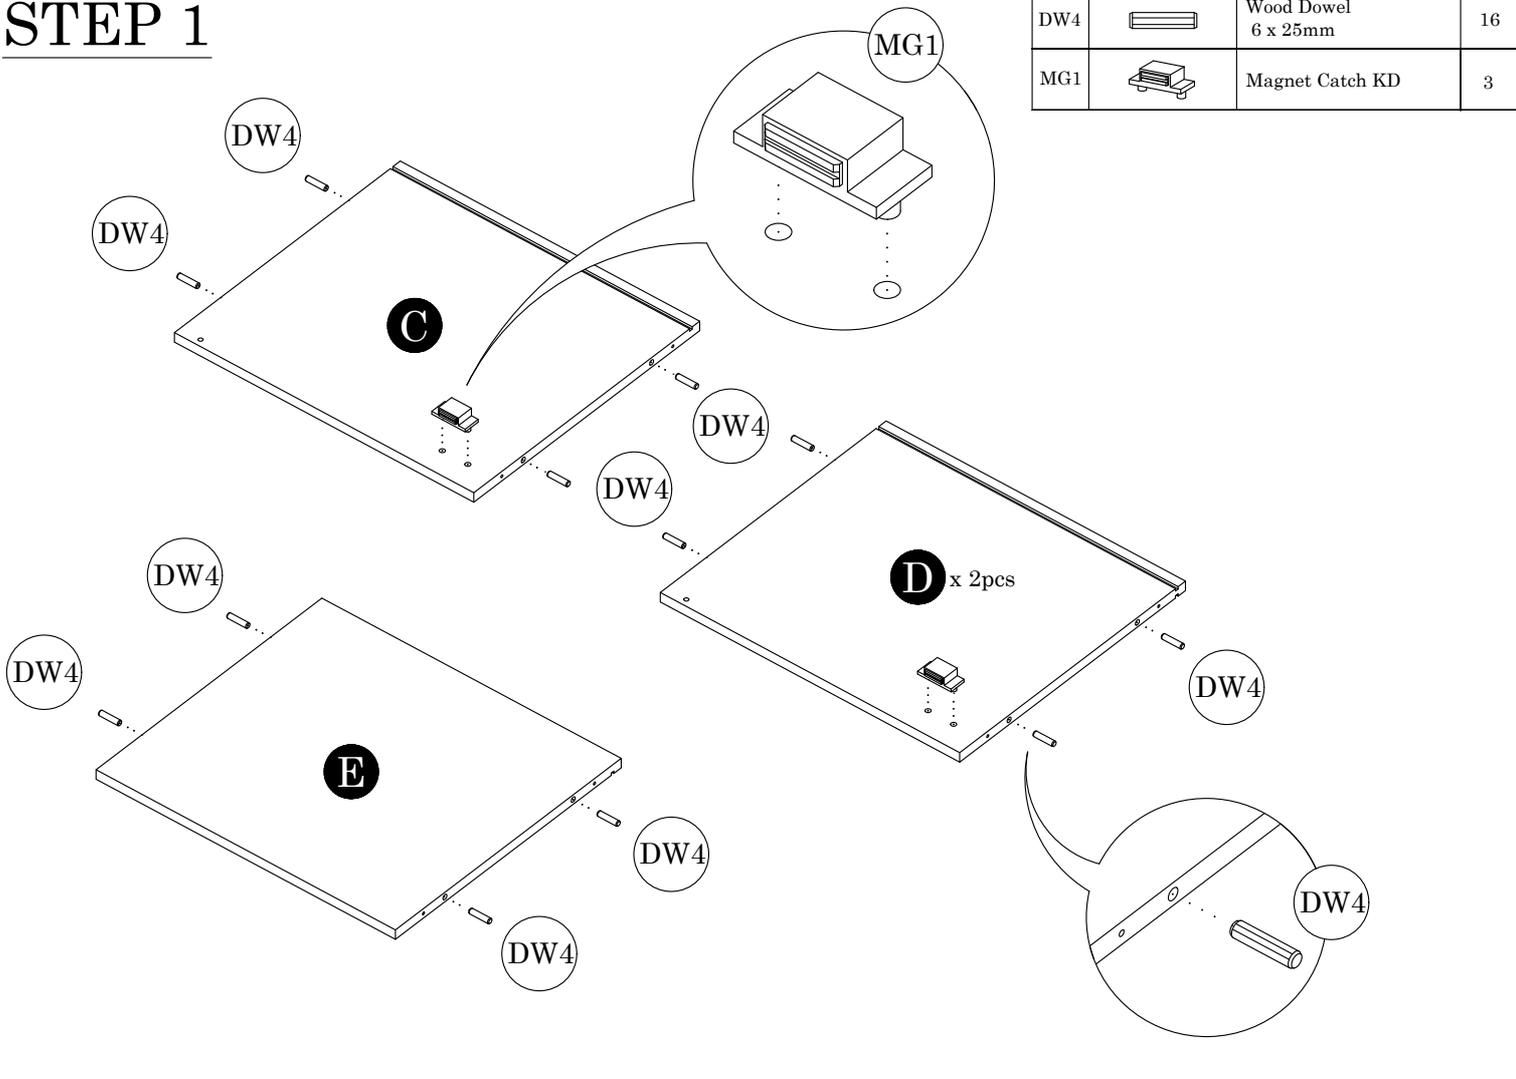


STEP 2

SC18		Screw M4 x 38mm	8
------	---	-----------------	---

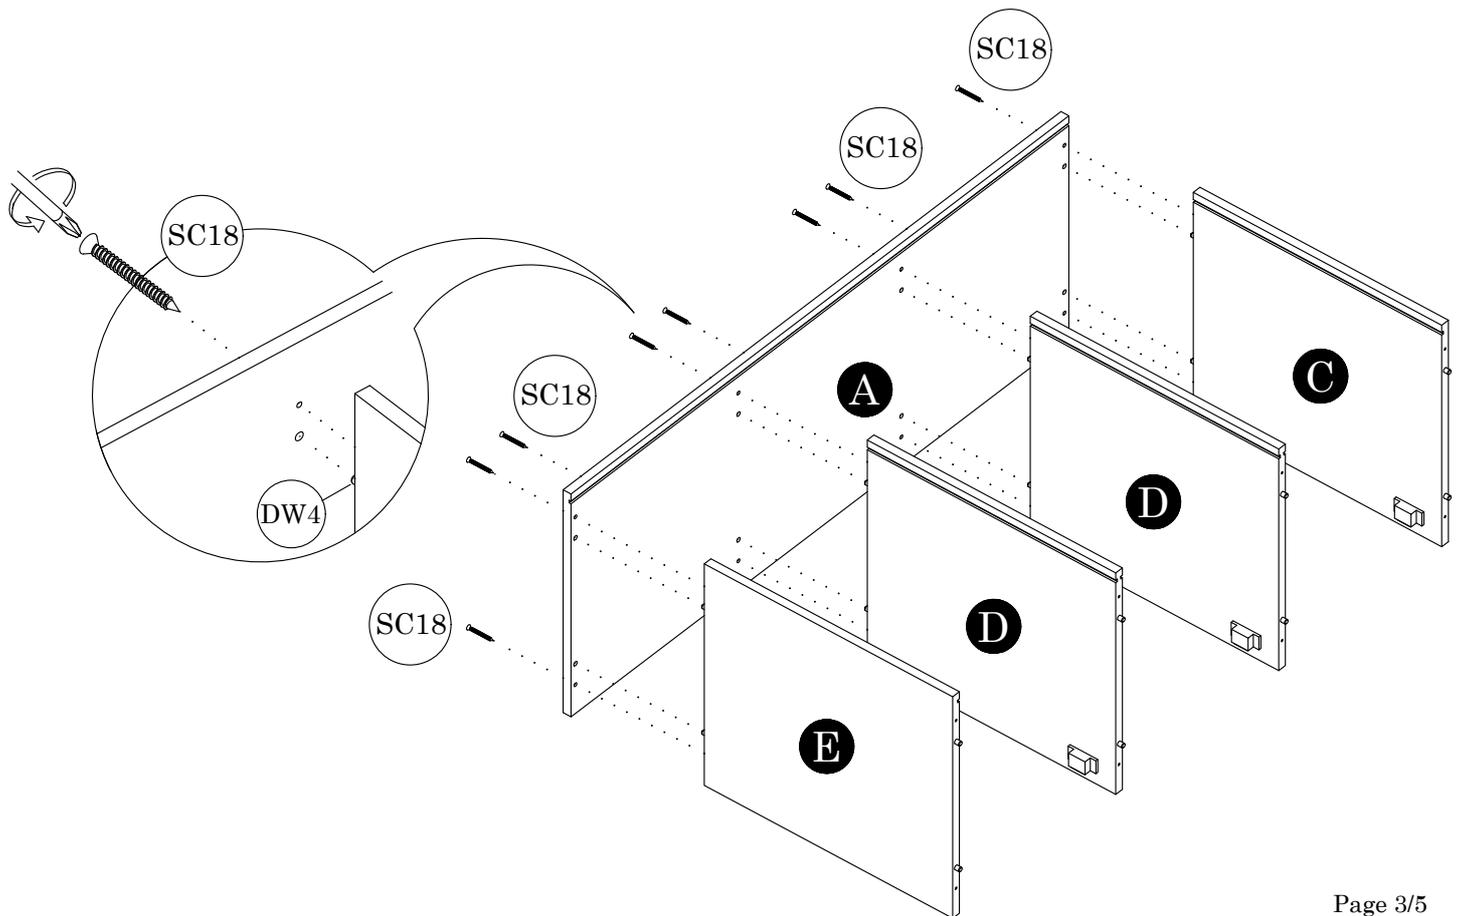


STEP 3

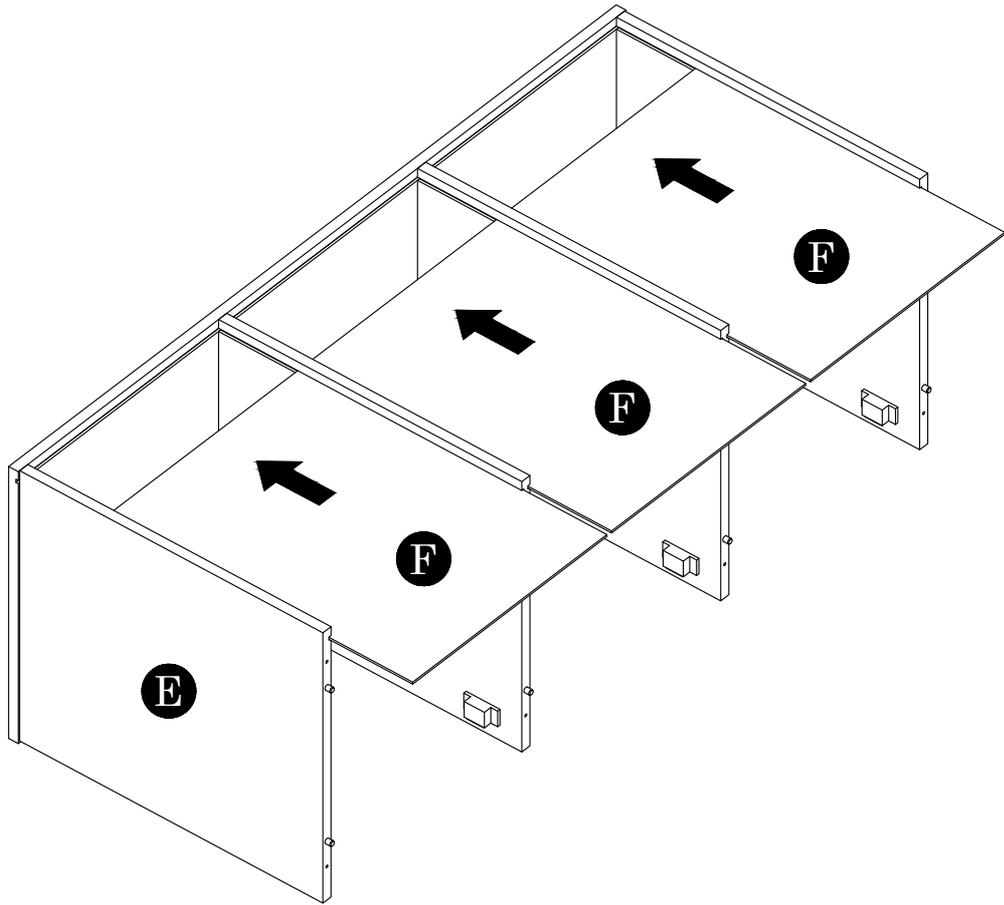


STEP 4

SC18		Screw M4 x 38mm	8
------	---	-----------------	---

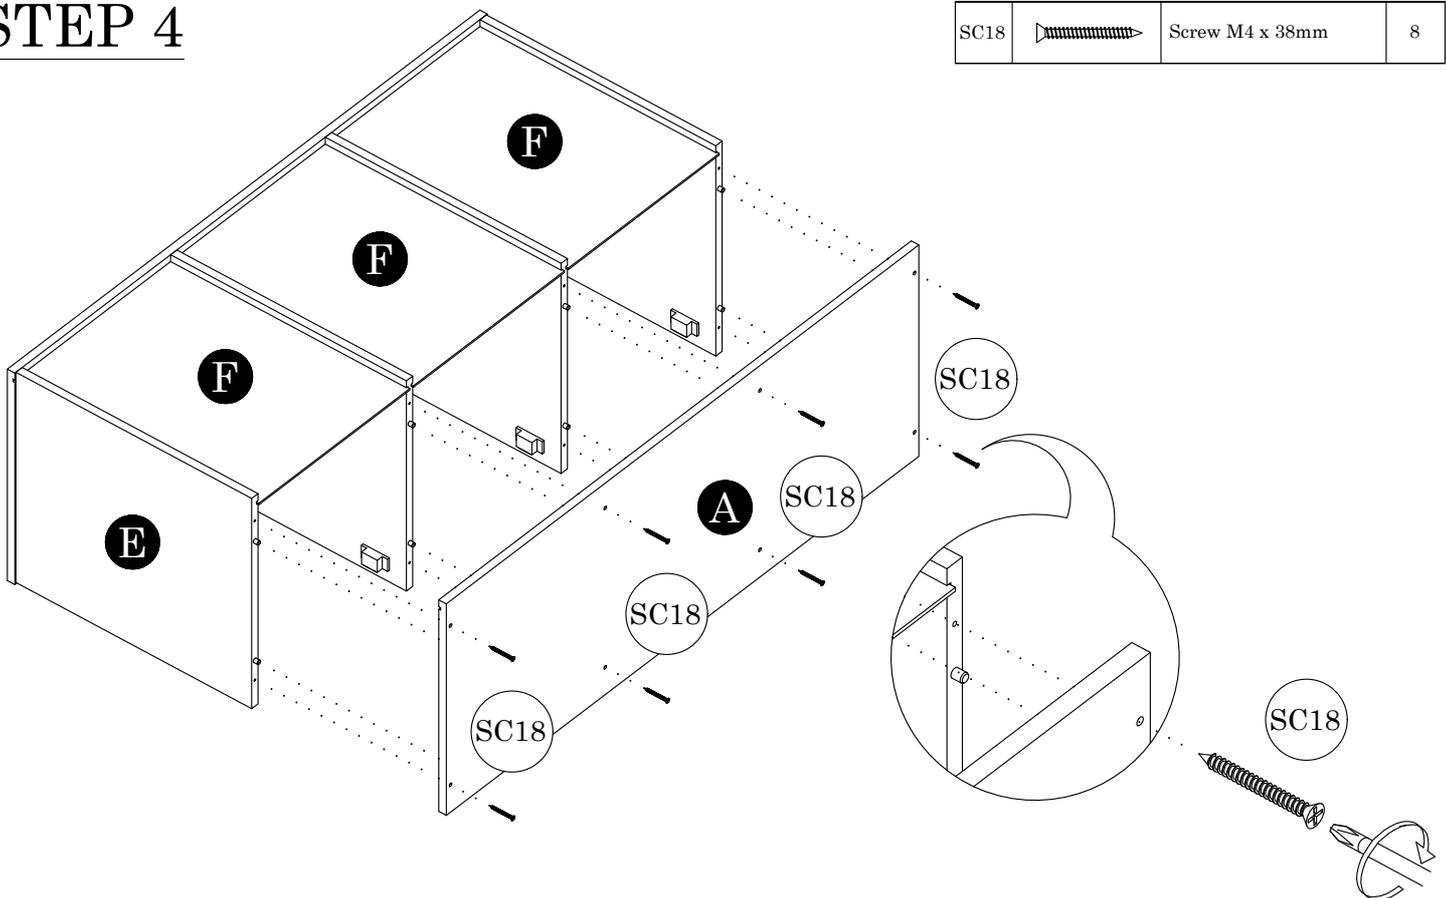


STEP 5

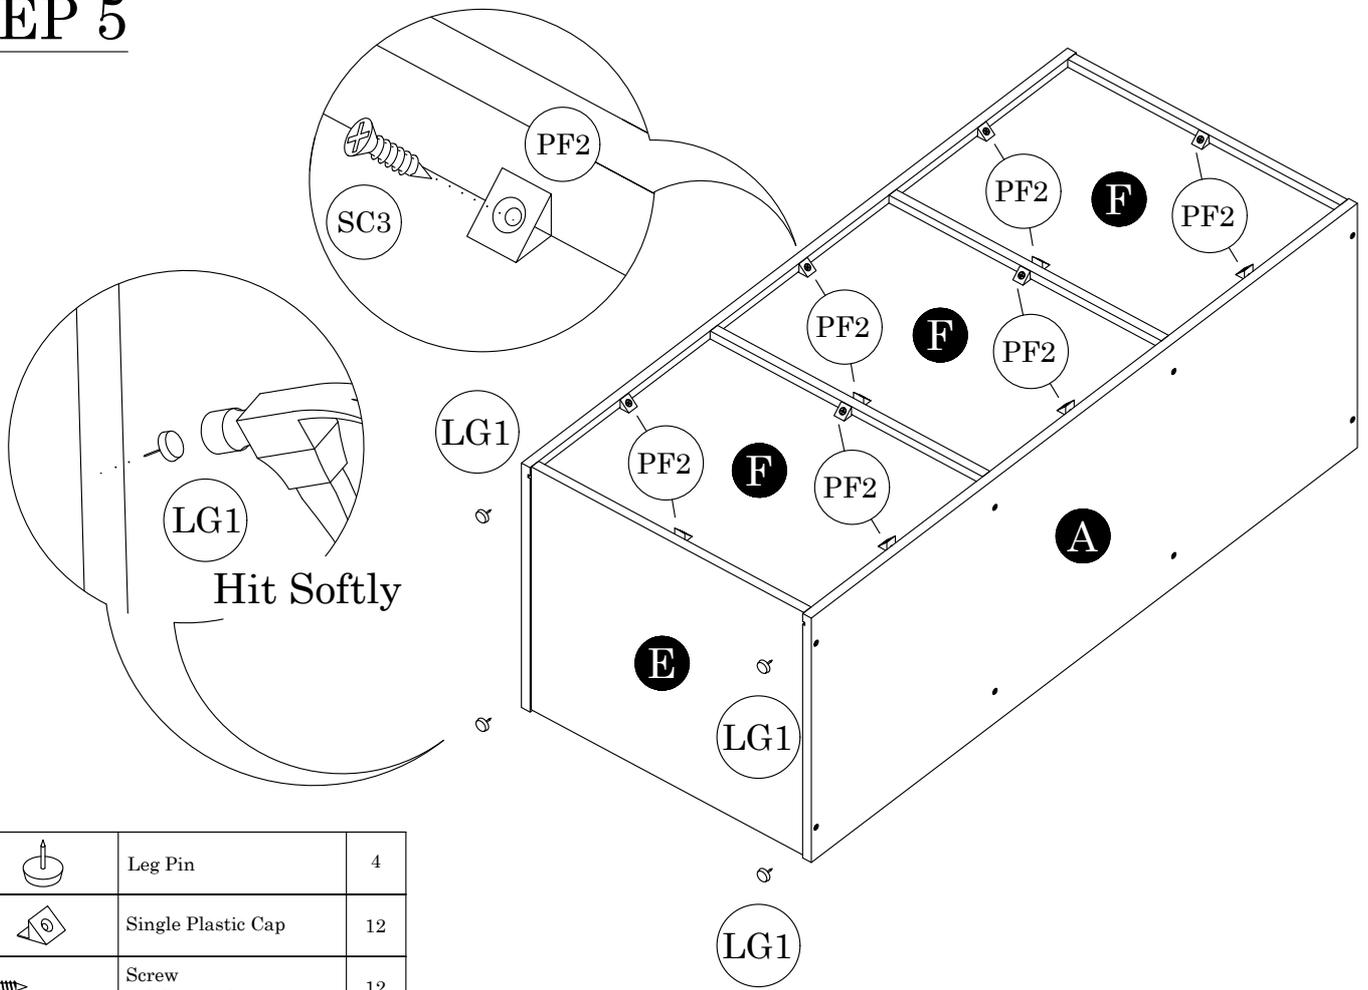

LG1		Leg Pin	4
PF2		Single Plastic Cap	12
SC3		Screw M3.5mm x 14mm	12

STEP 6

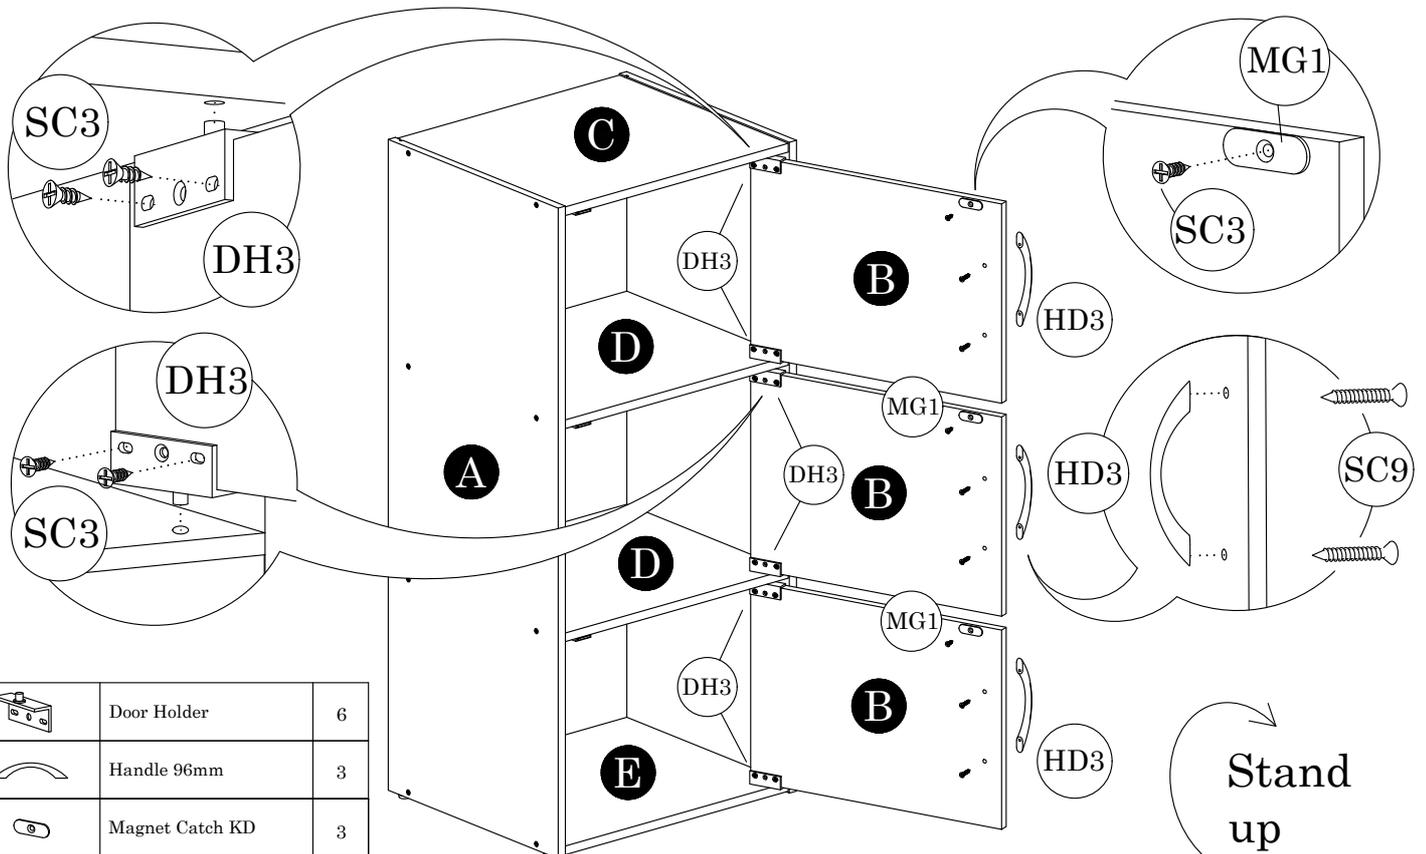

DH3		Door Holder	6
HD3		Handle 96mm	3
MG1		Magnet Catch KD	3
SC3		Screw M3.5mm x 14mm	15
SC9		Screw M3.5 x 22mm	6