

# ASSEMBLY INSTRUCTIONS

## WORK DESK TAULE PAKOWORLD ANTHRACITE



### 383-000160




**IMPORTANT**


**PLEASE READ BEFORE YOU CONTINUE FURTHER**

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.


HARDWARE LIST			QTY (pcs)
DW4		Wood Dowel 6 x 25mm	16
LG1		Leg Pin	4
MN2		Mini Fix 15mm	4 Sets
PF11		Small L Bracket	1
SC3		Screw M3.5 x 14mm	2
SC25		FH Screw M5 x 40mm	6

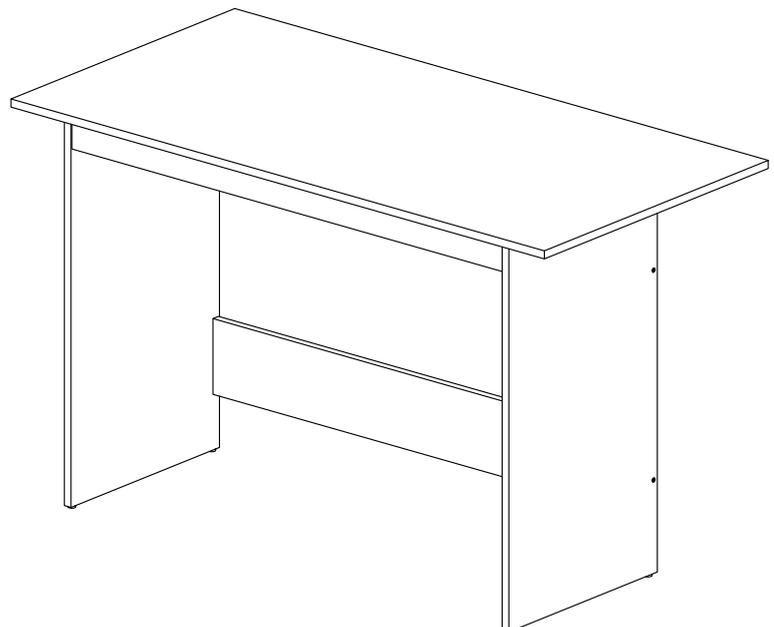

Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Big Crossbar	1 pc
D	Mid Crossbar	1 pc
E	Small Crossbar	1 pc
F	Top Panel	1 pc

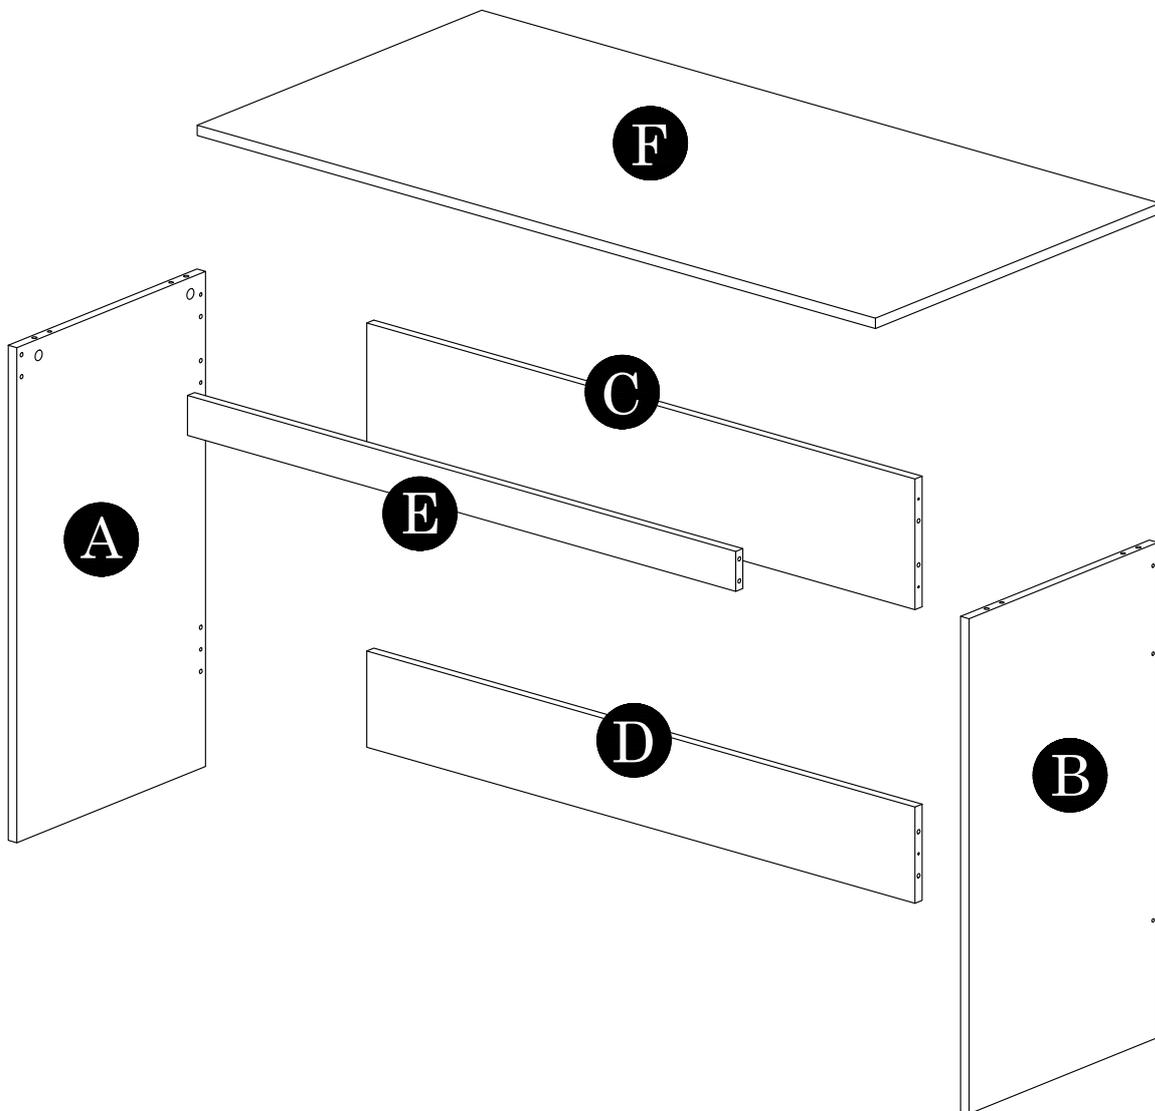


# STEP 1

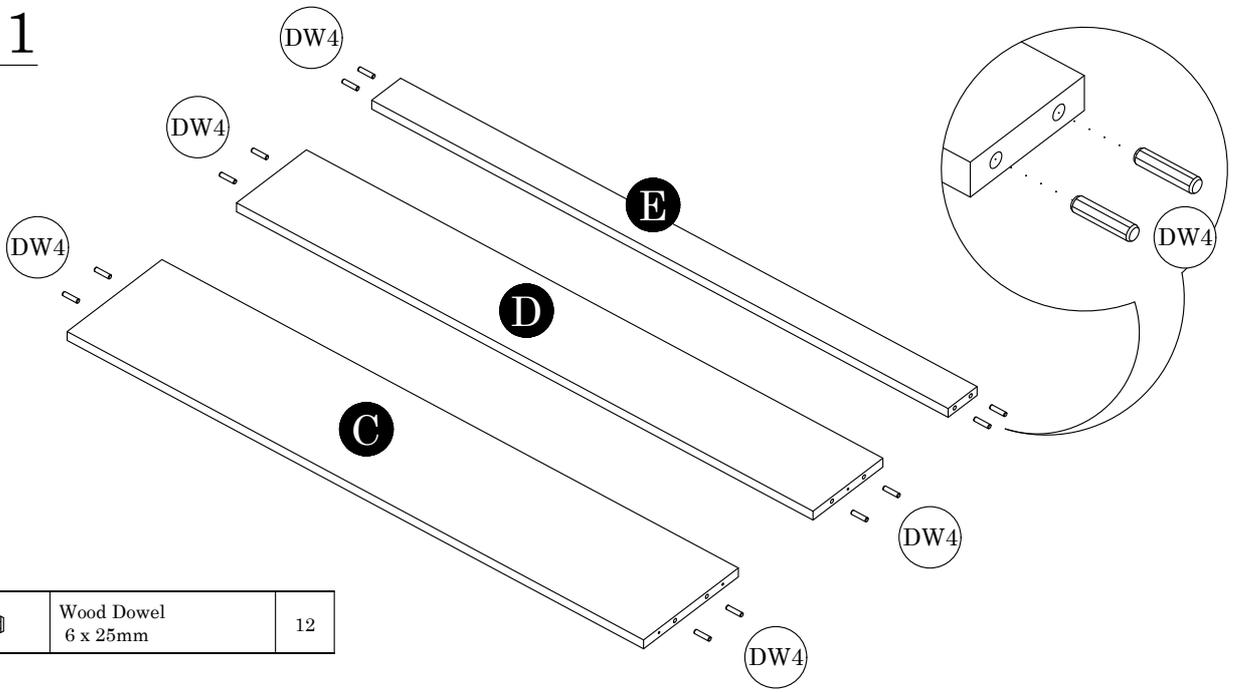


DW4		Wood Dowel 6 x 25mm	12
-----	---	------------------------	----

# STEP 2

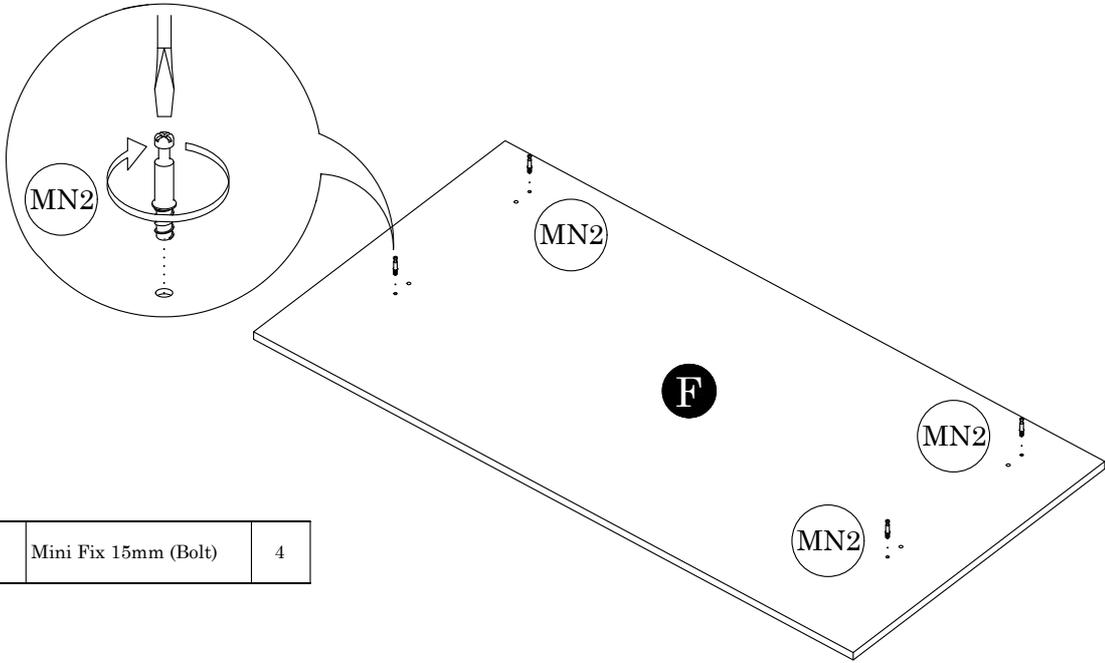


MN2		Mini Fix 15mm (Bolt)	4
-----	---	----------------------	---

# STEP 3

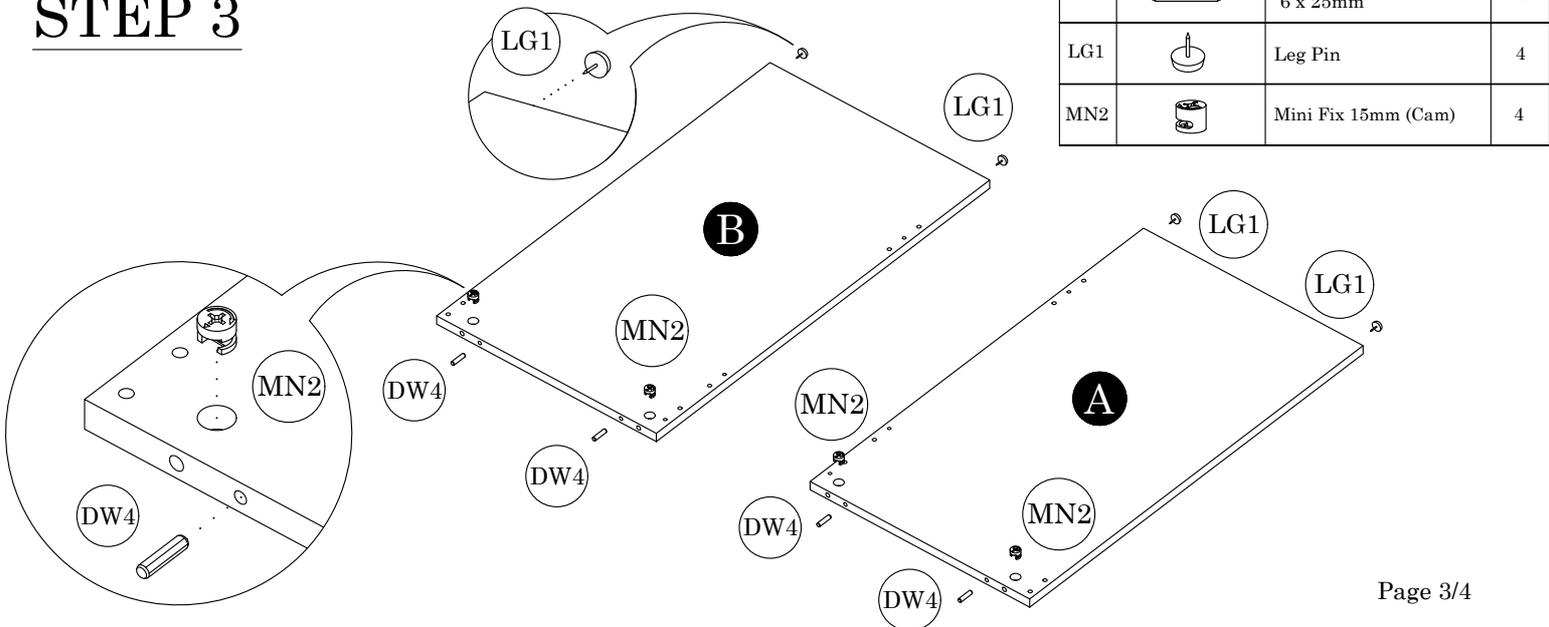

DW4		Wood Dowel 6 x 25mm	4
LG1		Leg Pin	4
MN2		Mini Fix 15mm (Cam)	4

# STEP 4

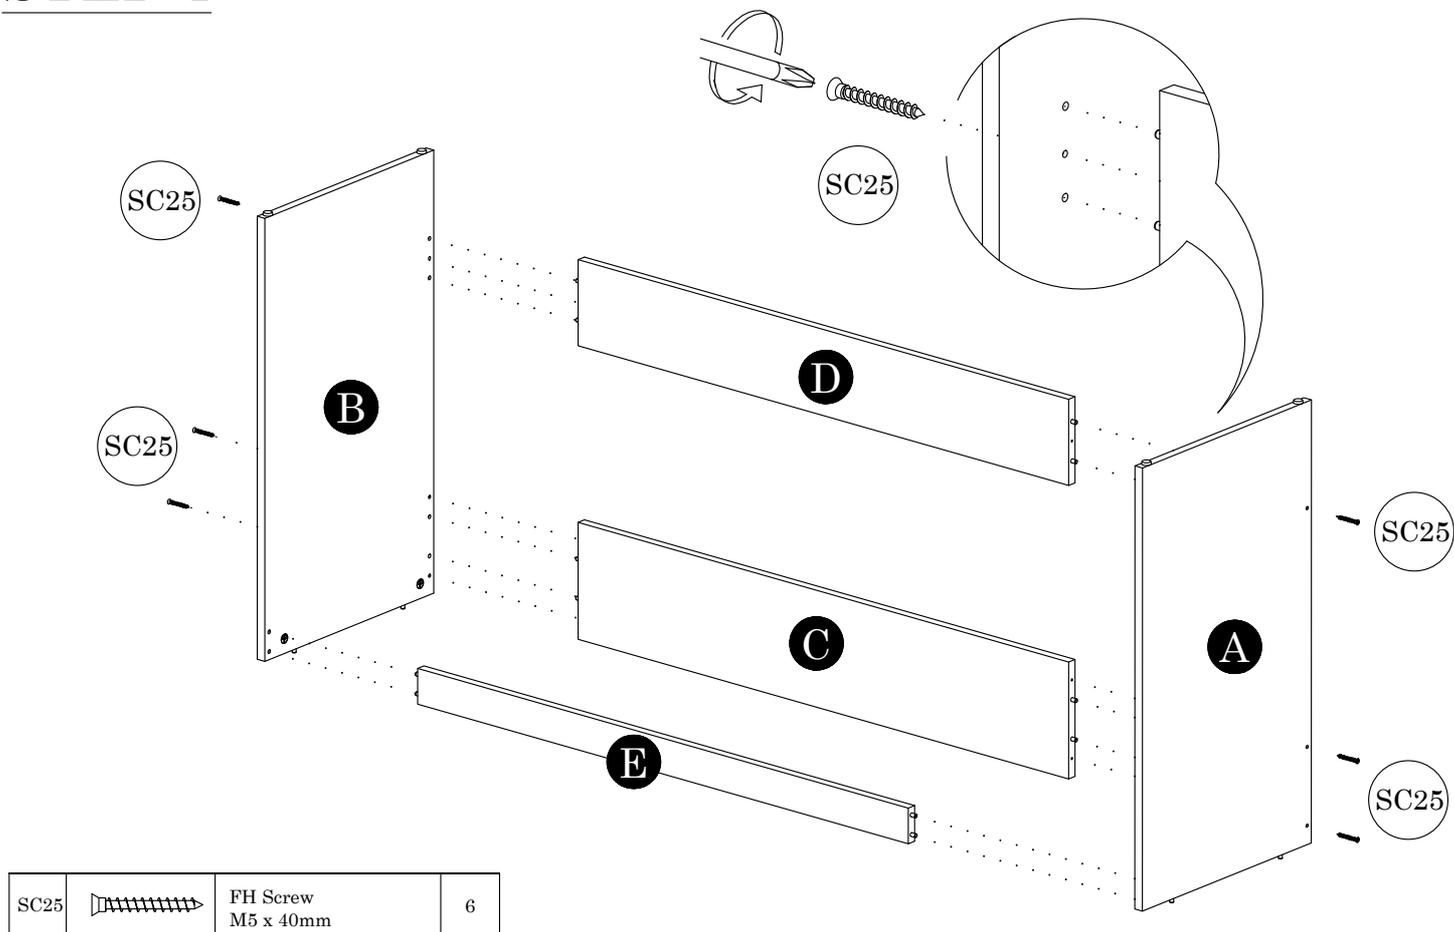

# STEP 5

