

ASSEMBLY INSTRUCTIONS

WIRDIA PAKOWORLD COLUMN CABINET LIGHT GREY

383-000148




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.

HARDWARE LIST			QTY (pcs)
DH26		Door Holder	6
HD22		Plastic Handle Knob	3
MF2		Nail	4 (+ -3)
MG1		Magnet Catch KD	3 Sets
SC1		Screw M3.5 x 10mm	3
SC9		Screw M3.5 x 22mm	3
SC13		Screw M4 x 30mm	16

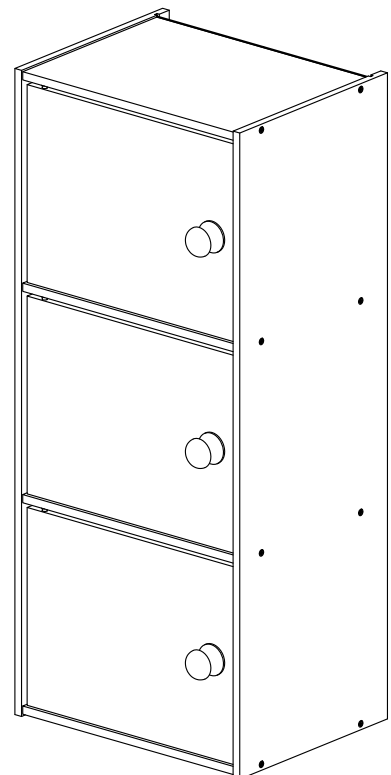


Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Door Panel	3 pcs
D	Top Panel	1 pc
E	Bottom Panel	1 pc
F	Shelf Panel	2 pcs
G	Backboard	2 pcs

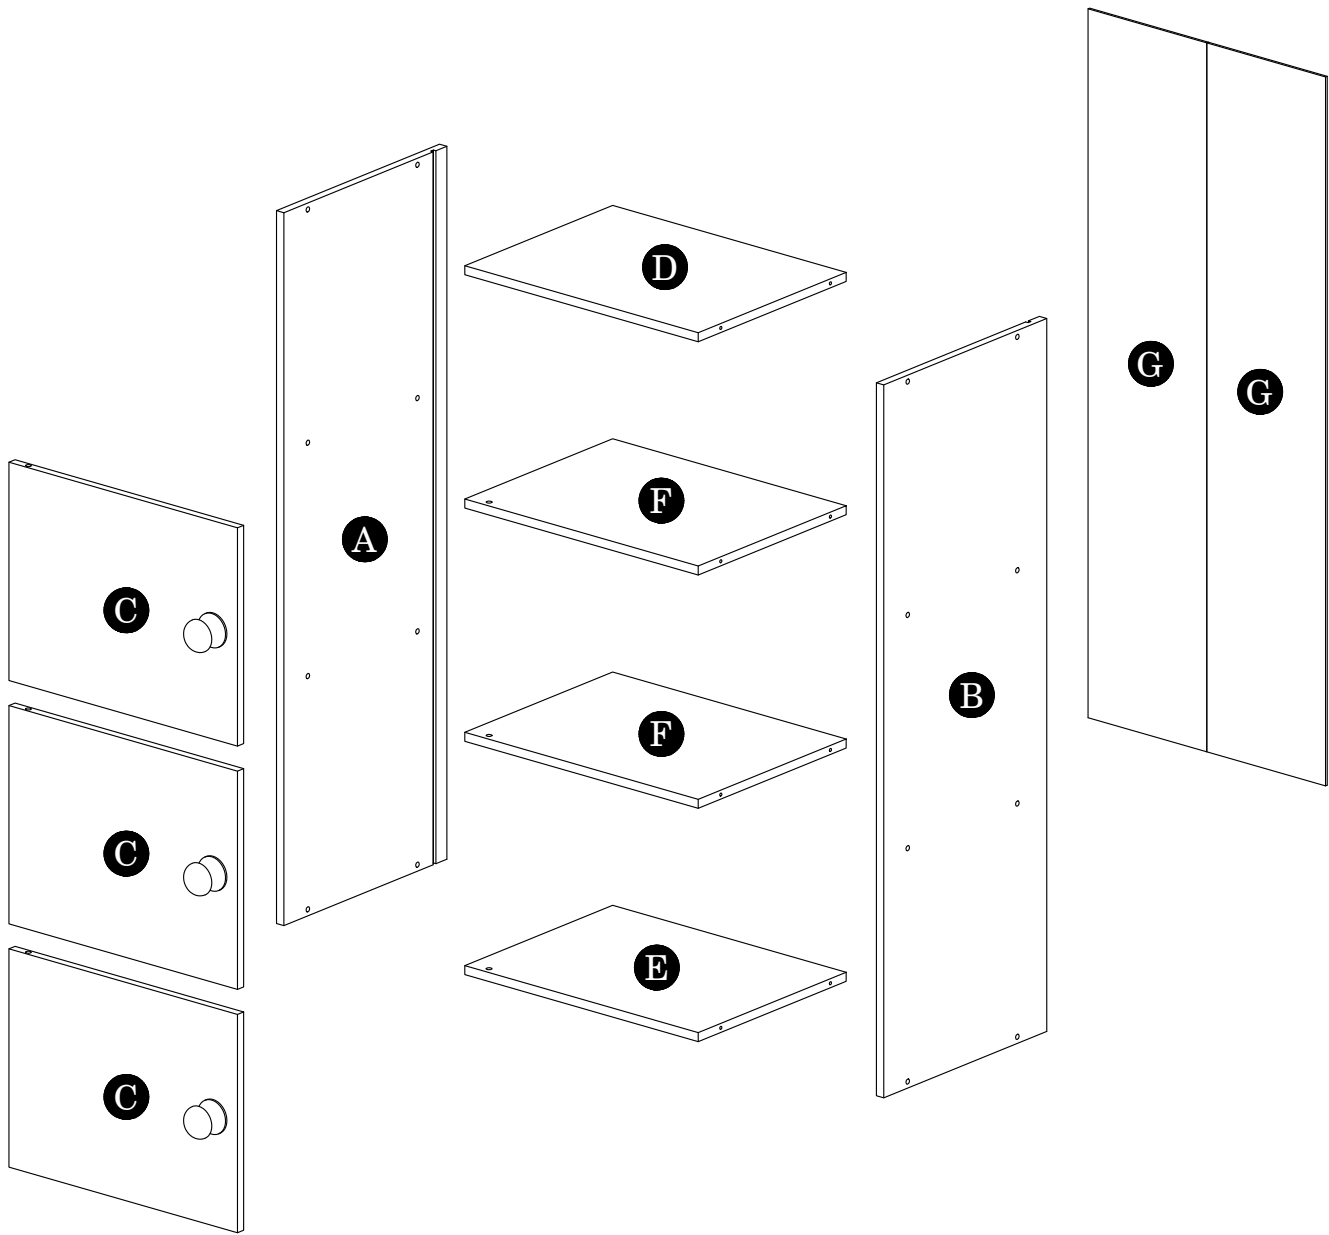


STEP 1

DH26		Door Holder	6
MG1		Magnet Catch KD	3

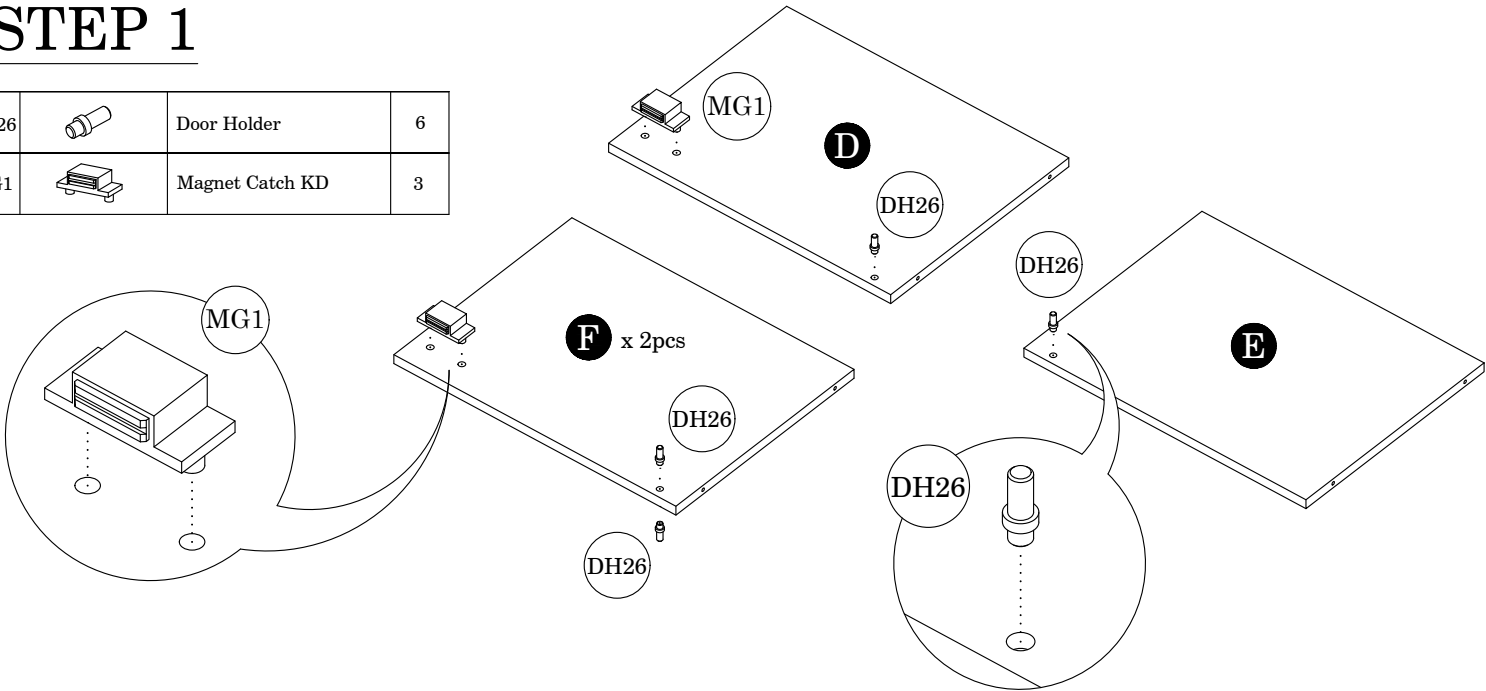


STEP 2

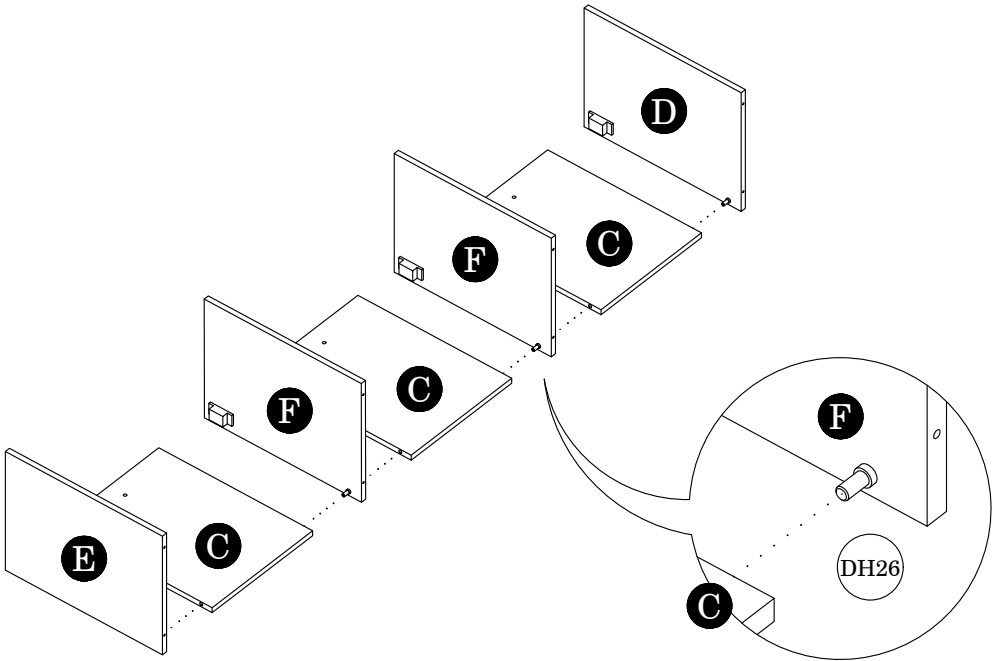


STEP 3

SC13		Screw M4 x 30mm	16
------	---	--------------------	----

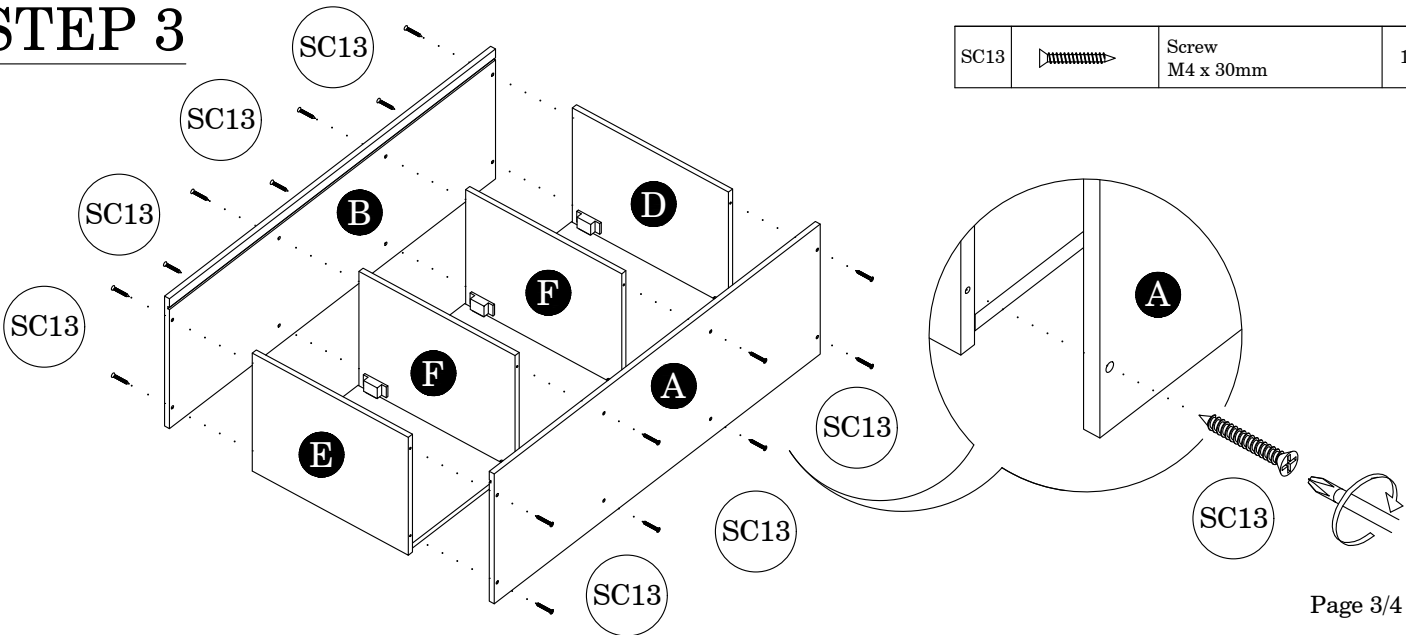

STEP 4

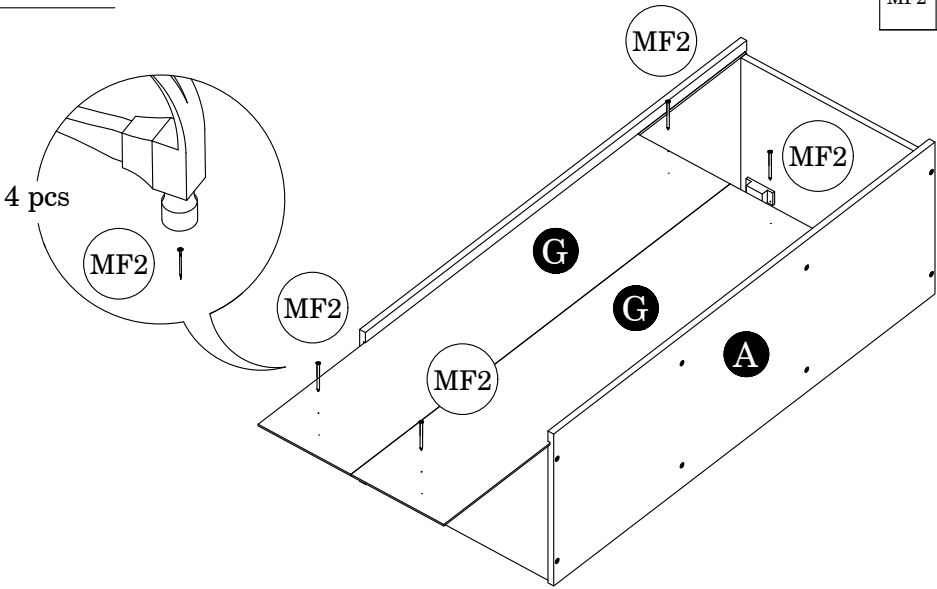

MF2		Nail	4 (+3)
-----	--	------	-----------

STEP 5

HD22		Plastic Handle Knob	3
MG1		Magnet Catch KD	3
SC1		Screw M3.5mm x 10mm	3
SC9		Screw M3.5mm x 22mm	3

