

ASSEMBLY INSTRUCTIONS

BEDY PAKOWORLD BEDSIDE TABLE SONOMA

383-000125




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.


HARDWARE LIST			QTY (pcs)
DW4		Wood Dowel 6 x 25mm	14
HD3		Handle 96mm	1
LG1		Leg Pin	4
MF2		Nail	20 (+3)
MN2		Mini Fix 15mm	6 Sets
PF2		Single Plastic Cap	2
SC3		Screw M3.5 x 14mm	10
SC11		Screw M4 x 25mm	2
SC18		Screw M4 x 38mm	4
SC25		FH Screw M5 x 40mm	4
SL3		Drawer Metal Slide 250mm	1 Set

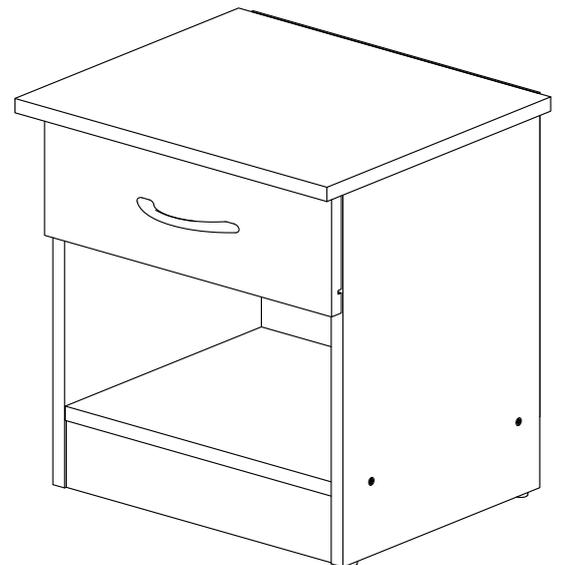

Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Drawer Front Panel	1 pc
D	Drawer Side Panel (L)	1 pc
E	Drawer Side Panel (R)	1 pc
F	Top Panel	1 pc
G	Bottom Panel	1 pc
H	Crossbar Panel	1 pc
I	Drawer Back Board	1 pc
J	Drawer Bottom Panel	1 pc
K	Backboard	1 pc

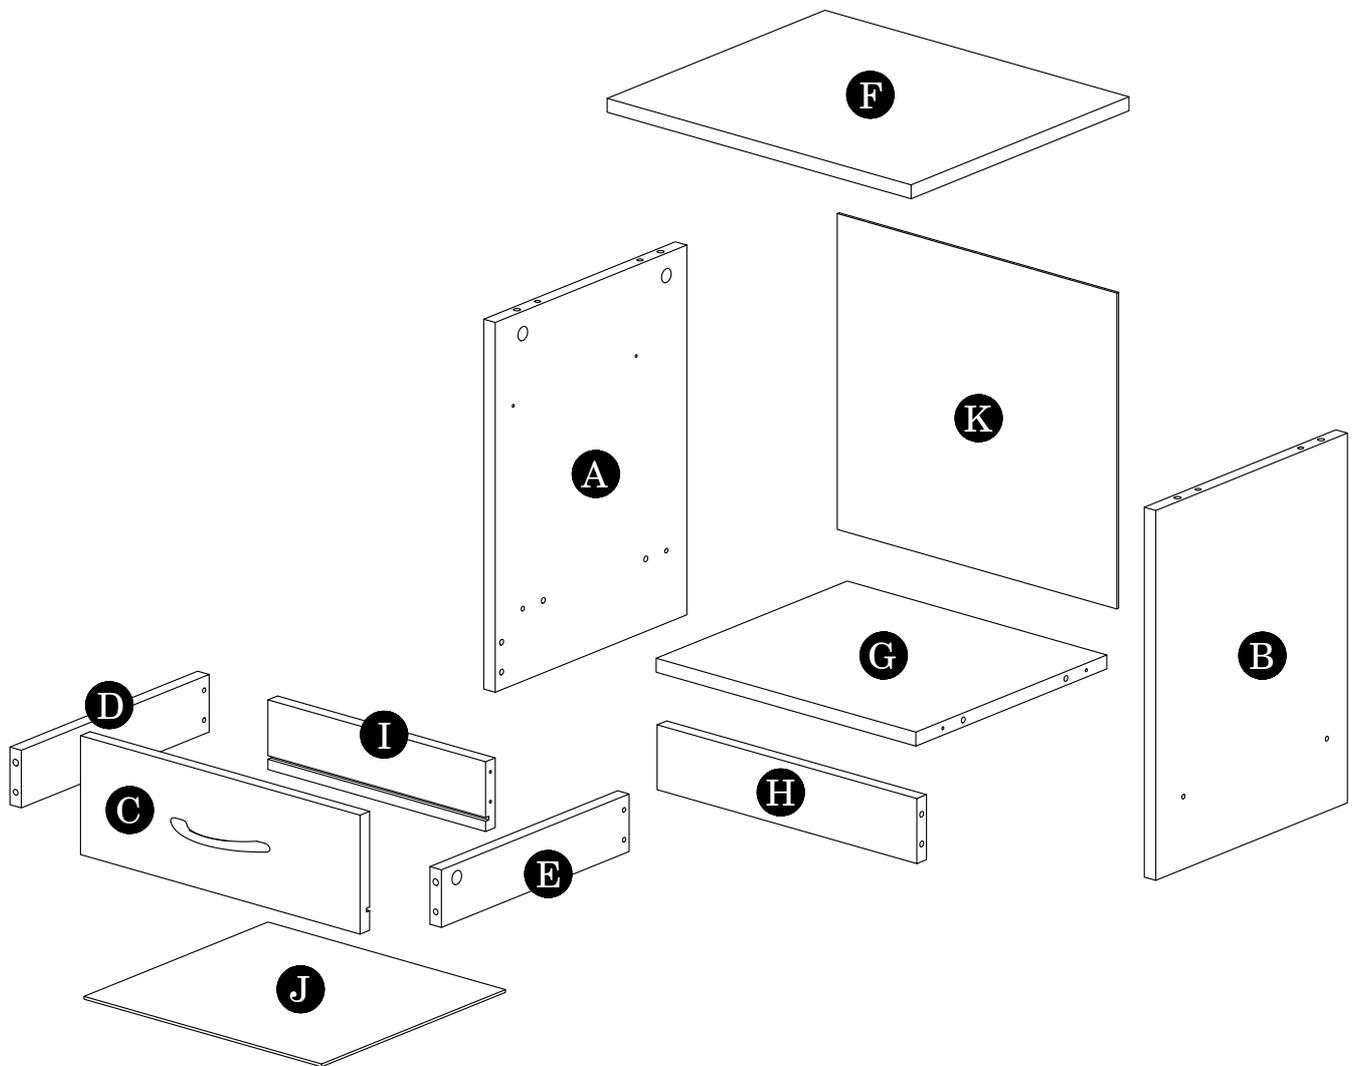


STEP 1

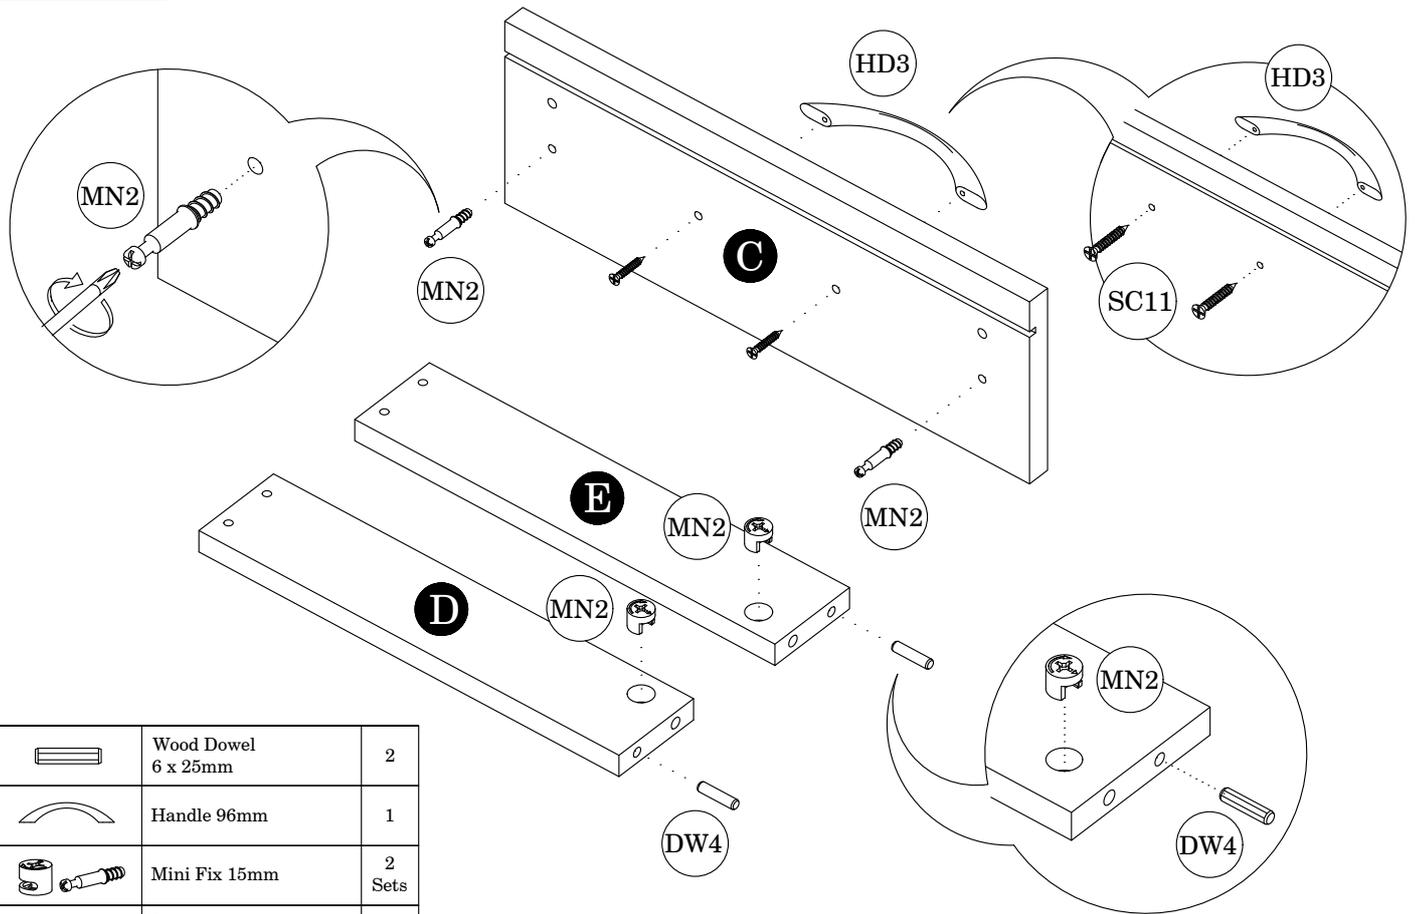


DW4		Wood Dowel 6 x 25mm	2
HD3		Handle 96mm	1
MN2		Mini Fix 15mm	2 Sets
SC11		Screw M4 x 25mm	2

STEP 2

SC18		Screw M4 x 38mm	4
------	---	--------------------	---

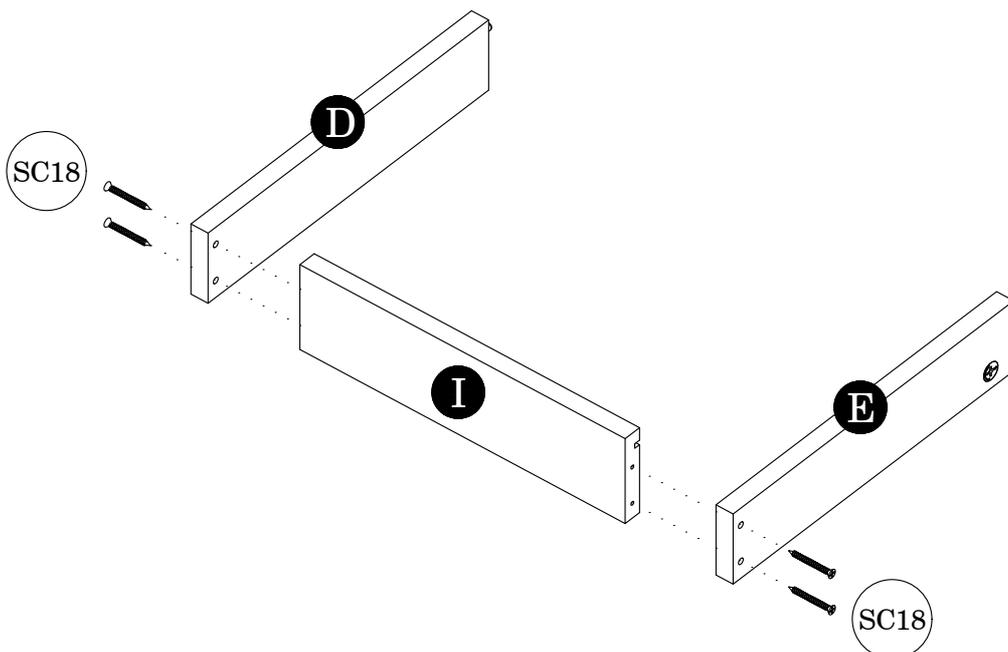


STEP 3

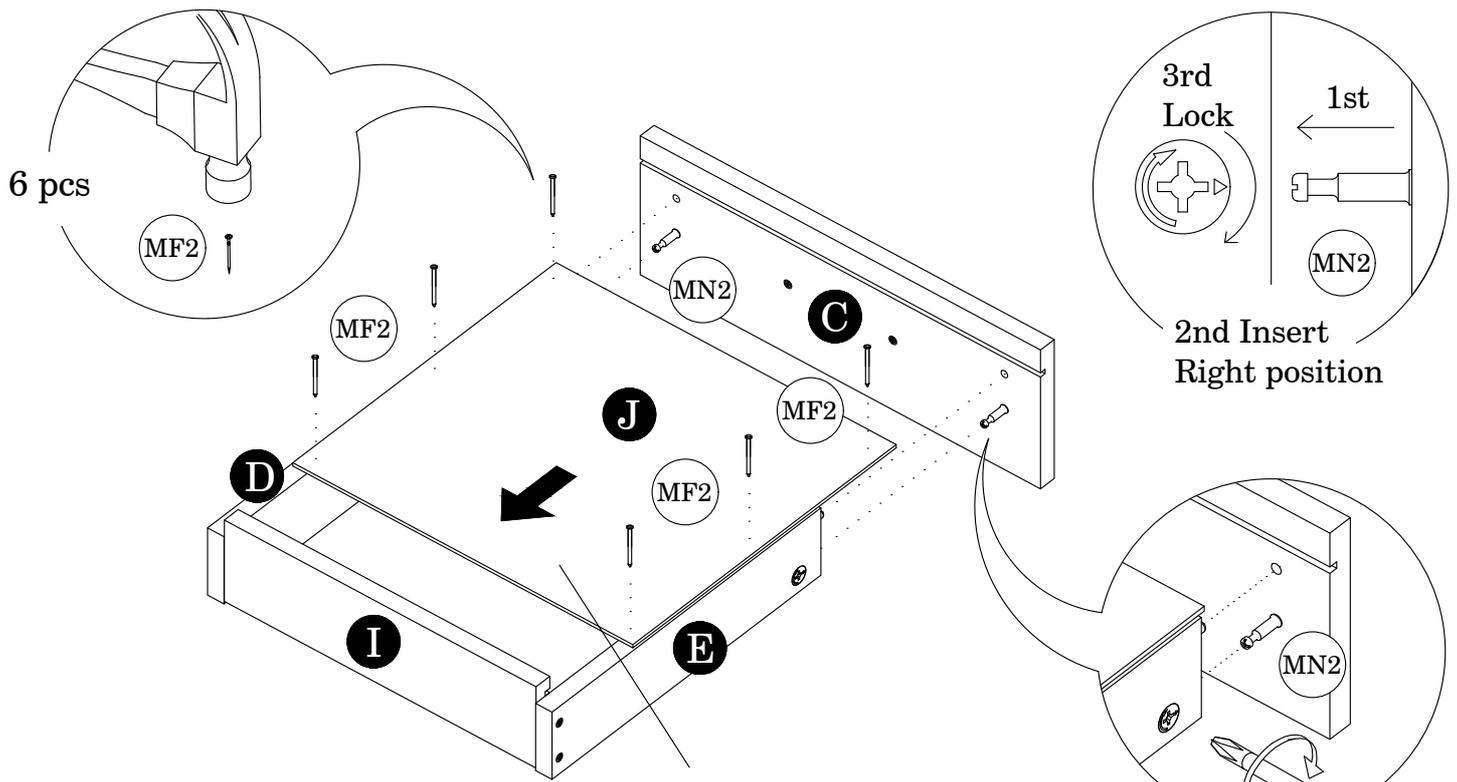


Insert and secure Panel J with MF2 before assembling Panel C.

MF2		Nail	6 (+-3)
-----	---	------	---------


STEP 4

PF2		Single Plastic Cap	2
SC3		Screw M3.5mm x 14mm	6
SL3		Drawer Metal Slide 250mm	1 Set

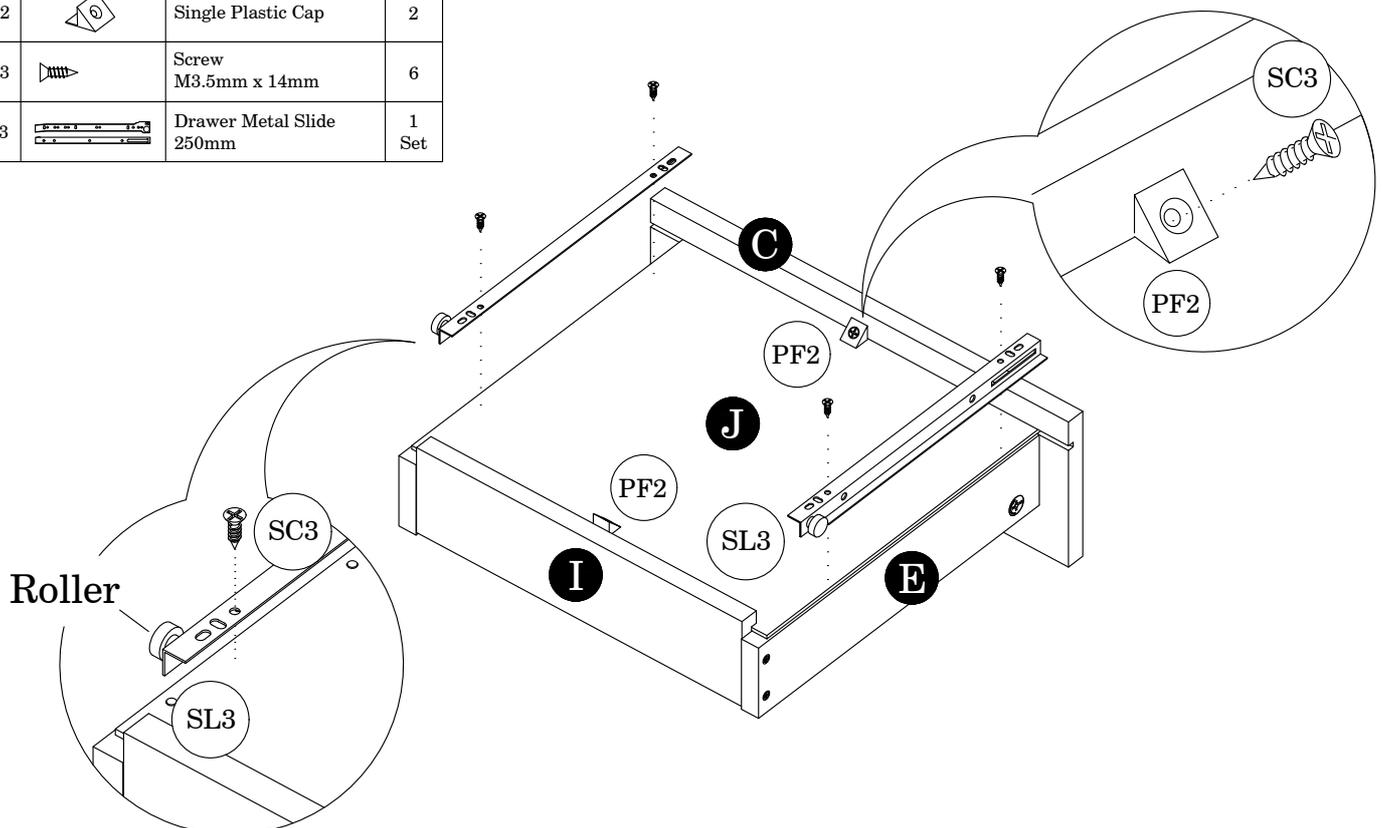


STEP 5

DW4		Wood Dowel 6 x 25mm	8
MN2		Mini Fix 15mm (Bolt)	4

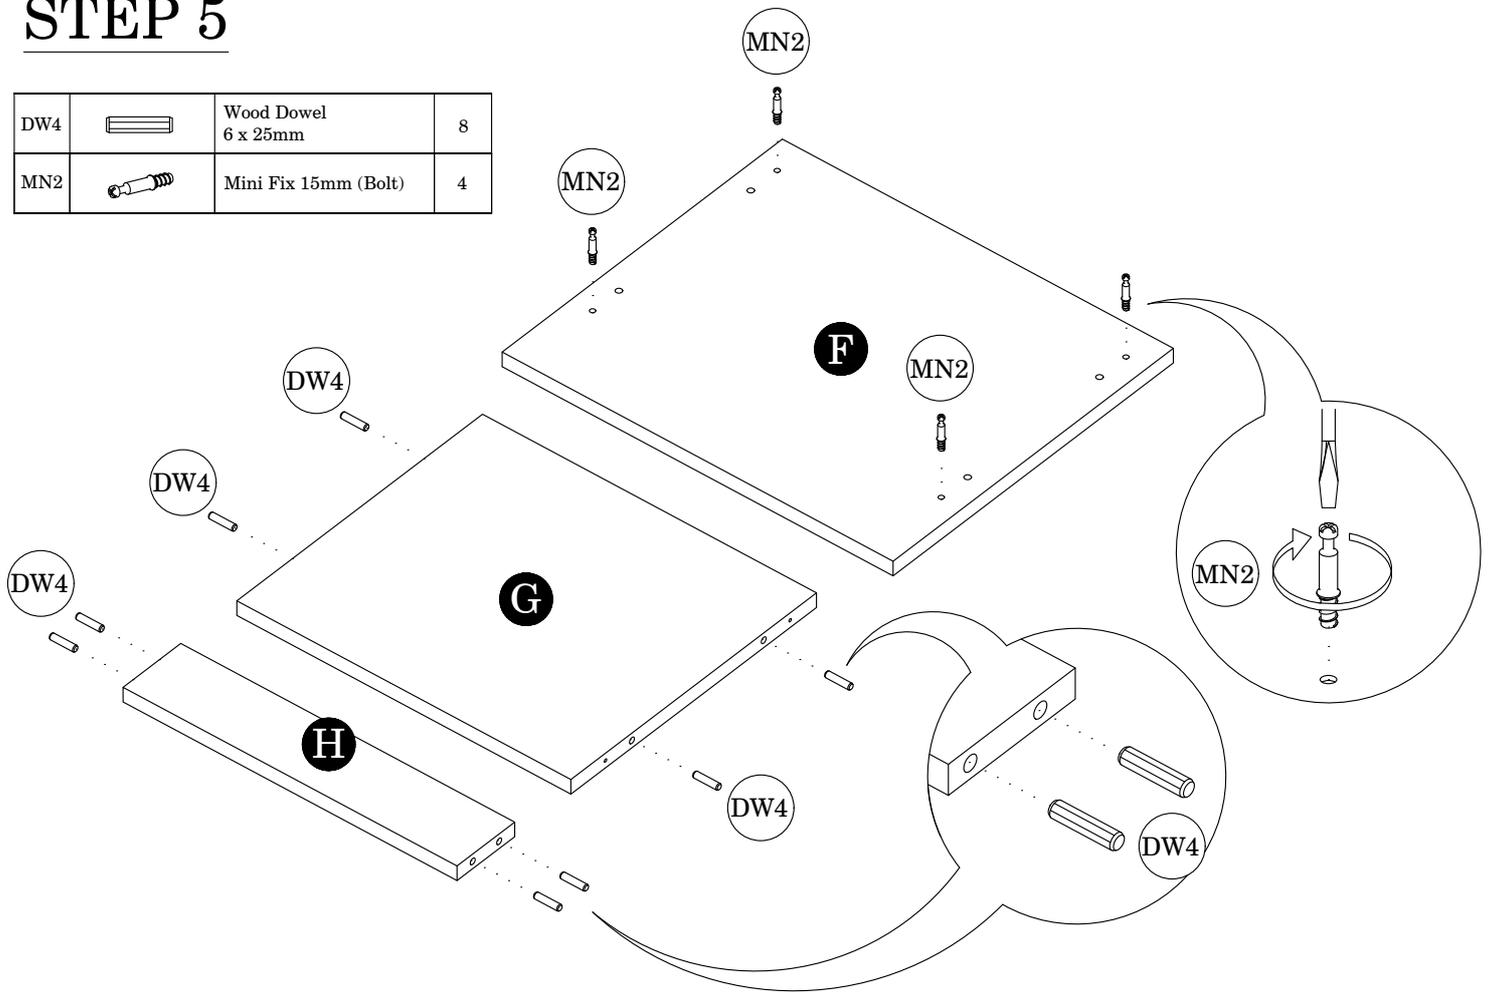


STEP 6


DW4		Wood Dowel 6 x 25mm	4
MN2		Mini Fix 15mm (Cam)	4
SC3		Screw M3.5mm x 14mm	4
SL3		Drawer Metal Slide 250mm	1 Set

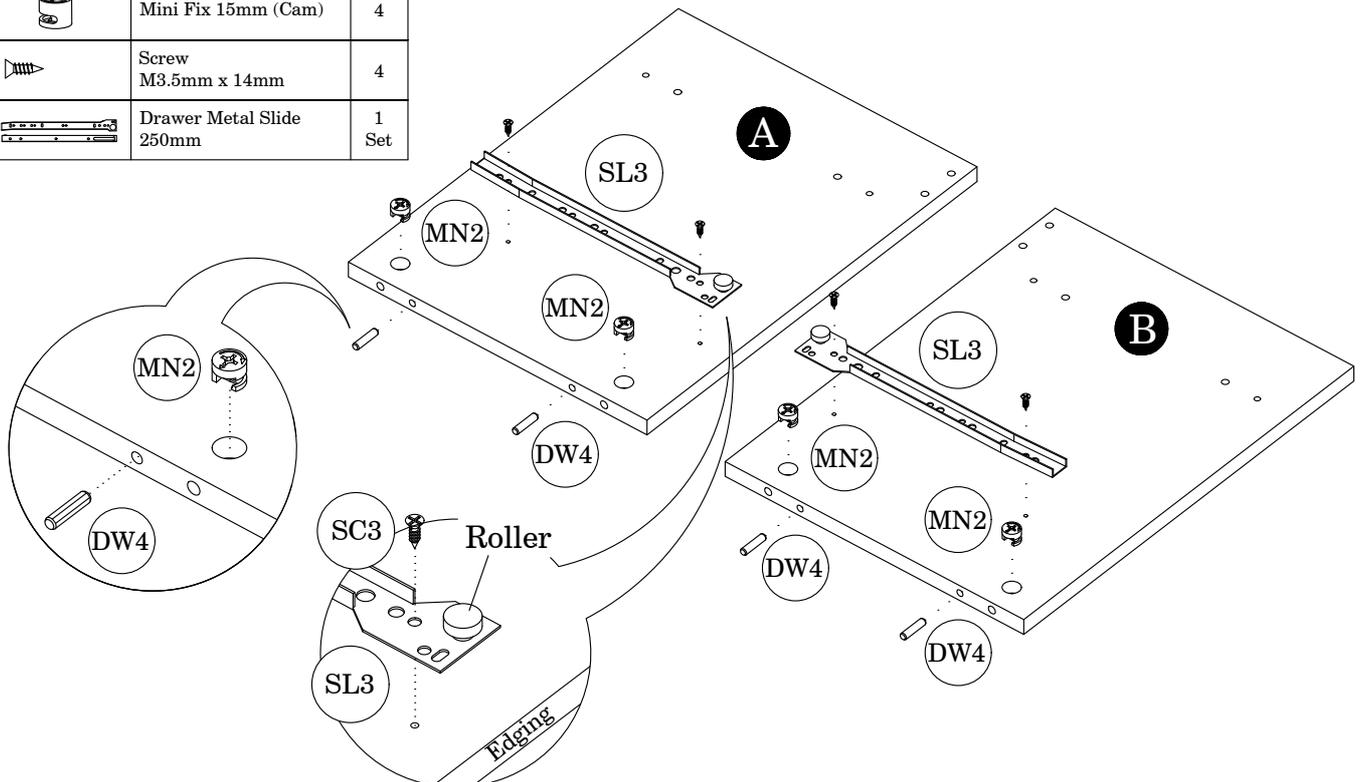


STEP 7

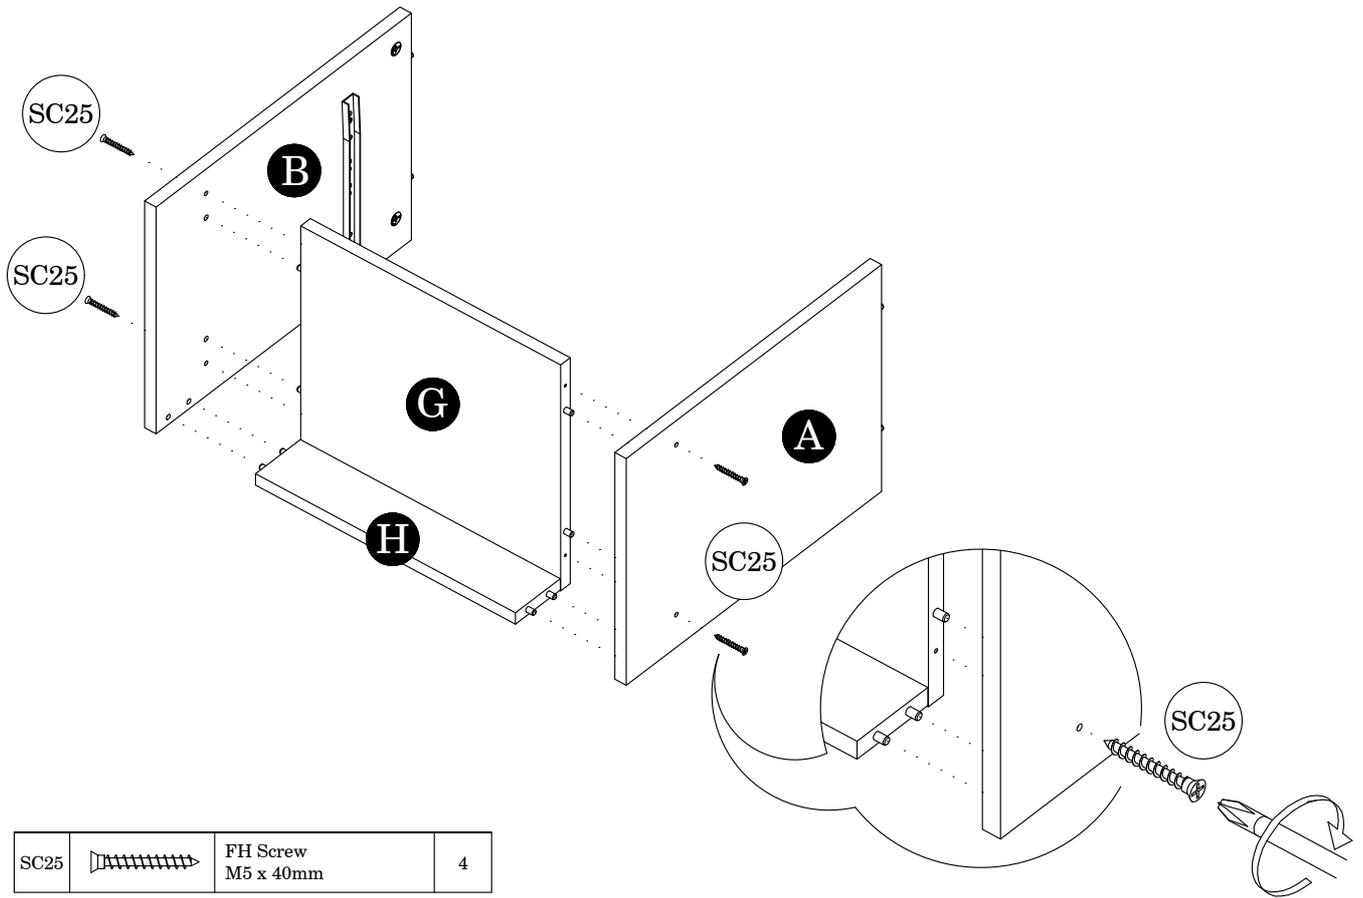

STEP 8

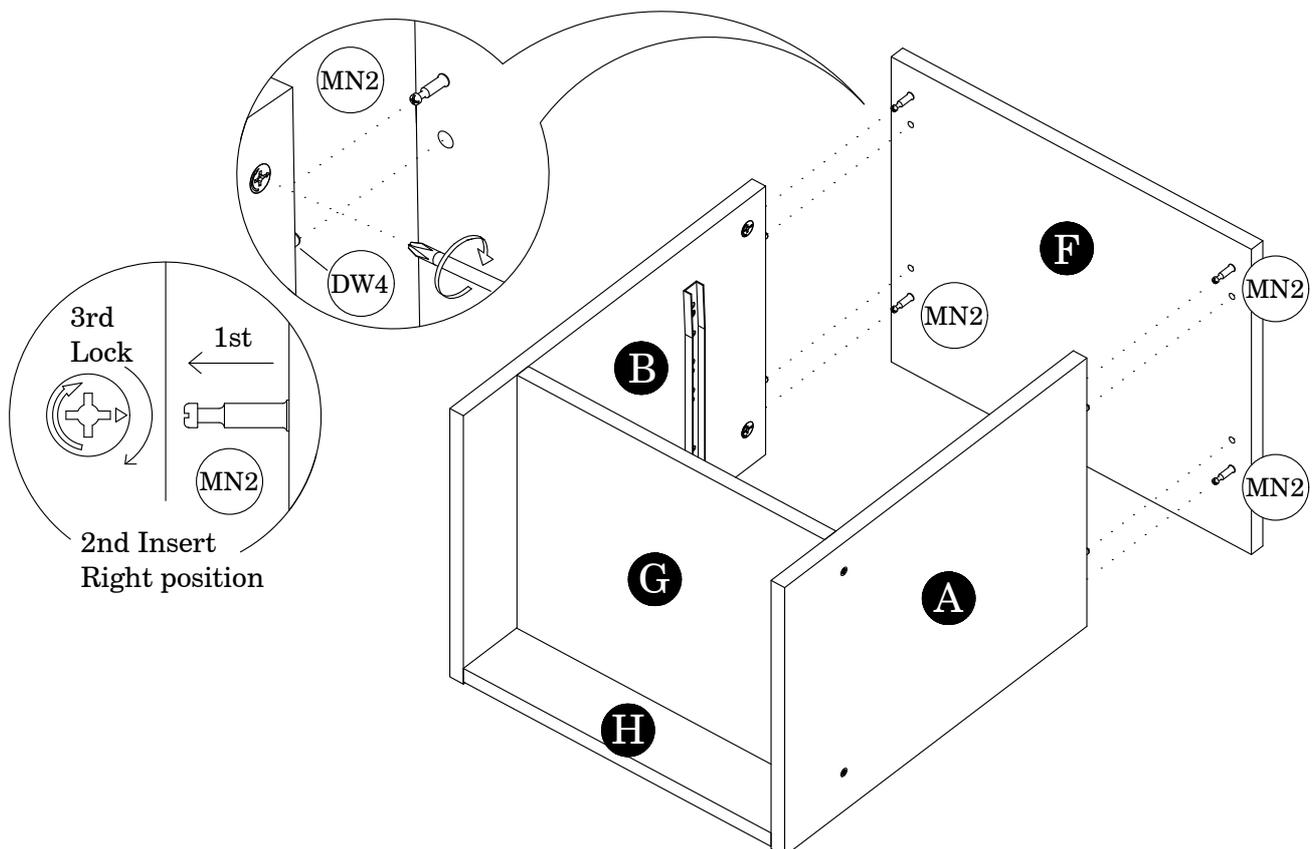

STEP 9

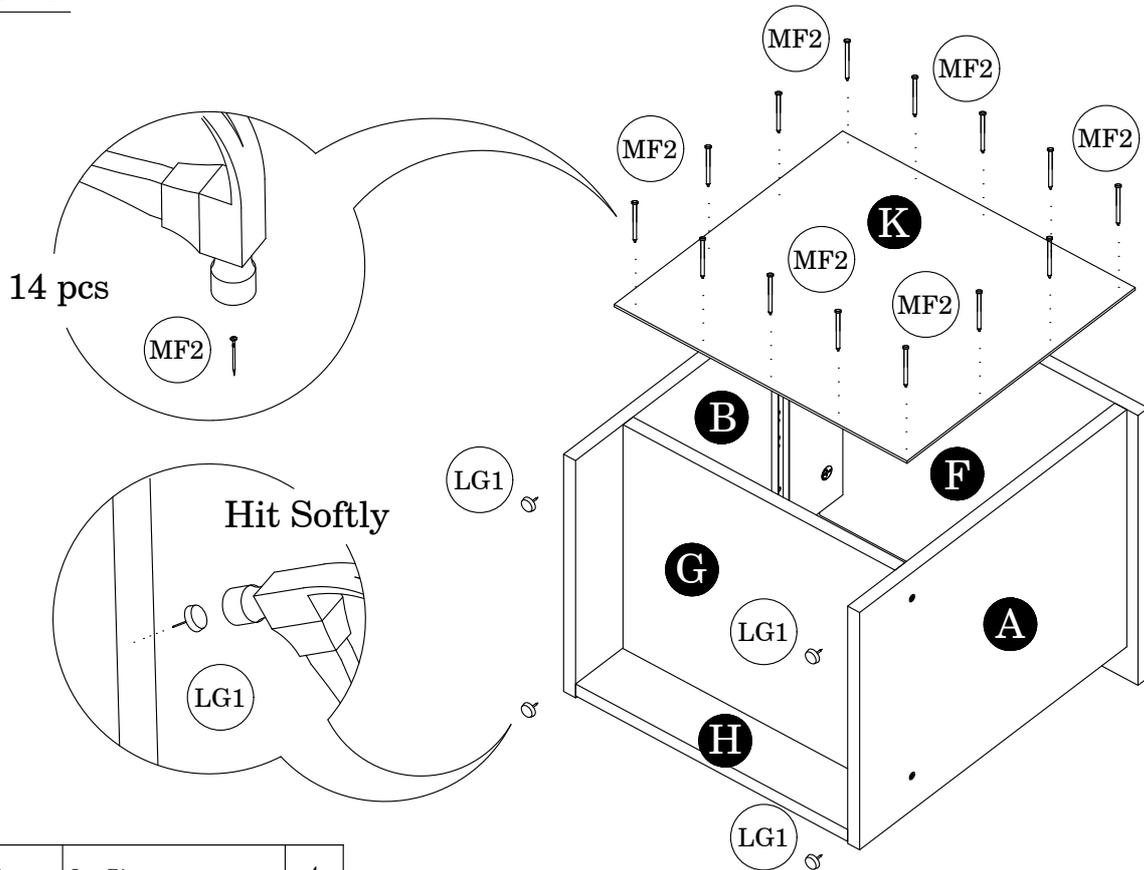

LG1		Leg Pin	4
MF2		Nail	14 (+-3)

STEP 10

