

ASSEMBLY INSTRUCTIONS

KENDY PAKOWORLD BOOKCASE ANTHRACITE


383-000123




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.

HARDWARE LIST			QTY (pcs)
DW4		Wood Dowel 6 x 25mm	28
LG1		Leg Pin	4
MF2		Nail	35 (+3)
PF11		Small L Bracket	2
SC3		Screw M3.5 x 14mm	4
SC25		FH Screw M5 x 40mm	20

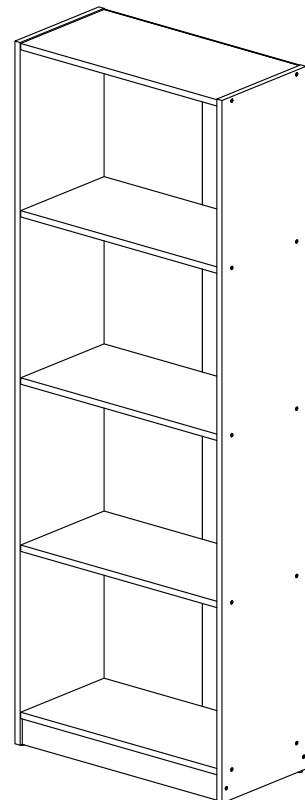


Parts List		QTY
A	Side Panel (L)	1 pc
B	Side Panel (R)	1 pc
C	Shelf Panel	5 pcs
D	Lower Panel	2 pcs
E	Backboard	2 pcs

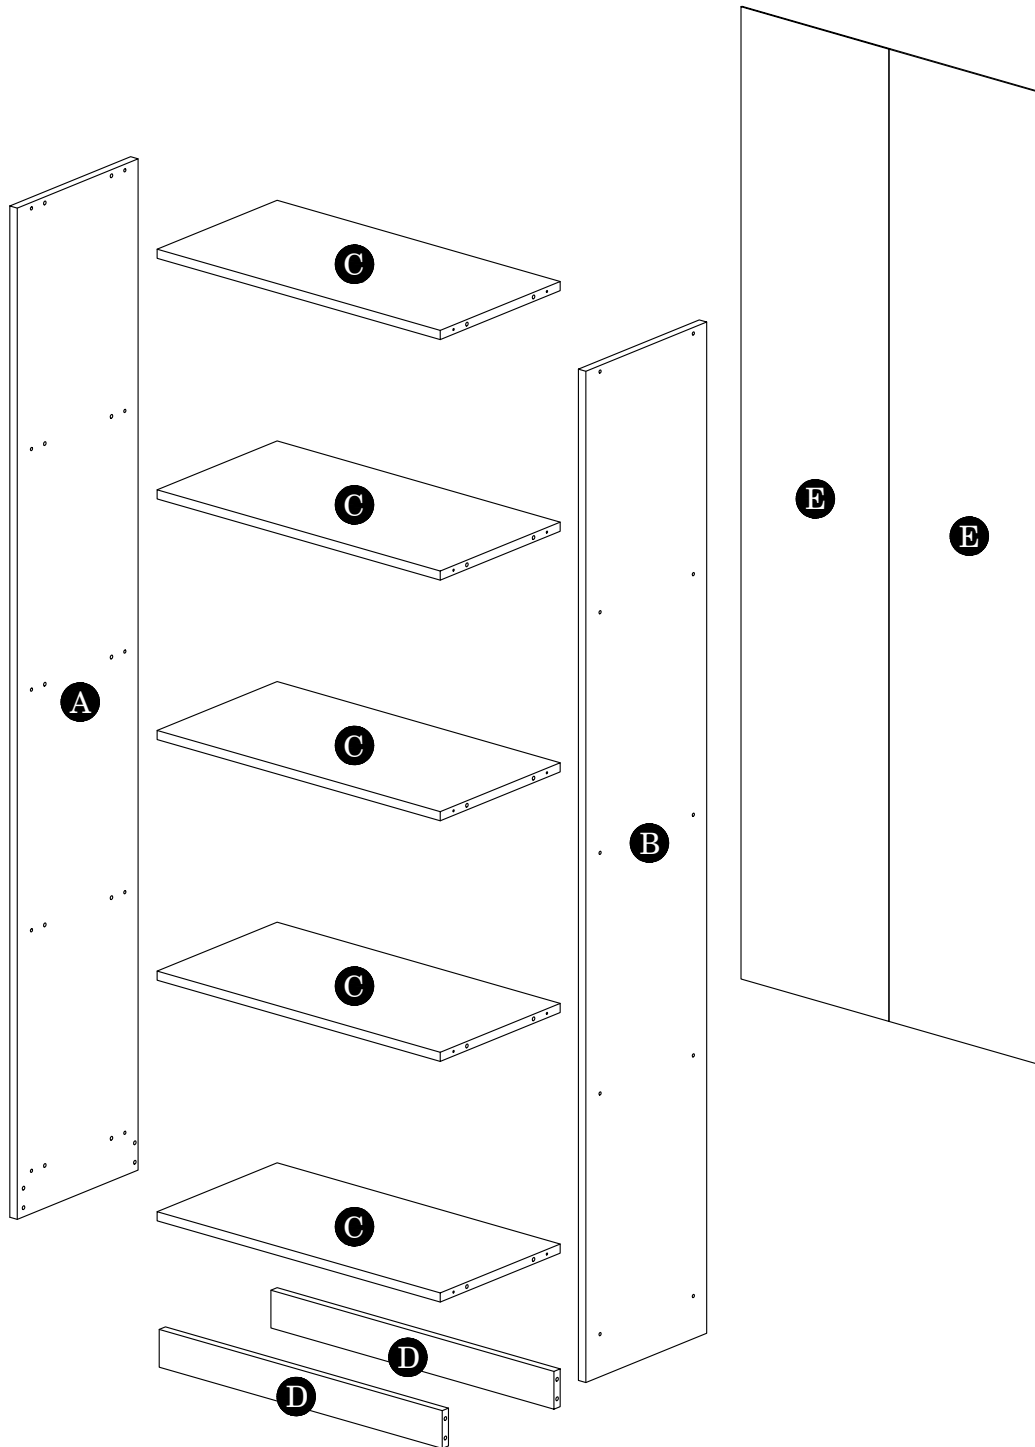



STEP 1

DW4		Wood Dowel 6 x 25mm	28
-----	---	------------------------	----

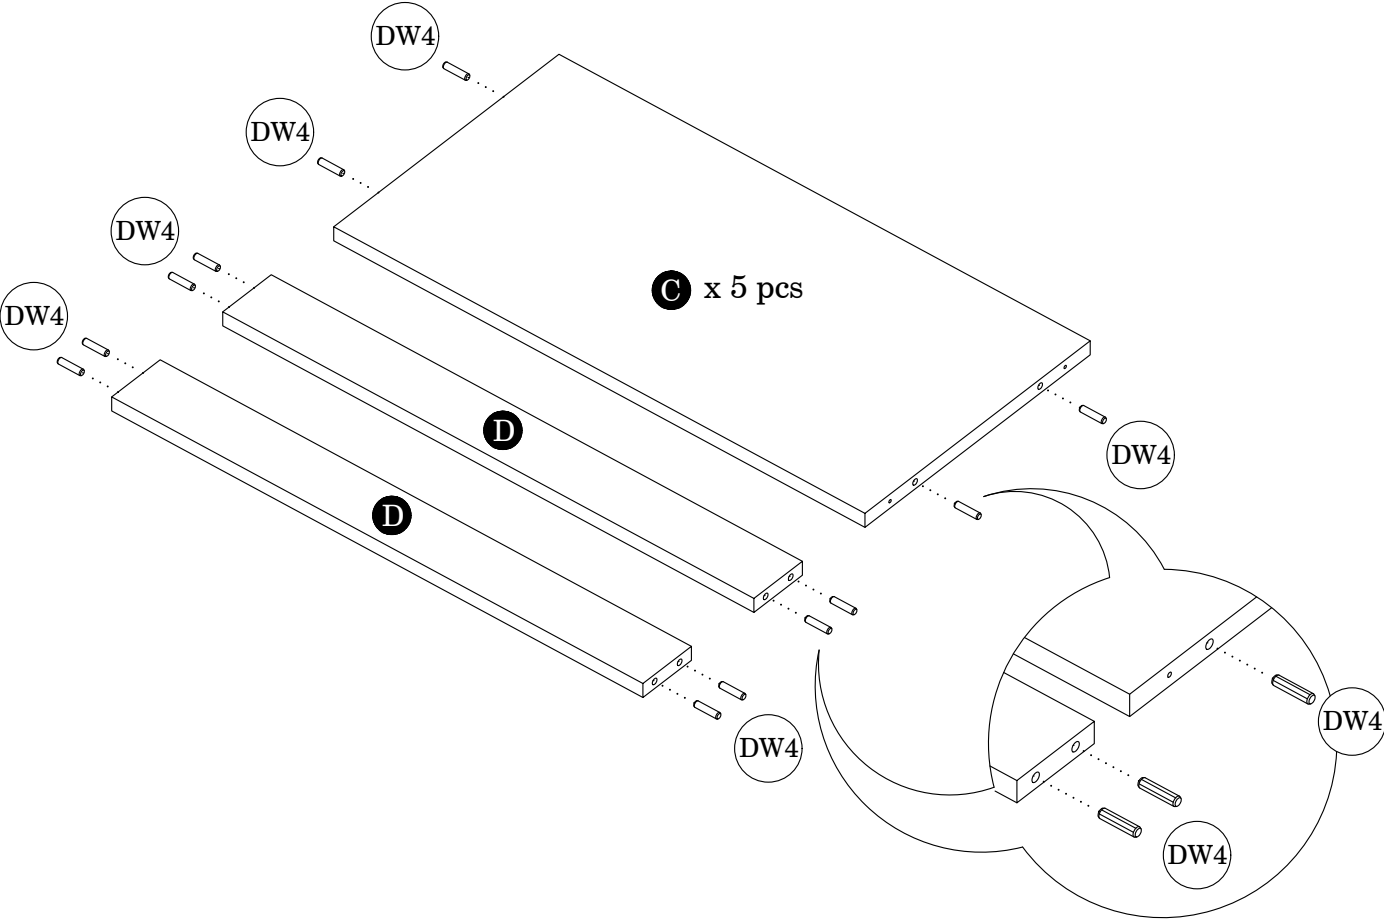


STEP 2

SC25		FH Screw M5 x 40mm	20
------	---	-----------------------	----

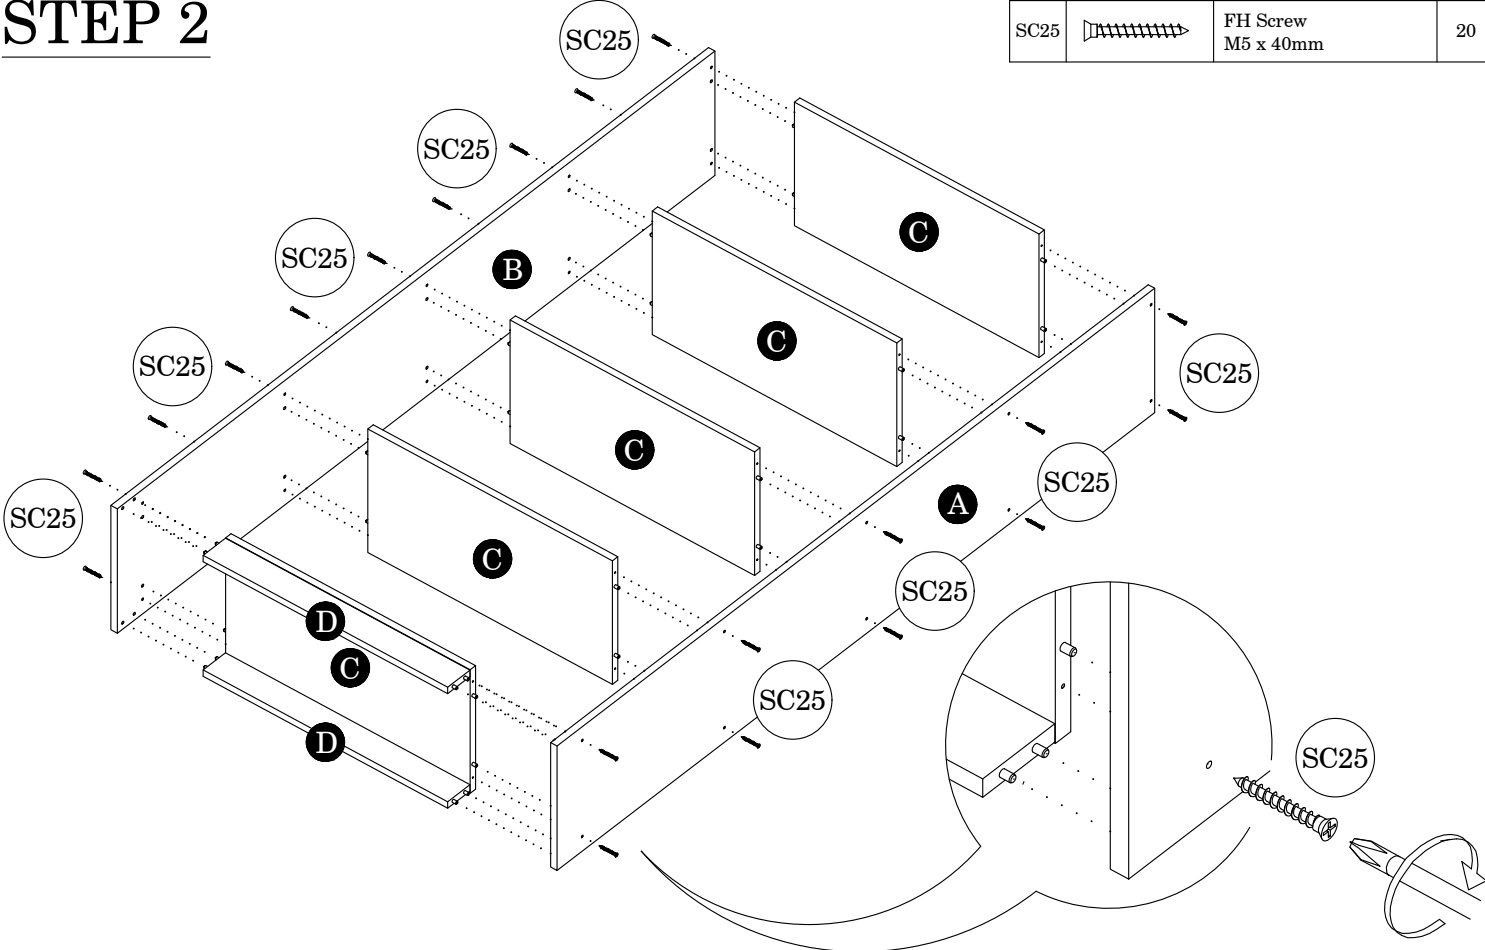


STEP 3

MF2		Nail	35 (+ -3)
-----	---	------	--------------

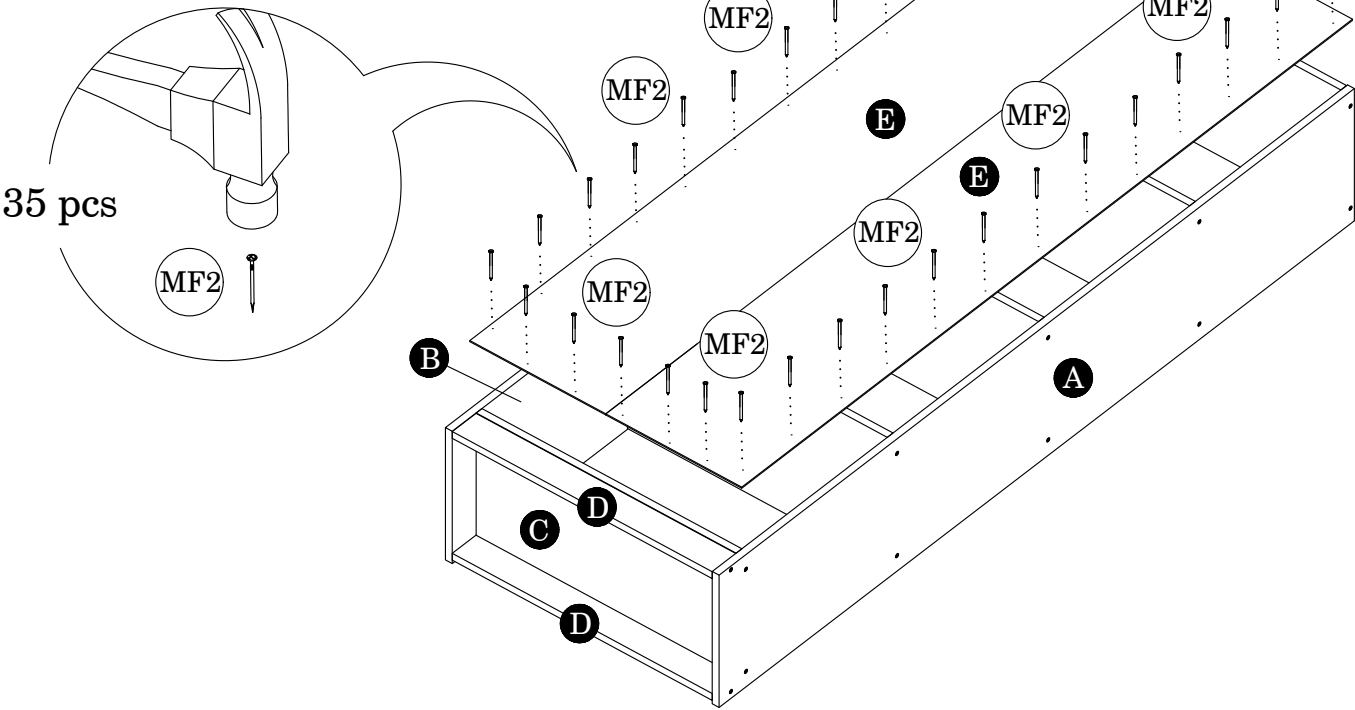

STEP 4

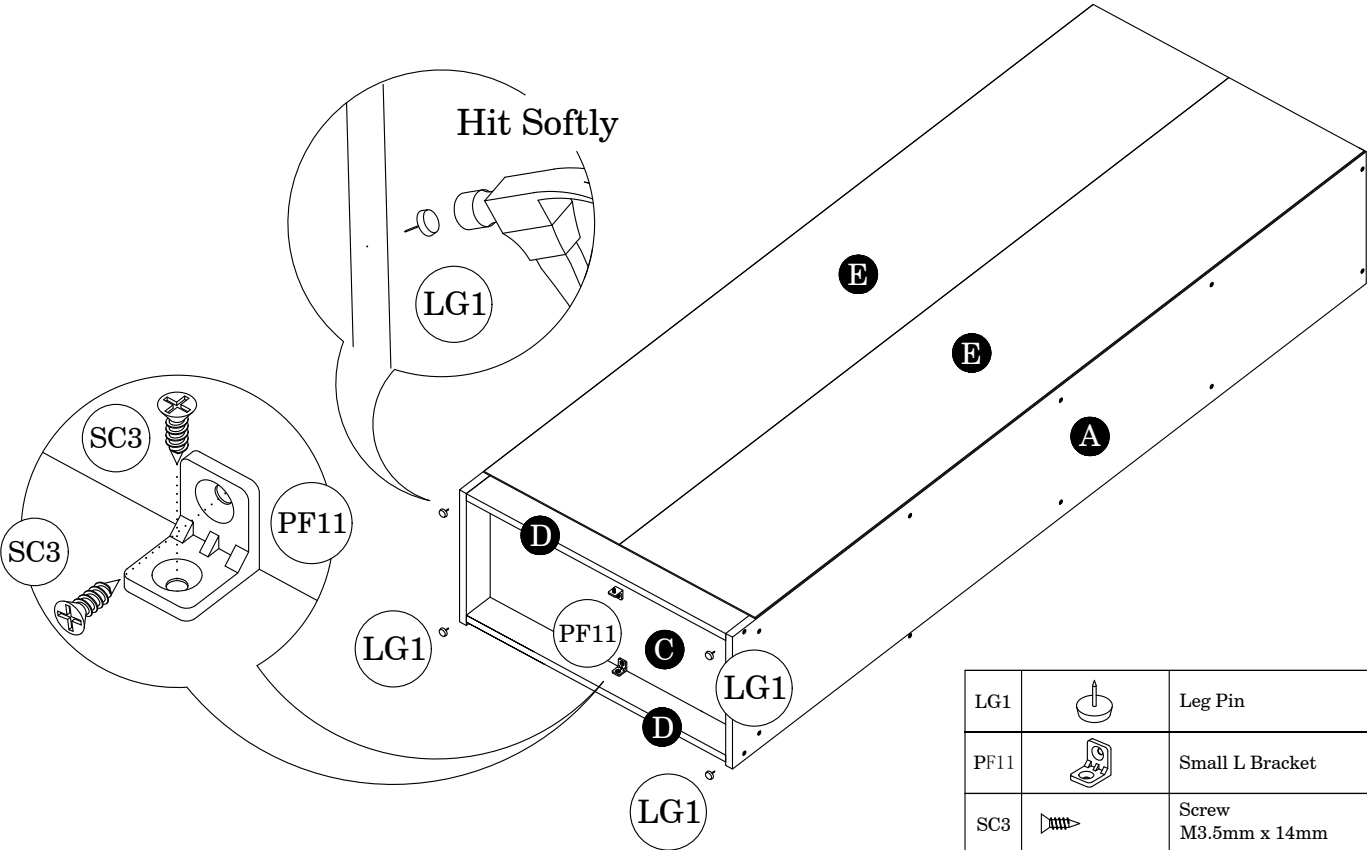

LG1		Leg Pin	4
PF11		Small L Bracket	2
SC3		Screw M3.5mm x 14mm	4